

**Gigabit Ethernet Switch**

**Software Manual**

**MS453514M**

**Release 1.0**

## Table of Contents

<i>Revision History</i> .....	<i>vi</i>
<b>INTRODUCTION</b> .....	<b>1</b>
<b>1. OPERATION OF WEB-BASED MANAGEMENT</b> .....	<b>2</b>
<b>2. FIRST TIME WIZARD</b> .....	<b>3</b>
<b>3. SYSTEM</b> .....	<b>5</b>
3-1 SYSTEM INFORMATION .....	5
3-2 IP ADDRESS .....	7
3-2.1 IP Settings .....	7
3-2.2 Advanced IP Settings .....	9
3-2.3 Status .....	12
3-3 SYSTEM TIME .....	14
3-4 LOG .....	17
3-4.1 Syslog Configuration .....	17
3-4.2 View Log .....	18
3-5 LLDP .....	20
3-5.1 LLDP Configuration .....	20
3-5.2 LLDP-MED Configuration .....	23
3-5.3 LLDP Neighbour .....	30
3-5.4 LLDP-MED Neighbour .....	32
3-5.5 LLDP Statistics .....	36
<b>4. PORT MANAGEMENT</b> .....	<b>38</b>
4-1 PORT CONFIGURATION .....	38
4-2 PORT STATISTICS .....	40
4-3 SFP PORT INFO .....	43
4-4 ENERGY EFFICIENT ETHERNET .....	45
4-5 LINK AGGREGATION .....	46
4-5.1 Port .....	46
4-5.2 Aggregator View .....	48
4-5.3 Aggregation Hash Mode .....	50
4-5.4 LACP System Priority .....	52
4-6 LOOP PROTECTION .....	53
4-6.1 Configuration .....	53
4-6.2 Status .....	55
<b>5. VLAN MANAGEMENT</b> .....	<b>57</b>
5-1 VLAN CONFIGURATION .....	57
5-2 VLAN MEMBERSHIP .....	61
5-3 VLAN PORT STATUS .....	63
5-4 VLAN SELECTIVE QINQ CONFIGURATION .....	65
5-5 MAC-BASED VLAN .....	67
5-5.1 Configuration .....	67
5-5.2 Status .....	69
5-6 PROTOCOL-BASED VLAN .....	70
5-6.1 Protocol to Group .....	70
5-6.2 Group to VLAN .....	72
5-7 IP SUBNET-BASED VLAN .....	73
5-8 PRIVATE VLAN .....	74
5-9 PORT ISOLATION .....	76
5-10 VOICE VLAN .....	77
5-10.1 Configuration .....	77
5-10.2 OUI .....	79

<b>6. QUALITY OF SERVICE .....</b>	<b>80</b>
6-1 GLOBAL SETTINGS.....	80
6-2 PORT SETTINGS .....	81
6-3 PORT POLICING.....	83
6-4 PORT SHAPER.....	84
6-5 STORM CONTROL.....	86
6-6 PORT SCHEDULER .....	87
6-7 CoS/802.1P MAPPING .....	88
6-8 CoS/802.1P REMARKING.....	89
6-9 IP PRECEDENCE MAPPING.....	90
6-10 IP PRECEDENCE REMARKING .....	91
6-11 DSCP MAPPING .....	92
6-12 DSCP REMARKING .....	93
<b>7. SPANNING TREE .....</b>	<b>94</b>
7-1 STATE.....	94
7-2 REGION CONFIG .....	96
7-3 INSTANCE VIEW .....	97
<b>8. MAC ADDRESS TABLES .....</b>	<b>104</b>
8-1 CONFIGURATION .....	104
8-2 INFORMATION.....	107
<b>9. MULTICAST .....</b>	<b>109</b>
9-1 IGMP SNOOPING .....	109
9-1.1 Basic Configuration.....	109
9-1.2 VLAN Configuration .....	112
9-1.3 Status .....	114
9-1.4 Group Information .....	116
9-1.5 IGMP SFM Information .....	118
9-2 MLD SNOOPING .....	120
9-2.1 Basic Configuration.....	121
9-2.2 VLAN Configuration .....	123
9-2.3 Status .....	125
9-2.4 Groups Information .....	127
9-2.5 MLD SFM Information .....	129
9-3 MULTICAST FILTERING PROFILE.....	131
9-3.1 Filtering Profile Table .....	131
9-3.2 Filtering Address Entry.....	134
<b>10. MVR .....</b>	<b>135</b>
10-1.1 Basic Configuration .....	135
10-1.2 Status.....	138
10-1.3 MVR Groups Information .....	139
10-1.4 MVR SFM Information .....	141
<b>11. DHCP.....</b>	<b>143</b>
11-1 SNOOPING.....	143
11-1.1 Configuration.....	143
11-1.2 Snooping Table.....	145
11-1.3 Detailed Statistics.....	147
11-2 RELAY .....	149
11-2.1 Configuration.....	149
11-2.2 Statistics.....	151
11-3 SERVER .....	153
<b>12. SECURITY .....</b>	<b>155</b>

12-1 MANAGEMENT .....	155
12-1.1 Account.....	155
12-1.2 Privilege Levels.....	157
12-1.3 Auth Method .....	159
12-1.4 Access Management .....	162
12-2 SNMP .....	164
12-2.1 Configuration.....	164
12-2.2 SNMPv3 .....	166
12-2.3 Trap Event Severity .....	176
12-3 RMON CONFIGURATION .....	177
12-3.1 Statistics.....	177
12-3.2 History.....	182
12-3.3 Alarm.....	186
12-3.4 Event .....	190
12-4 IEEE 802.1X .....	194
12-4.1 Configuration.....	194
12-4.2 Status.....	198
12-5 IP SOURCE GUARD .....	200
12-5.1 Configuration.....	200
12-5.2 Static Table .....	202
12-5.3 Dynamic Table .....	203
12-6 ARP INSPECTION .....	204
12-6.1 Configuration.....	204
12-6.2 VLAN Configuration.....	206
12-6.3 Static Table .....	207
12-6.4 Dynamic Table .....	208
12-7 PORT SECURITY.....	210
12-7.1 Configuration.....	210
12-7.2 Status.....	212
12-8 RADIUS .....	214
12-8.1 Configuration.....	214
12-8.2 Status.....	216
12-9 TACACS+.....	221
12-9.1 Configuration.....	221
<b>13. ACCESS CONTROL.....</b>	<b>223</b>
13-1 ACCESS CONTROL LIST .....	223
<b>14. EVENT NOTIFICATION .....</b>	<b>228</b>
14-1 SNMP TRAP .....	228
<b>15. DIAGNOSTICS .....</b>	<b>230</b>
15-1 PING .....	230
15-2 CABLE DIAGNOSTICS.....	231
15-3 TRACEROUTE.....	232
15-4 MIRROR.....	233
<b>16. MAINTENANCE .....</b>	<b>235</b>
16-1 CONFIGURATION.....	235
16-1.1 Save startup-config .....	235
16-1.2 Backup .....	236
16-1.3 Restore .....	237
16-1.4 Activate config .....	238
16-1.5 Delete config.....	239
16-2 RESTART DEVICE.....	240
16-3 FACTORY DEFAULTS.....	241
16-4 FIRMWARE.....	242

---

<i>16-4.1 Firmware Upgrade.....</i>	<i>242</i>
<i>16-4.2 Firmware Selection.....</i>	<i>243</i>

## Revision History

<b>Release</b>	<b>Date</b>	<b>Revision</b>
<b>Initial Release</b>	<b>2017/02/24</b>	<b>A1</b>

# INTRODUCTION

In this User Guide, it will not only tell you how to install and connect your network system but configure and monitor the MS453514M through the web. Many explanations in detail are shown as well as the examples of the operation for web-based interface.

The MS453514M is an affordable managed switch that provides a reliable infrastructure for your business network. This switch deliver more intelligent features you need to improve the availability of your critical business applications, protect your sensitive information, and optimize your network bandwidth to deliver information and applications more effectively. It provides the ideal combination of affordability and capabilities for entry level networking includes small business or enterprise application and helps you create a more efficient, better-connected workforce.

MS453514M provides 6 ports in a single device; the specification is highlighted as follows:

- L2+ features provide better manageability, security, QoS, and performance.
- Support IPv4/IPv6 dual stack management
- Support SSH/SSL secured management
- Support SNMP v1/v2c
- Support RMON groups 1,2,3,9
- Support IGMP v1/v2 Snooping
- Support MLD v1/v2 Snooping
- Support RADIUS and TACACS+ authentication
- Support IP Source Guard
- Support DHCP Relay (Option 82)
- Support DHCP Snooping
- Support 802.1d(STP), 802.1w(RSTP) and 802.1s(MSTP)
- Support LACP and static link aggregation
- Support Q-in-Q double tag VLAN
- Support GVRP dynamic VLAN

---

## Overview of this User Guide

---

- Chapter 1 "Operation of Web-based Management"
- Chapter 2 "First Time Wizard"
- Chapter 3 "System"
- Chapter 4 "Port Management"
- Chapter 5 "VLAN Management"
- Chapter 6 "Quality of Service"
- Chapter 7 "Spanning tree"
- Chapter 8 "MAC Address Tables"
- Chapter 9 "Multicast"
- Chapter 10 "MVR"
- Chapter 11 "DHCP"
- Chapter 12 "Security"
- Chapter 13 "Access Control"
- Chapter 14 "Event Notification"
- Chapter 15 "Diagnostics"
- Chapter 16 "Maintenance"

# 1. Operation of Web-based Management

## Initial Configuration

This chapter instructs you how to configure and manage the MS453514M through the web user interface. With this facility, you can easily access and monitor through any one port of the switch all the status of the switch, including MIBs status, each port activity, Spanning Tree status, port aggregation status, multicast traffic, VLAN and priority status, even illegal access record and so on.

The default values of the MS453514M are listed in the table below:

<b>IP Address</b>	192.168.1.1
<b>Subnet Mask</b>	255.255.255.0
<b>Gateway</b>	192.168.1.254
<b>Username</b>	admin
<b>Password</b>	admin

After the MS453514M has been finished configuration it interface, you can browse it. For instance, type <http://192.168.1.1> in the address row in a browser, it will show the following screen and ask you inputting username and password in order to login and access authentication.

The default username is "**admin**" and password is "**admin**". For the first time to use, please enter the default username and password, and then click the **<Login>** button. The login process now is completed. In this login menu, you have to input the complete username and password respectively.

The image shows a web-based login interface. It consists of a light gray rectangular container. Inside, there are two white input fields stacked vertically. The top field is empty. The bottom field has the word "Password" written in a light gray font. Below these fields is a solid blue rectangular button with the word "Login" written in white text.

**Figure 1: The login page**

In the MS453514M, allowed two or more users using administrator's identity to manage this switch, which administrator to do the last setting, it will be an available configuration to effect the system.



### NOTE:

When you login MS453514M series switch Web UI management, you can use both ipv4 ipv6 login to manage. To optimize the display effect, we recommend you use Microsoft IE 6.0 above, Netscape V7.1 above or Firefox V1.00 above and have the resolution 1024x768. The switch supported neutral web browser interface.



## 2. First Time Wizard

The first time you use this device you can configure some basic settings, such as password, IP address, date & time, system information.

According to the following procedure:

### Step 1: Change default password

Configure new password and enter it again.



A screenshot of the 'Change default password' web interface. It features two text input fields: 'New password' and 'Repeat new password'. Below the fields is a blue 'Next' button.

Figure 2-1: Change default password

### Step 2: Set IP address

Select "obtain IP address via DHCP" or "Set IP address manually" to set IP address.



A screenshot of the 'Set IP address' web interface. It includes a dropdown menu for 'Interface VLAN ID' with '1' selected. Below are two radio buttons: 'Obtain IP address via DHCP' (unselected) and 'Set IP address manually' (selected). Further down are three text input fields: 'IP address' (192.168.1.1), 'Subnet mask' (255.255.255.0), and 'Default router' (192.168.1.254). At the bottom are 'Previous' and 'Next' buttons.

Figure 2-2: Set IP address

**Step 3: Set date and time**

Enable “Automatic date and time” or select manually to set date and time.



The "Set date and time" configuration page. It features a title "Set date and time" at the top. Below the title is a toggle switch for "Automatic date and time", which is currently turned off. Underneath, there is a section for "Manually" with a text input field containing "2016-08-23 16:1:44" and a calendar icon to its right. At the bottom, there are two blue buttons: "Previous" and "Next".

**Figure 2-3: Set date and time**

**Step 4: Set system information**

You can set some system information to this device, such as “System contact”, “System name” or “System location”.



The "Set system information" configuration page. It features a title "Set system information" at the top. Below the title are three text input fields labeled "System contact", "System name", and "System location". At the bottom, there are two blue buttons: "Previous" and "Apply".

**Figure 2-4: Set system information**

## 3. System

This chapter describes the entire basic configuration tasks which includes the system information and any configuration of the switch (e.g. time, account, IP, Syslog or NTP.)

### 3-1 System Information

You can identify the system by configuring system name, location and the contact of the switch. The switch system's contact information is provided here.

#### Web interface

To configure system information in the web interface:

1. Click <System> and <System Information>
2. Write system name, location, contact information
3. Click <Apply>

The screenshot displays the 'System Information' page in a web interface. At the top, there is a breadcrumb trail: 'Home > System > System Information'. The main content area is a table with the following rows:

Model Name	
System Description	N-2 Port 1G Copper + 2-Port 1G SFP Web Smart Ethernet PoE Switch
Hardware Version	v1.01
Mechanical Version	v1.01
Firmware Version	v0.94.591
MAC Address	
Serial Number	C020316AR5100013
System Name	<input type="text"/>
Location	<input type="text"/>
Contact	<input type="text"/>
System Date	2016-01-01 00:00:33 +0000
System Uptime	0 days, 0:00:45

At the bottom of the form, there are two buttons: 'Apply' and 'Reset'.

Figure 3-1: System Information

#### Parameter description

- **Model Name**  
Displays the factory defined model name for identification purpose.
- **System Description**  
Displays the system description.
- **Hardware-Mechanical Version**  
The hardware and mechanical version of this switch.
- **Firmware Version**  
The software version of this switch.
- **MAC Address**  
The MAC Address of this switch.

- **Series Number**

The serial number of this switch.

- **System name**

An administratively assigned name for this managed node. By convention, this is the node's fully-qualified domain name. A domain name is a text string drawn from the alphabet (A-Z, a-z), digits (0-9), minus sign (-). No space characters are permitted as part of a name. The first character must be an alpha character. The first or last character must not be a minus sign. The allowed string length is 0 to 128.

- **Location**

The physical location of this node (e.g., telephone closet, 3rd floor). The allowed string length is 0 to 128, and the allowed content is the ASCII characters from 32 to 127.

- **Contact**

The textual identification of the contact person for this managed node, together with information on how to contact this person. The allowed string length is 0 to 128, and the allowed content is the ASCII characters from 32 to 126.

- **System Date**

The current (GMT) system time and date. The system time is obtained through the timing server running on the switch, if any.

- **System Uptime**

The period of time the device has been operational.

## 3-2 IP Address

### 3-2.1 IP Settings

The IPv4 address for the switch could be obtained via DHCP Server for VLAN 1. To manually configure an address, you need to change the switch's default settings to values that are compatible with your network. You may also need to establish a default gateway between the switch and management stations that exist on another network segment.

#### Web Interface

To configure IP settings in the web interface:

1. Click <System>, <IP Address> and <IP Settings>
2. Enable or disable the IPv4 DHCP client.
3. Specify the IPv4 address, subnet mask and gateway
4. Select DNS server.
5. Click <Apply>

IP Settings	
IPv4 DHCP Client Enable	<input type="checkbox"/>
IPv4 Address	<input type="text" value="192.168.1.1"/>
Subnet Mask	<input type="text" value="255.255.255.0"/>
Gateway	<input type="text" value="192.168.1.254"/>
DNS Server	<input type="text" value="No DNS server"/>

**Figure 3-2.1: The IP settings**

#### Parameter description

- **IPv4 DHCP Client Enable**

Enable the DHCP client by checking this box. If this option is enabled, the system will configure the IPv4 address and mask of the interface using the DHCP protocol. The DHCP client will announce the configured System Name as hostname to provide DNS lookup.

- **IPv4 Address**

The IPv4 address of the interface in dotted decimal notation. If DHCP is enabled, this field is not used. The field may also be left blank if IPv4 operation on the interface is not desired.

- **Subnet Mask**

User IP subnet mask of the entry.

- **Gateway**

The IP address of the gateway. Valid format is dotted decimal notation or a valid IPv6 notation. Gateway and network must be of the same type.

---

- **DNS Server**

This setting controls the DNS name resolution done by the switch. The following modes are supported:

- **No DNS server**  
No DNS server will be used.
- **Configured**  
Explicitly provide the IP address of the DNS server in dotted decimal notation.
- **From this DHCP interface**  
Specify from which DHCP-enabled interface a provided DNS server should be preferred.
- **From any DHCP interfaces**  
The first DNS server offered from a DHCP lease to a DHCP-enabled interface will be used.

**Buttons**

- **Apply**

Click to save changes.

## 3-2.2 Advanced IP Settings

Configure the switch-managed IP information on this page.

Configure IP basic settings, control IP interfaces and IP routes.

The maximum number of interfaces supported is 8 and the maximum number of routes is 8.

### Web Interface

To configure advanced IP settings in the web interface:

1. Click <System>, <IP Address> and <Advanced IP Settings>
2. Click <Add Interface> then you can create new interface on the switch.
3. Click <Add Route> then you can create new route on the switch
4. Click <Apply>

Advanced IP Settings Home > System > IP Address > Advanced IP Settings

---

DNS Server

No DNS server

---

IP Interfaces

Delete	VLAN	DHCPv4			IPv4		IPv6	
		Enable	Fallback	Current Lease	Address	Mask Length	Address	Mask Length
<input type="checkbox"/>	1	<input type="checkbox"/>	0		192.168.1.1	24		

Add Interface

---

IP Routes

Delete	Network	Mask Length	Gateway	Next Hop VLAN
<input type="checkbox"/>	0.0.0.0	0	192.168.1.254	0

Add Route

Apply

Reset

**Figure 3-2.2: The advanced IP settings**

### Parameter description

#### IP Configuration

##### ● DNS Server

This setting controls the DNS name resolution done by the switch. The following modes are supported:

- No DNS server  
No DNS server will be used.
- Configured  
Explicitly provide the IP address of the DNS server in dotted decimal notation.
- From this DHCP interface  
Specify from which DHCP-enabled interface a provided DNS server should be preferred.
- From any DHCP interfaces  
The first DNS server offered from a DHCP lease to a DHCP-enabled interface will be used.

## **IP Interfaces**

- **Delete**

Select this option to delete an existing IP interface.

- **VLAN**

The VLAN associated with the IP interface. Only ports in this VLAN will be able to access the IP interface. This field is only available for input when creating a new interface.

- **IPv4 DHCP Enabled**

Enable the DHCP client by checking this box. If this option is enabled, the system will configure the IPv4 address and mask of the interface using the DHCP protocol. The DHCP client will announce the configured system name as hostname to provide DNS lookup.

- **IPv4 DHCP Fallback Timeout**

The number of seconds for trying to obtain a DHCP lease. After this period expires, a configured IPv4 address will be used as IPv4 interface address. A value of zero disables the fallback mechanism, such that DHCP will keep retrying until a valid lease is obtained. Legal values are 0 to 4294967295 seconds.

- **IPv4 DHCP Current Lease**

For DHCP interfaces with an active lease, this column show the current interface address, as provided by the DHCP server.

- **IPv4 Address**

The IPv4 address of the interface in dotted decimal notation.  
If DHCP is enabled, this field is not used. The field may also be left blank if IPv4 operation on the interface is not desired.

- **IPv4 Mask**

The IPv4 network mask, in number of bits (prefix length). Valid values are between 0 and 30 bits for a IPv4 address.  
If DHCP is enabled, this field is not used. The field may also be left blank if IPv4 operation on the interface is not desired.

- **IPv6 Address**

The IPv6 address of the interface. A IPv6 address is in 128-bit records represented as eight fields of up to four hexadecimal digits with a colon separating each field (:). For example, fe80::215:c5ff:fe03:4dc7. The symbol :: is a special syntax that can be used as a shorthand way of representing multiple 16-bit groups of contiguous zeros; but it can appear only once. It can also represent a legally valid IPv4 address. For example, ::192.1.2.34.  
The field may be left blank if IPv6 operation on the interface is not desired.

- **IPv6 Mask**

The IPv6 network mask, in number of bits (prefix length). Valid values are between 1 and 128 bits for a IPv6 address.  
The field may be left blank if IPv6 operation on the interface is not desired.

## **IP Routes**

- **Delete**

Select this option to delete an existing IP route.

- **Network**

The destination IP network or host address of this route. Valid format is dotted decimal notation or a valid IPv6 notation. A default route can use the value 0.0.0.0 or IPv6 :: notation.



- **Mask Length**

The destination IP network or host mask, in number of bits (prefix length). It defines how much of a network address that must match, in order to qualify for this route. Valid values are between 0 and 32 bits respectively 128 for IPv6 routes. Only a default route will have a mask length of 0 (as it will match anything).

- **Gateway**

The IP address of the IP gateway. Valid format is dotted decimal notation or a valid IPv6 notation. Gateway and network must be of the same type.

- **Next Hop VLAN (Only for IPv6)**

The VLAN ID (VID) of the specific IPv6 interface associated with the gateway. The given VID ranges from 1 to 4094 and will be effective only when the corresponding IPv6 interface is valid.

If the IPv6 gateway address is link-local, it must specify the next hop VLAN for the gateway.

If the IPv6 gateway address is not link-local, system ignores the next hop VLAN for the gateway.

### **Buttons**

- **Add Interface**

Click to add a new IP interface. A maximum of 8 interfaces is supported.

- **Add Route**

Click to add a new IP route. A maximum of 8 routes is supported.

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

### 3-2.3 Status

This page displays the status of the IP protocol layer. The status is defined by the IP interfaces, the IP routes and the neighbour cache (ARP cache) status.

#### Web Interface

To display the log configuration in the web interface:

1. Click <System>, <IP Address> and <Status>
2. Display the <IP Configuration> information

IP Status

Home

System

IP Address

Status

Auto-refresh

off

Refresh

IP Interfaces

Interface	Type	Address	Status
OS:lo	Link	00-00-00-00-00-00	UP LOOPBACK RUNNING MTU:16436 Metric:1
OS:lo	IPv4	127.0.0.1/8	
OS:lo	IPv6	::1/128	
VLAN1	Link		UP BROADCAST RUNNING MULTICAST MTU:1500 Metric:1
VLAN1	IPv4	192.168.1.1/24	Manual
VLAN1	IPv6	fe80::240:c7ff:fe14:1084/64	

IP Routes

Network	Gateway	Status	Interface
127.0.0.0/24	0.0.0.0	UP	OS:lo
192.168.1.0/24	0.0.0.0	UP	VLAN1
::1/128	::	UP	OS:lo
fe80::/64	::	UP	VLAN1
fe80::2e0:4cff:fe00:0/128	::	UP	OS:lo
ff00::/8	::	UP	VLAN1

Neighbour Cache

IP Address	Link Address

DNS Server

Type	IP Address	Interface
None	0.0.0.0	

**Figure 3-2.3: The IP Status**

#### Parameter description

##### IP Interfaces

##### ● Interface

Show the name of the interface.

- **Type**

Show the address type of the entry. This may be LINK or IPv4.

- **Address**

Show the current address of the interface (of the given type).

- **Status**

Show the status flags of the interface (and/or address).

**IP Routes**

- **Network**

Show the destination IP network or host address of this route.

- **Gateway**

Show the gateway address of this route.

- **Status**

Show the status flags of the route.

- **Interface**

Show the name of the interface.

**Neighbour cache**

- **IP Address**

Show the IP address of the entry.

- **Link Address**

Show the Link (MAC) address for which a binding to the IP address given exist.

**DNS Server**

- **Type**

Show the address type of the entry. This may be LINK or IPv4.

- **IP Address**

Show the current address of the interface (of the given type).

- **Interface**

Show the name of the interface.

**Buttons**



**Figure 3-2.3: The IP Status buttons**

- **Auto-refresh**

Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.

- **Refresh**

Click to refresh the page immediately.

### 3-3 System Time

The switch provides manual and automatic ways to set the system time via NTP. Manual setting is simple and you just input "Year", "Month", "Day", "Hour" and "Minute" within the valid value range indicated in each item.

#### Web Interface

To configure Time in the web interface:

1. Click <System> and <System Time>
2. Specify the time parameter
3. Click <Apply>

Time Configuration Home > System > System Time

Time Configuration

Clock Source

Local Settings ▼

Configure NTP Server

System Date

2000-01-01 18:24:01

(yyyy-mm-dd hh:mm:ss)

Time Zone Configuration

Time Zone

None ▼

Acronym

(0 - 16 characters)

Daylight Saving Time Configuration

Daylight Saving Time

off

Start Time settings

Month

Jan ▼

Week

1 ▼

Day

Mon ▼

Hours

0 ▼

End Time settings

Month

Jan ▼

Week

1 ▼

Day

Mon ▼

Hours

0 ▼

Offset settings

Offset

60

(1 - 1440) Minutes

Apply

Reset

**Figure 3-3.1: The time configuration**

#### Parameter description

##### Time Configuration

##### ● Clock Source

There are two modes for configuring how the Clock Source from. Select "Local Settings": Clock Source from Local Time. Select "NTP Server": Clock Source from NTP Server.

- **System Date**

Show the current time of the system. The year of system date limits between 2000 and 2037.

### **Time Zone Configuration**

- **Time Zone**

Lists various time zones worldwide. Select appropriate time zone from the drop down and click "Apply" to set.

- **Acronym**

User can set the acronym of the time zone. This is a user configurable acronym to identify the time zone. (Range: Up to 16 characters)

### **Daylight Saving Time Configuration**

- **Daylight Saving Time**

This is used to set the clock forward or backward according to the configurations set below for a defined Daylight Saving Time duration. Select "Disable" to disable the Daylight Saving Time configuration. Select "Recurring" and configure the Daylight Saving Time duration to repeat the configuration every year. Select "Non-Recurring" and configure the Daylight Saving Time duration for single time configuration. (Default: Disabled).

### **Recurring Configuration**

- **Start time settings**

Week - Select the starting week number.

Day - Select the starting day.

Month - Select the starting month.

Hours - Select the starting hour.

- **End time settings**

Week - Select the ending week number.

Day - Select the ending day.

Month - Select the ending month.

Hours - Select the ending hour.

- **Offset settings**

Offset - Enter the number of minutes to add during Daylight Saving Time. (Range: 1 to 1440)



**NOTE:** The under "Start Time Settings" and "End Time Settings" was displayed what you set on the "Start Time Settings" and "End Time Settings" field information.


### **Buttons**

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

 

**Figure 3-3.2: The Configure NTP Server button**

## ● **Configure NTP Server**

Click to configure NTP server, when clock source select from NTP Server.

SNTP Configuration Home > System > System Time

Server 1	<input type="text"/>
Server 2	<input type="text"/>
Server 3	<input type="text"/>
Server 4	<input type="text"/>
Server 5	<input type="text"/>
Server 6	<input type="text"/>
Interval	<input type="text" value="1440"/> (10-2880 min)

**Figure 3-3.3: The SNTP configuration**

NTP is Network Time Protocol and is used to sync the network time based Greenwich Mean Time (GMT). If use the NTP mode and select a built-in NTP time server or manually specify an user-defined NTP server as well as Time Zone, the switch will sync the time in a short after pressing "Apply" button. Though it synchronizes the time automatically, NTP does not update the time periodically without user's processing.

Time Zone is an offset time of GMT. You have to select the time zone first and then perform time sync via NTP because the switch will combine this time zone offset and updated NTP time to come out the local time, otherwise, you will not able to get the correct time. The switch supports configurable time zone from -12 to +13 step 1 hour.

Default Time zone: +8 Hrs.

## **Parameter description**

### ● **Server 1 to 6**

Provide the NTP IPv4 or IPv6 address of this switch. IPv6 address is in 128-bit records represented as eight fields of up to four hexadecimal digits with a colon separating each field (:). For example, 'fe80::215:c5ff:fe03:4dc7'. The symbol '::' is a special syntax that can be used as a shorthand way of representing multiple 16-bit groups of contiguous zeros; but it can only appear once. It can also represent a legally valid IPv4 address. For example, '::192.1.2.34'.

### ● **Interval**

You can specify the time interval in seconds after which a time check and, in case of deviation, a resynchronization of the internal device clock against the specified timeserver via Network Time Protocol (NTP) should be performed.

## **Buttons**

These buttons are displayed on the SNTP page:

### ● **Apply**

Click to save changes.

### ● **Reset**

Click to undo any changes made locally and revert to previously saved values.

## 3-4 Log

### 3-4.1 Syslog Configuration

The Syslog Configuration is a standard for logging program messages . It allows separation of the software that generates messages from the system that stores them and the software that reports and analyzes them. It can be used as well a generalized informational, analysis and debugging messages. It is supported by a wide variety of devices and receivers across multiple platforms.

#### Web Interface

To configure Syslog Configuration in the web interface:

1. Click <System>, <Log> and <Syslog Configuration>
2. Specify the syslog parameters include IP address of syslog server and port number
3. Evoke the <Syslog> to enable it
4. Click <Apply>

Mode	
Server 1	<input type="text"/>
Server 2	<input type="text"/>
Server 3	<input type="text"/>
Server 4	<input type="text"/>
Server 5	<input type="text"/>
Server 6	<input type="text"/>

Apply Reset

**Figure 3-4.1: The System Log configuration**

#### Parameter description

- **Mode**

Indicate the server mode operation. When the mode operation is enabled, the syslog message will send out to syslog server. The syslog protocol is based on UDP communication and received on UDP port 514 and the syslog server will not send acknowledgments back sender since UDP is a connectionless protocol and it does not provide acknowledgments. The syslog packet will always send out even if the syslog server does not exist. Possible modes are on (server enabled and off (server disabled).

- **Server 1 to 6**

Indicates the IPv4 hosts address of syslog server. If the switch provide DNS feature, it also can be a host name.

#### Buttons

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

### 3-4.2 View Log

This section describes that display the system log information of the switch

#### Web Interface

To display the log information in the web interface:

1. Click <System>, <Log> and <View Log>
2. Display the log information

System Log Information Home > System > Log > View Log

[Refresh](#) [Clear Logs](#)

Show  entries Search:

ID	Level	Time	Message
1	Warning	2001-01-02 01:59:59	Bad password attempt for user 'admin' and authenticated by Web
2	Warning	2001-01-02 02:00:03	Bad password attempt for user "" and authenticated by Web
3	Warning	2001-01-02 02:00:04	Bad password attempt for user "" and authenticated by Web
4	Info	2001-01-02 02:00:08	Login passed for user 'admin'

Showing 1 to 4 of 4 entries Previous **1** Next

**Figure 3-4.2: The System Log Information**

#### Parameter description

- **ID**

ID ( $\geq 1$ ) of the system log entry.

- **Level**

Level of the system log entry. The following level types are supported:

**Debug:** debug level message

**Info:** informational message

**Notice:** normal, but significant, condition

**Warning:** warning condition

**Error:** error condition

**Crit. :** critical condition

**Alert:** action must be taken immediately

**Emerg:** system is unusable

- **Time**

It will display the log record by device time. The time of the system log entry.

- **Message**

It will display the log detail message. The message of the system log entry.

- **Search**

You can search for the information that you want to see.

- **Show entries**

You can choose how many items you want to show.



**Buttons**

- **Refresh**

Updates the system log entries, starting from the current entry ID.

- **Clear Logs**

Clear all the system log entries.

- **Next**

Updates the system log entries, turn to the next page.

- **Previous**

Updates the system log entries, turn to the previous page.

## 3-5 LLDP

The switch supports the LLDP. For current information on your switch model, The Link Layer Discovery Protocol (LLDP) provides a standards-based method for enabling switches to advertise themselves to adjacent devices and to learn about adjacent LLDP devices. The Link Layer Discovery Protocol (LLDP) is a vendor-neutral Link Layer protocol in the Internet Protocol Suite used by network devices for advertising their identity, capabilities, and neighbors on a IEEE 802 local area network, principally wired Ethernet. The protocol is formally referred to by the IEEE as Station and Media Access Control Connectivity Discovery specified in standards document IEEE 802.1AB.

### 3-5.1 LLDP Configuration

You can per port to do the LLDP configuration and the detail parameters, the settings will take effect immediately. This page allows the user to inspect and configure the current LLDP port settings.

#### Web Interface

To configure LLDP:

1. Click <System>, <LLDP> and <LLDP Configuration>
2. Modify LLDP timing parameters
3. Set the required mode for transmitting or receiving LLDP messages
4. Specify the information to include in the TLV field of advertised messages
5. Click <Apply>

LLDP Configuration Home > System > LLDP > LLDP Configuration

---

LLDP Parameters

Tx Interval	30	seconds
Tx Hold	4	times
Tx Delay	2	seconds
Tx Reinit	2	seconds

---

LLDP Port Configuration

Port	Mode	CDP aware	Optional TLVs				
			Port Descr	Sys Name	Sys Descr	Sys Capa	Mgmt Addr
1	Disabled	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
2	Disabled	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
3	Disabled	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
4	Disabled	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
5	Disabled	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
N-2	Disabled	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
N-1	Disabled	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
N	Disabled	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

**Figure 3-5.1: The LLDP Configuration**

## Parameter description

### LLDP Parameters

- **Tx Interval**

The switch periodically transmits LLDP frames to its neighbours for having the network discovery information up-to-date. The interval between each LLDP frame is determined by the Tx Interval value. Valid values are restricted to 5 - 32768 seconds.

- **Tx Hold**

Each LLDP frame contains information about how long the information in the LLDP frame shall be considered valid. The LLDP information valid period is set to Tx Hold multiplied by Tx Interval seconds. Valid values are restricted to 2 - 10 times.

- **Tx Delay**

If some configuration is changed (e.g. the IP address) a new LLDP frame is transmitted, but the time between the LLDP frames will always be at least the value of Tx Delay seconds. Tx Delay cannot be larger than 1/4 of the Tx Interval value. Valid values are restricted to 1 - 8192 seconds.

- **Tx Reinit**

When a port is disabled, LLDP is disabled or the switch is rebooted, an LLDP shutdown frame is transmitted to the neighboring units, signaling that the LLDP information isn't valid anymore. Tx Reinit controls the amount of seconds between the shutdown frame and a new LLDP initialization. Valid values are restricted to 1 - 10 seconds.

### LLDP Port Configuration

The LLDP port settings relate to the currently selected, as reflected by the page header.

- **Port**

The switch port number of the logical LLDP port.

- **Mode**

Select LLDP mode.

Rx only The switch will not send out LLDP information, but LLDP information from neighbor units is analyzed.

Tx only The switch will drop LLDP information received from neighbors, but will send out LLDP information.

Disabled The switch will not send out LLDP information, and will drop LLDP information received from neighbors.

Enabled the switch will send out LLDP information, and will analyze LLDP information received from neighbors.

- **CDP Aware**

Select CDP awareness.

The CDP operation is restricted to decode incoming CDP frames (The switch doesn't transmit CDP frames). CDP frames are only decoded if LLDP on the port is enabled.

Only CDP TLVs that can be mapped to a corresponding field in the LLDP neighbors' table are decoded. All other TLVs are discarded (Unrecognized CDP TLVs and

discarded CDP frames are not shown in the LLDP statistics.). CDP TLVs are mapped onto LLDP neighbors' table as shown below.

CDP TLV "Device ID" is mapped to the LLDP "Chassis ID" field.

CDP TLV "Address" is mapped to the LLDP "Management Address" field. The CDP address TLV can contain multiple addresses, but only the first address is shown in the LLDP neighbors' table.

CDP TLV "Port ID" is mapped to the LLDP "Port ID" field.

CDP TLV "Version and Platform" is mapped to the LLDP "System Description" field.

Both the CDP and LLDP support "system capabilities", but the CDP capabilities cover capabilities that are not part of the LLDP. These capabilities are shown as "others" in the LLDP neighbors' table.

If all ports have CDP awareness disabled the switch forwards CDP frames received from neighbor devices. If at least one port has CDP awareness enabled all CDP frames are terminated by the switch.



**NOTE:** When CDP awareness on a port is disabled the CDP information isn't removed immediately, but gets when the hold time is exceeded.

- **Port Descr**

Optional TLV: When checked the "port description" is included in LLDP information transmitted.

- **Sys Name**

Optional TLV: When checked the "system name" is included in LLDP information transmitted.

- **Sys Descr**

Optional TLV: When checked the "system description" is included in LLDP information transmitted.

- **Sys Capa**

Optional TLV: When checked the "system capability" is included in LLDP information transmitted.

- **Mgmt Addr**

Optional TLV: When checked the "management address" is included in LLDP information transmitted.

#### **Buttons**

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

### 3-5.2 LLDP-MED Configuration

Media Endpoint Discovery is an enhancement of LLDP, known as LLDP-MED that provides the following facilities:

Auto-discovery of LAN policies (such as VLAN, Layer 2 priority and differentiated services (Diffserv) settings) enabling plug and play networking.

Device location discovery to allow creation of location databases and, in the case of Voice over Internet Protocol (VoIP), enhanced 911 services.

Inventory management, allowing network administrators to track their network devices, and determine their characteristics (manufacturer, software and hardware versions, and serial or asset number).

This page allows you to configure the LLDP-MED. This function applies to VoIP devices which support LLDP-MED.

#### Web Interface

To configure LLDP-MED:

1. Click <System>, <LLDP> and <LLDP-MED Configuration>
2. Modify fast start repeat count parameter, default is 4
3. Modify <Coordinates Location> parameters
4. Fill <Civic Address Location> parameters
5. Add new policy
6. Click <Apply>, will show following <Policy Port Configuration>
7. Select <Policy ID> for each port
8. Click <Apply>

LLDP-MED Configuration
Home > System > LLDP > LLDP-MED Configuration

Fast Start Repeat Count

Fast start repeat count
4 seconds

Coordinates Location

Latitude	0°	North	Longitude	0°	East
Altitude	0	Meters	Map Datum	WGS84	

Civic Address Location					
Country code	<input type="text"/>	State/Province	<input type="text"/>	County	<input type="text"/>
City	<input type="text"/>	City district	<input type="text"/>	Block (Neighborhood)	<input type="text"/>
Street	<input type="text"/>	Leading street direction	<input type="text"/>	Trailing street suffix	<input type="text"/>
Street suffix	<input type="text"/>	House no.	<input type="text"/>	House no. suffix	<input type="text"/>
Landmark	<input type="text"/>	Additional location info	<input type="text"/>	Name	<input type="text"/>
Zip code	<input type="text"/>	Building	<input type="text"/>	Apartment	<input type="text"/>
Floor	<input type="text"/>	Room no.	<input type="text"/>	Place type	<input type="text"/>
Postal community name	<input type="text"/>	P.O. Box	<input type="text"/>	Additional code	<input type="text"/>

Emergency Call Service	
Emergency Call Service	<input type="text"/>

Policies						
Delete	Policy ID	Application Type	Tag	VLAN ID	L2 Priority	DSCP
<input type="checkbox"/>	0	Voice	Tagged	1	0	0

Add New Policy

Policy Port Configuration	
Port	Policy ID
	0
1	<input type="checkbox"/>
2	<input type="checkbox"/>
N-2	<input type="checkbox"/>
N-1	<input type="checkbox"/>
N	<input type="checkbox"/>

Apply

Reset

Figure 3-5.2: The LLDP-MED Configuration

## Parameter description

### Fast start repeat count

Rapid startup and Emergency Call Service Location Identification Discovery of endpoints is a critically important aspect of VoIP systems in general. In addition, it is best to advertise only those pieces of information which are specifically relevant to particular endpoint types (for example only advertise the voice network policy

to permitted voice-capable devices), both in order to conserve the limited LLDPDU space and to reduce security and system integrity issues that can come with inappropriate knowledge of the network policy.

With this in mind LLDP-MED defines an LLDP-MED Fast Start interaction between the protocol and the application layers on top of the protocol, in order to achieve these related properties. Initially, a Network Connectivity Device will only transmit LLDP TLVs in an LLDPDU. Only after an LLDP-MED Endpoint Device is detected, will an LLDP-MED capable Network Connectivity Device start to advertise LLDP-MED TLVs in outgoing LLDPDUs on the associated port. The LLDP-MED application will temporarily speed up the transmission of the LLDPDU to start within a second, when a new LLDP-MED neighbour has been detected in order share LLDP-MED information as fast as possible to new neighbours.

Because there is a risk of an LLDP frame being lost during transmission between neighbours, it is recommended to repeat the fast start transmission multiple times to increase the possibility of the neighbours receiving the LLDP frame. With Fast start repeat count it is possible to specify the number of times the fast start transmission would be repeated. The recommended value is 4 times, given that 4 LLDP frames with a 1 second interval will be transmitted, when an LLDP frame with new information is received.

It should be noted that LLDP-MED and the LLDP-MED Fast Start mechanism is only intended to run on links between LLDP-MED Network Connectivity Devices and Endpoint Devices, and as such does not apply to links between LAN infrastructure elements, including Network Connectivity Devices, or other types of links.

## Coordinates Location

- **Latitude**

Latitude SHOULD be normalized to within 0-90 degrees with a maximum of 4 digits.

It is possible to specify the direction to either North of the equator or South of the equator.

- **Longitude**

Longitude SHOULD be normalized to within 0-180 degrees with a maximum of 5 digits.

It is possible to specify the direction to either East of the prime meridian or West of the prime meridian.

- **Altitude**

Altitude SHOULD be normalized to within -32767 to 32767 with a maximum of 4 digits.

It is possible to select between two altitude types (floors or meters).

Meters: Representing meters of Altitude defined by the vertical datum specified.

Floors: Representing altitude in a form more relevant in buildings which have different floor-to-floor dimensions. An altitude = 0.0 is meaningful even outside a building, and represents ground level at the given latitude and longitude. Inside a building, 0.0 represents the floor level associated with ground level at the main entrance.

- **Map Datum**

The Map Datum is used for the coordinates given in these options:

**WGS84:** (Geographical 3D) - World Geodesic System 1984, CRS Code 4327, and Prime Meridian Name: Greenwich.

**NAD83/NAVD88:** North American Datum 1983, CRS Code 4269, Prime

Meridian Name: Greenwich; the associated vertical datum is the North American Vertical Datum of 1988 (NAVD88). This datum pair is to be used when referencing locations on land, not near tidal water (which would use Datum = NAD83/MLLW).

**NAD83/MLLW:** North American Datum 1983, CRS Code 4269, Prime Meridian Name: Greenwich; the associated vertical datum is Mean Lower Low Water (MLLW). This datum pair is to be used when referencing locations on water/sea/ocean.

### **Civic Address Location**

IETF Geopriv Civic Address based Location Configuration Information (Civic Address LCI).

- **Country code**

The two-letter ISO 3166 country code in capital ASCII letters - Example: DK, DE or US.

- **State**

National subdivisions (state, canton, region, province, prefecture)

- **County**

County, parish, gun (Japan), district

- **City**

City, township, shi (Japan) - Example: Copenhagen

- **City district**

City division, borough, city district, ward, chou (Japan)

- **Block (Neighbourhood)**

Neighbourhood, block

- **Street**

Street - Example: Poppelvej

- **Leading street direction**

Leading street direction - Example: N

- **Trailing street suffix**

Trailing street suffix - Example: SW

- **Street suffix**

Street suffix - Example: Ave, Platz

- **House no.**

House number - Example: 21

- **House no. suffix**

House number suffix - Example: A, 1/2

- **Landmark**

Landmark or vanity address - Example: Columbia University

- **Additional location info**

Additional location info - Example: South Wing

- **Name**

Name (residence and office occupant) - Example: Flemming Jahn



- **Zip code**

Postal/zip code - Example: 2791

- **Building**

Building (structure) - Example: Low Library

- **Apartment**

Unit (Apartment, suite) - Example: Apt 42

- **Floor**

Floor - Example: 4

- **Room no.**

Room number - Example: 450F

- **Place type**

Place type - Example: Office

- **Postal community name**

Postal community name - Example: Leonia

- **P.O. Box**

Post office box (P.O. BOX) - Example: 12345

- **Additional code**

Additional code - Example: 1320300003

- **Emergency Call Service**

Emergency Call Service (e.g. E911 and others), such as defined by TIA or NENA

- **Emergency Call Service**

Emergency Call Service ELIN identifier data format is defined to carry the ELIN identifier as used during emergency call setup to a traditional CAMA or ISDN trunk-based PSAP. This format consists of a numerical digit string, corresponding to the ELIN to be used for emergency calling.

## **Policies**

Network Policy Discovery enables the efficient discovery and diagnosis of mismatch issues with the VLAN configuration, along with the associated Layer 2 and Layer 3 attributes, which apply for a set of specific protocol applications on that port. Improper network policy configurations are a very significant issue in VoIP environments that frequently result in voice quality degradation or loss of service.

Policies are only intended for use with applications that have specific 'real-time' network policy requirements, such as interactive voice and/or video services.

The network policy attributes advertised are:

1. Layer 2 VLAN ID (IEEE 802.1Q-2003)
2. Layer 2 priority value (IEEE 802.1D-2004)
3. Layer 3 Diffserv code point (DSCP) value (IETF RFC 2474)

This network policy is potentially advertised and associated with multiple sets of application types supported on a given port. The application types specifically addressed are:

1. Voice
2. Guest Voice
3. Softphone Voice

#### 4. Video Conferencing

#### 5. Streaming Video

#### 6. Control / Signalling (conditionally support a separate network policy for the media types above)

A large network may support multiple VoIP policies across the entire organization, and different policies per application type. LLDP-MED allows multiple policies to be advertised per port, each corresponding to a different application type. Different ports on the same Network Connectivity Device may advertise different sets of policies, based on the authenticated user identity or port configuration.

It should be noted that LLDP-MED is not intended to run on links other than between Network Connectivity Devices and Endpoints, and therefore does not need to advertise the multitude of network policies that frequently run on an aggregated link interior to the LAN.

- **Delete**

Check to delete the policy. It will be deleted during the next save.

- **Policy ID**

ID for the policy. This is auto generated and shall be used when selecting the policies that shall be mapped to the specific ports.

- **Application Type**

Intended use of the application types:

1. Voice - for use by dedicated IP Telephony handsets and other similar appliances supporting interactive voice services. These devices are typically deployed on a separate VLAN for ease of deployment and enhanced security by isolation from data applications.

2. Voice Signalling (conditional) - for use in network topologies that require a different policy for the voice signalling than for the voice media. This application type should not be advertised if all the same network policies apply as those advertised in the Voice application policy.

3. Guest Voice - support a separate 'limited feature-set' voice service for guest users and visitors with their own IP Telephony handsets and other similar appliances supporting interactive voice services.

4. Guest Voice Signalling (conditional) - for use in network topologies that require a different policy for the guest voice signalling than for the guest voice media. This application type should not be advertised if all the same network policies apply as those advertised in the Guest Voice application policy.

5. Softphone Voice - for use by softphone applications on typical data centric devices, such as PCs or laptops. This class of endpoints frequently does not support multiple VLANs, if at all, and are typically configured to use an 'untagged' VLAN or a single 'tagged' data specific VLAN. When a network policy is defined for use with an 'untagged' VLAN (see Tagged flag below), then the L2 priority field is ignored and only the DSCP value has relevance.

6. Video Conferencing - for use by dedicated Video Conferencing equipment and other similar appliances supporting real-time interactive video/audio services.

7. Streaming Video - for use by broadcast or multicast based video content distribution and other similar applications supporting streaming video services that require specific network policy treatment. Video applications relying on TCP with buffering would not be an intended use of this application type.

8. Video Signalling (conditional) - for use in network topologies that require a separate policy for the video signalling than for the video media. This application

type should not be advertised if all the same network policies apply as those advertised in the Video Conferencing application policy.

- **Tag**

Tag indicating whether the specified application type is using a 'tagged' or an 'untagged' VLAN.

Untagged indicates that the device is using an untagged frame format and as such does not include a tag header as defined by IEEE 802.1Q-2003. In this case, both the VLAN ID and the Layer 2 priority fields are ignored and only the DSCP value has relevance.

Tagged indicates that the device is using the IEEE 802.1Q tagged frame format, and that both the VLAN ID and the Layer 2 priority values are being used, as well as the DSCP value. The tagged format includes an additional field, known as the tag header. The tagged frame format also includes priority tagged frames as defined by IEEE 802.1Q-2003.

- **VLAN ID**

VLAN identifier (VID) for the port as defined in IEEE 802.1Q-2003.

- **L2 Priority**

L2 Priority is the Layer 2 priority to be used for the specified application type. L2 Priority may specify one of eight priority levels (0 through 7), as defined by IEEE 802.1D-2004. A value of 0 represents use of the default priority as defined in IEEE 802.1D-2004.

- **DSCP**

DSCP value to be used to provide Diffserv node behaviour for the specified application type as defined in IETF RFC 2474. DSCP may contain one of 64 code point values (0 through 63). A value of "0" represents use of the default DSCP value as defined in RFC 2475.

- **Port Policies Configuration**

Every port may advertise a unique set of network policies or different attributes for the same network policies, based on the authenticated user identity or port configuration.

- **Port**

The port number to which the configuration applies.

- **Policy Id**

The set of policies that shall apply to a given port. The set of policies is selected by check marking the checkboxes that corresponds to the policies.

### **Buttons**

- **Adding a new policy**

Click to add a new policy. Specify the application type, Tag, VLAN ID, L2 priority and DSCP for the new policy. Click "Apply".

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

### 3-5.3 LLDP Neighbour

This page provides a status overview for all LLDP neighbours. The displayed table contains a row for each port on which an LLDP neighbour is detected. The columns hold the following information:

#### Web Interface

To show LLDP neighbours:

1. Click <System>, <LLDP> and <LLDP Neighbour>
2. Click <Refresh> for manual update web screen
3. Click <Auto-refresh> for auto-update web screen



Local Port	Chassis ID	Port ID	Port Description	System Name	System Capabilities	System Description	Management Address
Port 5	0.0.0.0	0017E0330C9C:P1	SW PORT	SEP0017E0330C9C	Bridge(+), Telephone(+)	Cisco IP Phone 7941G/V,	
Port 7	00-01-C1-00-00-00	4	Port #4		Bridge(+)	8-Port 10/100/1000Base-T + 2 TP/(100/1G) SFP Combo PoE+ L2 Plus Managed Switch	192.168.3.18 (IPv4)

**Figure 3-5.3: The LLDP Neighbour information**



**NOTE:** If there is no device that supports LLDP in your network then the table will show "No LLDP neighbour information found".

#### Parameter description

- **Local Port**

The port on which the LLDP frame was received.

- **Chassis ID**

The Chassis ID is the identification of the neighbour's LLDP frames.

- **Port ID**

The Remote Port ID is the identification of the neighbour port.

- **Port Description**

Port Description is the port description advertised by the neighbour unit.

- **System Name**

System Name is the name advertised by the neighbour unit.

- **System Capabilities**

System Capabilities describes the neighbour unit's capabilities. The possible capabilities are:

1. Other
2. Repeater

3. Bridge
4. WLAN Access Point
5. Router
6. Telephone
7. DOCSIS cable device
8. Station only
9. Reserved

When a capability is enabled, the capability is followed by (+). If the capability is disabled, the capability is followed by (-).

- **System Description**

Displays the system description.

- **Management Address**

Management Address is the neighbour unit's address that is used for higher layer entities to assist discovery by the network management. This could for instance hold the neighbour's IP address.

**Buttons**



**Figure 3-5.3: The LLDP Neighbor buttons**

- **Auto-refresh**

Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.

- **Refresh**

Click to refresh the page immediately.

### 3-5.4 LLDP-MED Neighbour

This page provides a status overview of all LLDP-MED neighbours. The displayed table contains a row for each port on which an LLDP neighbour is detected. This function applies to VoIP devices which support LLDP-MED. The columns hold the following information:

#### Web Interface

To show LLDP-MED neighbor:

1. Click <System>, <LLDP> and <LLDP-MED Neighbour>
2. Click <Refresh> for manual update web screen
3. Click <Auto-refresh> for auto-update web screen

LLDP-MED Neighbor Information					
<div> Auto-refresh <input type="checkbox"/> off <input type="button" value="Refresh"/> </div>					
Port 5					
Device Type	Capabilities				
Endpoint Class III	LLDP-MED Capabilities, Network Policy, Extended Power via MDI - PD, Inventory				
Application Type	Policy	Tag	VLAN ID	Priority	DSCP
Voice Signaling	Unknown	Untagged	-	-	-
Auto-negotiation	Auto-negotiation status	Auto-negotiation Capabilities		MAU Type	
Supported	Enabled	1000BASE-T half duplex mode, 1000BASE-X, -LX, -SX, -CX full duplex mode , Asymmetric and Symmetric PAUSE for full-duplex links, Symmetric PAUSE for full-duplex links		100BaseTXFD - 2 pair category 5 UTP, full duplex mode	

**Figure 3-5.4: The LLDP-MED Neighbour information**



**NOTE:** If there is no device that supports LLDP-MED in your network then the table will show "No LLDP-MED neighbour information found".

#### Parameter description

- **Port**

The port on which the LLDP frame was received.

- **Device Type**

LLDP-MED Devices are comprised of two primary Device Types: Network Connectivity Devices and Endpoint Devices.

- **LLDP-MED Network Connectivity Device Definition**

LLDP-MED Network Connectivity Devices, as defined in TIA-1057, provide access to the IEEE 802 based LAN infrastructure for LLDP-MED Endpoint Devices. An LLDP-MED Network Connectivity Device is a LAN access device based on any of the following technologies:

1. LAN Switch/Router
2. IEEE 802.1 Bridge
3. IEEE 802.3 Repeater (included for historical reasons)
4. IEEE 802.11 Wireless Access Point
5. Any device that supports the IEEE 802.1AB and MED extensions defined by TIA-1057 and can relay IEEE 802 frames via any method.

#### ■ **LLDP-MED Endpoint Device Definition**

LLDP-MED Endpoint Devices, as defined in TIA-1057, are located at the IEEE 802 LAN network edge, and participate in IP communication service using the LLDP-MED framework.

Within the LLDP-MED Endpoint Device category, the LLDP-MED scheme is broken into further Endpoint Device Classes, as defined in the following.

Each LLDP-MED Endpoint Device Class is defined to build upon the capabilities defined for the previous Endpoint Device Class. For-example will any LLDP-MED Endpoint Device claiming compliance as a Media Endpoint (Class II) also support all aspects of TIA-1057 applicable to Generic Endpoints (Class I), and any LLDP-MED Endpoint Device claiming compliance as a Communication Device (Class III) will also support all aspects of TIA-1057 applicable to both Media Endpoints (Class II) and Generic Endpoints (Class I).

#### ■ **LLDP-MED Generic Endpoint (Class I)**

The LLDP-MED Generic Endpoint (Class I) definition is applicable to all endpoint products that require the base LLDP discovery services defined in TIA-1057, however do not support IP media or act as an end-user communication appliance. Such devices may include (but are not limited to) IP Communication Controllers, other communication related servers, or any device requiring basic services as defined in TIA-1057.

Discovery services defined in this class include LAN configuration, device location, network policy, power management, and inventory management.

#### ■ **LLDP-MED Media Endpoint (Class II)**

The LLDP-MED Media Endpoint (Class II) definition is applicable to all endpoint products that have IP media capabilities however may or may not be associated with a particular end user. Capabilities include all of the capabilities defined for the previous Generic Endpoint Class (Class I), and are extended to include aspects related to media streaming. Example product categories expected to adhere to this class include (but are not limited to) Voice / Media Gateways, Conference Bridges, Media Servers, and similar.

Discovery services defined in this class include media-type-specific network layer policy discovery.

#### ■ **LLDP-MED Communication Endpoint (Class III)**

The LLDP-MED Communication Endpoint (Class III) definition is applicable to all endpoint products that act as end user communication appliances supporting IP media. Capabilities include all of the capabilities defined for the previous Generic Endpoint (Class I) and Media Endpoint (Class II) classes, and are extended to include aspects related to end user devices. Example product categories expected to adhere to this class include (but are not limited to) end user communication appliances, such as IP Phones, PC-based softphones, or other communication appliances that directly support the end user.

Discovery services defined in this class include provision of location identifier (including ECS / E911 information), embedded L2 switch support, inventory management.

- **LLDP-MED Capabilities**

LLDP-MED Capabilities describes the neighborhood unit's LLDP-MED capabilities. The possible capabilities are:

1. LLDP-MED capabilities
2. Network Policy
3. Location Identification
4. Extended Power via MDI - PSE
5. Extended Power via MDI - PD
6. Inventory
7. Reserved

- **Application Type**

Application Type indicating the primary function of the application(s) defined for this network policy, advertised by an Endpoint or Network Connectivity Device. The possible application types are shown below.

1. Voice - for use by dedicated IP Telephony handsets and other similar appliances supporting interactive voice services. These devices are typically deployed on a separate VLAN for ease of deployment and enhanced security by isolation from data applications.
2. Voice Signalling - for use in network topologies that require a different policy for the voice signalling than for the voice media.
3. Guest Voice - to support a separate limited feature-set voice service for guest users and visitors with their own IP Telephony handsets and other similar appliances supporting interactive voice services.
4. Guest Voice Signalling - for use in network topologies that require a different policy for the guest voice signalling than for the guest voice media.
5. Softphone Voice - for use by softphone applications on typical data centric devices, such as PCs or laptops.
6. Video Conferencing - for use by dedicated Video Conferencing equipment and other similar appliances supporting real-time interactive video/audio services.
7. Streaming Video - for use by broadcast or multicast based video content distribution and other similar applications supporting streaming video services that require specific network policy treatment. Video applications relying on TCP with buffering would not be an intended use of this application type.
8. Video Signalling - for use in network topologies that require a separate policy for the video signalling than for the video media.

- **Policy**

Policy indicates that an Endpoint Device wants to explicitly advertise that the policy is required by the device. Can be either Defined or Unknown

Unknown: The network policy for the specified application type is currently unknown.

Defined: The network policy is defined.

- **TAG**

TAG is indicative of whether the specified application type is using a tagged or an untagged VLAN. Can be Tagged or Untagged.

Untagged: The device is using an untagged frame format and as such does not include a tag header as defined by IEEE 802.1Q-2003.



Tagged: The device is using the IEEE 802.1Q tagged frame format.

- **VLAN ID**

VLAN ID is the VLAN identifier (VID) for the port as defined in IEEE 802.1Q-2003. A value of 1 through 4094 is used to define a valid VLAN ID. A value of 0 (Priority Tagged) is used if the device is using priority tagged frames as defined by IEEE 802.1Q-2003, meaning that only the IEEE 802.1D priority level is significant and the default PVID of the ingress port is used instead.

- **Priority**

Priority is the Layer 2 priority to be used for the specified application type. One of the eight priority levels (0 through 7).

- **DSCP**

DSCP is the DSCP value to be used to provide Diffserv node behavior for the specified application type as defined in IETF RFC 2474. Contain one of 64 code point values (0 through 63).

- **Auto-negotiation**

**Auto-negotiation** identifies if MAC/PHY auto-negotiation is supported by the link partner.

- **Auto-negotiation status**

**Auto-negotiation status** identifies if auto-negotiation is currently enabled at the link partner. If **Auto-negotiation** is supported and **Auto-negotiation status** is disabled, the 802.3 PMD operating mode will be determined the operational MAU type field value rather than by auto-negotiation.

- **Auto-negotiation Capabilities**

**Auto-negotiation Capabilities** shows the link partners MAC/PHY capabilities.

#### Buttons

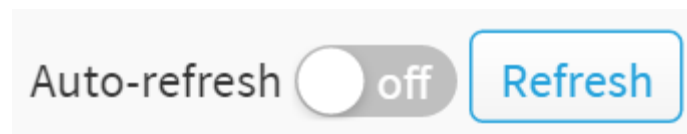


Figure 3-5.4: The LLDP Neighbor buttons

- **Auto-refresh :**

Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.

- **Refresh**

Click to refresh the page immediately.

### 3-5.5 LLDP Statistics

Two types of counters are shown. Global counters are counters that refer to the whole switch, while local counters refer to per port counters for the currently selected switch.

#### Web Interface

To show LLDP Statistics:

1. Click <System> ,<LLDP> and <LLDP Statistics>
2. Click <Refresh> for manual update web screen.
3. Click <Auto-refresh> for auto-update web screen.
4. Click <Clear> to clear all counters.

LLDP Counter

Home > System > LLDP > LLDP Statistics

Auto-refresh ☐ off [Refresh](#) [Clear](#)

LLDP Global Counters

Neighbor entries were last changed	367 days, 5:26:04 (31728364 sec. ago)
Total Neighbors Entries Added	0
Total Neighbors Entries Deleted	0
Total Neighbors Entries Dropped	0
Total Neighbors Entries Aged Out	0

LLDP Statistics Local Counters

Local Port	Tx Frames	Rx Frames	Rx Errors	Frames Discarded	TLVs Discarded	TLVs Unrecognized	Org. Discarded	Age-Outs
1	0	0	0	0	0	0	0	0
2	0	0	0	0	0	0	0	0
3	0	0	0	0	0	0	0	0
N-2	0	0	0	0	0	0	0	0
N-1	0	0	0	0	0	0	0	0
N	0	0	0	0	0	0	0	0

Figure 3-5.5.1: The LLDP Statistics information

#### Parameter description

##### Global Counters

- **Neighbour entries were last changed at**

It also shows the time when the last entry was last deleted or added. It also shows the time elapsed since the last change was detected.

- **Total Neighbours Entries Added**

Shows the number of new entries added since switch reboot.

- **Total Neighbours Entries Deleted**

Shows the number of new entries deleted since switch reboot.

- **Total Neighbours Entries Dropped**

Shows the number of LLDP frames dropped due to the entry table being full.

- **Total Neighbours Entries Aged Out**

Shows the number of entries deleted due to Time-To-Live expiring.

## Local Counters

The displayed table contains a row for each port. The columns hold the following information:

- **Local Port**

The port on which LLDP frames are received or transmitted.

- **Tx Frames**

The number of LLDP frames transmitted on the port.

- **Rx Frames**

The number of LLDP frames received on the port.

- **Rx Errors**

The number of received LLDP frames containing some kind of error.

- **Frames Discarded**

If an LLDP frame is received on a port, and the switch's internal table has run full, the LLDP frame is counted and discarded. This situation is known as "Too Many Neighbours" in the LLDP standard. LLDP frames require a new entry in the table when the Chassis ID or Remote Port ID is not already contained within the table. Entries are removed from the table when a given port's link is down, an LLDP shutdown frame is received, or when the entry ages out.

- **TLVs Discarded**

Each LLDP frame can contain multiple pieces of information, known as TLVs (TLV is short for "Type Length Value"). If a TLV is malformed, it is counted and discarded.

- **TLVs Unrecognized**

The number of well-formed TLVs, but with an unknown type value.

- **Org. Discarded**

The number of organizationally received TLVs.

- **Age-Outs**

Each LLDP frame contains information about how long time the LLDP information is valid (age-out time). If no new LLDP frame is received within the age out time, the LLDP information is removed, and the Age-Out counter is incremented.

## Buttons



**Figure 3-5.5.2: The LLDP Statistics information buttons**

- **Auto-refresh**

Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.

- **Refresh**

Click to refresh the page.

- **Clear**

Clears the counters for the selected port.

## 4. Port Management

The section describes to configure the Port detail parameters of the switch. Others you could use the Port configure to enable or disable the Port of the switch. Monitor the ports content or status in the function.

### 4-1 Port Configuration

This page displays current port configurations. Ports can also be configured here.







#### Web Interface

To configure a current port configuration in the web interface:

1. Click <Port Management> and <Port Configuration>
2. Specify the speed configured, mode and Flow Control
3. Specify the detail port alias or description an alphanumeric string describing the full name and version identification for the system's hardware type, software version, and networking application.
4. Click <Apply>

Port Configuration Home > Port Management > Port Configuration

[Refresh](#)

Port	Link	Speed		Flow Control			Description
		Status	Mode	Rx Status	Tx Status	Mode	
1		100Mfdx	Auto	On	On	<input type="checkbox"/>	
2		down	Auto	Off	Off	<input type="checkbox"/>	
3		down	Auto	Off	Off	<input type="checkbox"/>	
N-2		down	Auto	Off	Off	<input type="checkbox"/>	
N-1		down	Auto	Off	Off	<input type="checkbox"/>	
N		down	Auto	Off	Off	<input type="checkbox"/>	

[Apply](#) [Reset](#)

Figure 4-1: The Port Configuration

#### Parameter description

- **Port**

This is the logical port number for this row.

- **Link**

The current link state is displayed graphically. Green indicates the link is up and red that it is down.

- **Current Link Speed**

Provides the current link speed of the port.

- **Configured Link Speed**

Selects any available link speed for the given switch port. Only speeds supported by the specific port is shown. Possible speeds are:

Disabled - Disables the switch port operation.

Auto - Port auto negotiate speed with the link partner and selects the highest speed that is compatible with the link partner.

10Mbps HDX - Forces the cu port in 10Mbps half-duplex mode.

10Mbps FDX - Forces the cu port in 10Mbps full duplex mode.

100Mbps HDX - Forces the cu port in 100Mbps half-duplex mode.

100Mbps FDX - Forces the cu port in 100Mbps full duplex mode.

1Gbps FDX - Forces the port in 1Gbps full duplex

2.5Gbps FDX - Forces the Serdes port in 2.5Gbps full duplex mode.

SFP\_Auto\_AMS - Automatically determines the speed of the SFP. Note: There is no standardized way to do SFP auto detect, so here it is done by reading the SFP rom. Due to the missing standardized way of doing SFP auto detect some SFPs might not be detectable. The port is set in AMS mode. Cu port is set in Auto mode.

100-FX - SFP port in 100-FX speed. Cu port disabled.

100-FX\_AMS - Port in AMS mode. SFP port in 100-FX speed. Cu port in Auto mode.

1000-X - SFP port in 1000-X speed. Cu port disabled.

1000-X\_AMS - Port in AMS mode. SFP port in 1000-X speed. Cu port in Auto mode. Ports in AMS mode with 1000-X speed has Cu port preferred. Ports in AMS mode with 100-FX speed has fiber port preferred.

- **Flow Control**

When Auto Speed is selected on a port, this section indicates the flow control capability that is advertised to the link partner. When a fixed-speed setting is selected, that is what is used. The Current Rx column indicates whether pause frames on the port are obeyed, and the Current Tx column indicates whether pause frames on the port are transmitted. The Rx and Tx settings are determined by the result of the last Auto-Negotiation.

Check the configured column to use flow control. This setting is related to the setting for Configured Link Speed.

- **Description**

Enter up to 63 characters to be descriptive name for identifies this port.

- Buttons**

- **Refresh**

You can click them for refresh the Port link Status by manual

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

## 4-2 Port Statistics

The section describes to the Port statistics information and provides overview of general traffic statistics for all switch ports.

### Web Interface

To display the Port Statistics Overview in the web interface:

1. Click <Port Management> and <Port Statistics>
2. If you want to auto-refresh then you need to evoke the <Auto-refresh>
3. Click <Refresh> to refresh the port statistics or clear all information when you click <Clear>
4. If you want to see the detail of port statistic then you need to click that port

Port Statistics Overview Home > Port Management > Port Statistics

Auto-refresh ☐ off Refresh Clear

Port	Packets		Bytes		Errors		Drops	
	Received	Transmitted	Received	Transmitted	Received	Transmitted	Received	Transmitted
1	6858	2790	1794496	1148081	0	0	2756	0
2	0	0	0	0	0	0	0	0
N-2	0	0	0	0	0	0	0	0
N-1	0	0	0	0	0	0	0	0
N	0	0	0	0	0	0	0	0

**Figure 4-2: The Port Statistics Overview**

### Parameter description

- **Port**

The logical port for the settings contained in the same row.

- **Packets**

The number of received and transmitted packets per port.

- **Bytes**

The number of received and transmitted bytes per port.

- **Errors**

The number of frames received in error and the number of incomplete transmissions per port.

- **Drops**

The number of frames discarded due to ingress or egress congestion.

### Buttons



**Figure 4-2: The Port Statistics Overview buttons**

- **Auto-refresh**

Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.

- **Refresh**

Click to refresh the page.

- **Clear**

Clears the counters for all ports.

If you want to see the detail of port statistic then you need to click that port. The displayed counters are the totals for receive and transmit, the size counters for receive and transmit, and the error counters for receive and transmit.

Detailed Port 1 Statistics Home > Port Management > Port Statistics

Auto-refresh ☐ off Refresh Clear Port 1 ▾

Receive Total		Transmit Total	
Rx Packets	7882	Tx Packets	3417
Rx Octets	2113151	Tx Octets	1395217
Rx Unicast	4909	Tx Unicast	3403
Rx Multicast	2337	Tx Multicast	12
Rx Broadcast	636	Tx Broadcast	2
Rx Pause	0	Tx Pause	0

Receive Size Counters		Transmit Size Counters	
Rx 64 Bytes	2619	Tx 64 Bytes	875
Rx 65-127 Bytes	1831	Tx 65-127 Bytes	234
Rx 128-255 Bytes	697	Tx 128-255 Bytes	18
Rx 256-511 Bytes	3	Tx 256-511 Bytes	627
Rx 512-1023 Bytes	2548	Tx 512-1023 Bytes	1608
Rx 1024-1518 Bytes	184	Tx 1024-1518 Bytes	55
Rx 1519-2047 Bytes	0	Tx 1519-2047 Bytes	0
Rx 2048-4095 Bytes	0	Tx 2048-4095 Bytes	0
Rx 4096-9216 Bytes	0	Tx 4096-9216 Bytes	0
Rx 9217-16383 Bytes	0	Tx 9217-16383 Bytes	0

Receive Error Counters		Transmit Error Counters	
Rx Drops	2856	Tx Drops	0
Rx CRC/Alignment	0	Tx Late Collision	0
Rx Undersize	0	Tx Excessive Collision	0
Rx Oversize	0	Tx Oversize	0
Rx Fragments	0		
Rx Jabber	0		

**Figure 4-2: The Detailed Port Statistics**

### Parameter description

- **Upper left scroll bar**

To scroll which port to display the port statistics with "Port-1", "Port-2" ...

### Receive Total and Transmit Total

- **Rx and Tx Packets**

The number of received and transmitted (good and bad) packets.

- **Rx and Tx Octets**

The number of received and transmitted (good and bad) bytes. Includes FCS, but excludes framing bits.

- **Rx and Tx Unicast**

The number of received and transmitted (good and bad) unicast packets.

- **Rx and Tx Multicast**

The number of received and transmitted (good and bad) multicast packets.

- **Rx and Tx Broadcast**

The number of received and transmitted (good and bad) broadcast packets.

- **Rx and Tx Pause**

A count of the MAC Control frames received or transmitted on this port that have an opcode indicating a PAUSE operation.

**Receive and Transmit Size Counters**

The number of received and transmitted (good and bad) packets split into categories based on their respective frame sizes.

**Receive Error Counters**

- **Rx Drops**

The number of frames dropped due to lack of receive buffers or egress congestion.

- **Rx CRC/Alignment**

The number of frames received with CRC or alignment errors.

- **Rx Undersize**

The number of short 1 frames received with valid CRC.

- **Rx Oversize**

The number of long 2 frames received with valid CRC.

- **Rx Fragments**

The number of short 1 frames received with invalid CRC.

- **Rx Jabber**

The number of long 2 frames received with invalid CRC. .

**Transmit Error Counters**

- **Tx Drops**

The number of frames dropped due to output buffer congestion.

- **Tx Late/Exc. Coll.**

The number of frames dropped due to excessive or late collisions.

- **Tx Oversize**

The number of frames dropped due to frame oversize.

**Buttons**



**Figure 4-2: The Detailed Port Statistics buttons**

- **Auto-refresh :**

Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.

- **Refresh**

Click to refresh the page.

- **Clear**

Clears the counters for the selected port.



## 4-3 SFP Port Info

The section describes that switch could display the SFP module detail information which you connect it to the switch. The information includes: Connector type, Fiber type, wavelength, bit rate and Vendor OUI etc.

### Web Interface

To display the SFP information in the web interface:

1. Click <Port Management> and <SFP Port Info>
2. To display the SFP information

SFP Port Information Home > Port Management > SFP Port Info

Auto-refresh ☐ off Refresh Port N ▼

Port	N
Connector Type	none
Fiber Type	none
Tx Central Wavelength	none
Bit Rate	none
Vendor OUI	none
Vendor Name	none
Vendor P/N	none
Vendor Revision	none
Vendor Serial Number	none
Date Code	none
Temperature	none
Vcc	none
Mon1 (Bias)	none
Mon2 (TX PWR)	none
Mon3 (RX PWR)	none

**Figure 4-3.1: The SFP Port Information**

### Parameter description

- **Upper left scroll bar**

To scroll which port to display the Port statistics.

- **Connector Type**

Display the connector type, for instance, UTP, SC, ST, LC and so on.

- **Fiber Type**

Display the fiber mode, for instance, Multi-Mode, Single-Mode.

- **Tx Central Wavelength**

Display the fiber optical transmitting central wavelength, for instance, 850nm, 1310nm, 1550nm and so on.

- **Bit Rate**

Displays the nominal bit rate of the transceiver.

- **Vendor OUI**

Display the Manufacturer's OUI code which is assigned by IEEE.

- **Vendor Name**  
Display the company name of the module manufacturer.
- **Vendor P/N**  
Display the product name of the naming by module manufacturer.
- **Vendor Rev (Revision)**  
Display the module revision.
- **Vendor SN (Serial Number)**  
Show the serial number assigned by the manufacturer.
- **Date Code**  
Show the date this SFP module was made.
- **Temperature**  
Show the current temperature of SFP module.
- **Vcc:**  
Show the working DC voltage of SFP module.
- **Mon1(Bias) mA**  
Show the Bias current of SFP module.
- **Mon2(TX PWR)**  
Show the transmit power of SFP module.
- **Mon3(RX PWR)**  
Show the receiver power of SFP module.

#### Buttons



**Figure 4-3.2: The SFP Port Information buttons**

- **Auto-refresh**  
Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
- **Refresh**  
Click to refresh the page.

## 4-4 Energy Efficient Ethernet

EEE is an abbreviation for Energy Efficient Ethernet defined in IEEE 802.3az.

This page allows the user to inspect and configure the current EEE port settings.

EEE is a power saving option that reduces the power usage when there is very low traffic utilization (or no traffic).

EEE works by powering down circuits when there is no traffic. When a port gets data to be transmitted all circuits are powered up. The time it takes to power up the circuits is named wakeup time. The default wakeup time is 17 us for 1Gbit links and 30 us for other link speeds. EEE devices must agree upon the value of the wakeup time in order to make sure that both the receiving and transmitting device has all circuits powered up when traffic is transmitted. The devices can exchange information about the devices wakeup time using the LLDP protocol.

### Web Interface

To configure an Energy Efficient Ethernet in the web interface:

1. Click <Port Management> and <Energy Efficient Ethernet>
2. Select enable or disable Energy Efficient Ethernet by the port.
3. Click the apply to save the setting.
4. If you want to cancel the setting then you need to click the reset button. It will revert to previously saved values.

Port	Configure
1	Disabled ▾
2	Disabled ▾
N-1	Disabled ▾
N	Disabled ▾

Apply Reset

**Figure 4-4: The Energy Efficient Ethernet Configuration**

### Parameter description

- **Port**

The switch port number of the logical EEE port.

- **Configure**

Controls whether EEE is enabled for this switch port.

#### Buttons

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

## 4-5 Link Aggregation

### 4-5.1 Port

This section describes that port setting/status is used to configure the trunk property of every port in the switch system.

#### Web Interface

To configure the trunk property of each and every port in the web interface:

1. Click <Port Management>, <Link Aggregation> and select a port
2. Specify the method, group, LACP role and LACP timeout
3. Click the apply to save the setting.
4. If you want to cancel the setting then you need to click the reset button. It will revert to previously saved values.

Trunk Port Setting/Status Home > Port Management > Link Aggregation > Port

Trunk Port Setting					Trunk Port Status	
Port	Method	Group	LACP Role	LACP Timeout	Aggtr	Status
1	None	0	Active	Fast	1	Ready
2	LACP	1	Active	Fast	2	---
N-2	None	0	Active	Fast	8	---
N-1	None	0	Active	Fast	9	---
N	None	0	Active	Fast	10	---

Apply Reset

**Figure 4-5.1: The trunk port setting/status**

#### Parameter description

- **Port**

The logical port for the settings contained in the same row.

- **Method**

This determines the method a port uses to aggregate with other ports.

- ◆ **None**

A port does not want to aggregate with any other port should choose this default setting.

- ◆ **LACP**

A port use LACP as its trunk method to get aggregated with other ports also using LACP.

- ◆ **Static**

A port use Static Trunk as its trunk method to get aggregated with other ports also using Static Trunk.

- **Group**

Ports choosing the same trunking method other than "None" must be assigned a unique group number in order to declare that they wish to aggregate with each other.

- **LACP Role**

This field is only referenced when a port's trunking method is LACP.

- ◆ **Active**

An active LACP port begins to send LACPDU to its link partner right after the LACP protocol entity started to take control of this port.

- ◆ **Passive**

A passive LACP port will not actively send LACPDU out before it receives an LACPDU from its link partner.

- **LACP Timeout**

The timeout controls the period between BPDU transmissions.

- ◆ **Fast**

It will transmit LACP packets each second,

- ◆ **Slow**

It will wait for 30 seconds before sending a LACP packet.

- **Aggtr**

Aggtr is an abbreviation of "aggregator". Every port is also an aggregator, and its own aggregator ID is the same as its own port number. We can regard an aggregator as a representative of a trunking group. Ports with same group ID and using same trunking method will have the opportunity to aggregate to a particular aggregator port. This aggregator port is usually the port with the smallest port number within the trunking group.

- **Status**

This field represents the trunking status of a port which uses a trunking method other than "None". It also represents the management link status of a port which uses the "None" trunking method. "---" means "not ready"

**Buttons**

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

## 4-5.2 Aggregator View






To display the current port trunking information from the aggregator point of view.

### Web Interface

To see the LACP detail in the web interface:

1. Click Port Management, Link Aggregation and Aggregator View.
2. Click the LACP Detail.

Aggregator View Home > Port Management > Link Aggregation > Aggregator View

Aggregator View				
Aggregator	Method	Member Ports	Ready Ports	Lacp Detail
1	None	1	1	
2	LACP	2		
N-2	None	N-2		
N-1	None	N-1		
N	None	N		

[Lacp Detail](#)

**Figure 4-5.2: The Aggregator View**

### Parameter description

- **Aggregator**

It shows the aggregator ID of every port. In fact, every port is also an aggregator, and its own aggregator ID is the same as its own port number.

- **Method**

Show the method a port uses to aggregate with other ports.

- **Member Ports**

Show all member ports of an aggregator (port).

- **Ready Ports**

Show only the ready member ports within an aggregator (port).

- **Lacp Detail**

You can select the port that you want to see the LACP detail.

### Buttons

- **Lacp Detail**

Click this button then you will see the aggregator information, details will be described in the below.

Aggregator 2 Information				
Aggregator Information				
Actor		Partner		
System Priority	Mac Address	System Priority	Mac Address	
32768	00-E0-4C-00-00-00	32768	00-00-00-00-00-00	
Actor Port	Actor Key	Trunk Status	Partner Port	Partner Key
2	257	---	2	0

[Back](#)

Figure 4-5.2: The Lacp Detail

### Parameter description

#### Actor

- **System Priority**

Show the system priority part of the aggregation actor. (1-65535)

- **Mac Address**

The system ID of the aggregation actor.

- **Actor Port**

The actor's port number connected to this port.

- **Actor Key**

The key that the actor has assigned to this aggregation ID.

#### Partner

- **System Priority**

Show the system priority part of the aggregation partner. (1-65535)

- **Mac Address**

The system ID of the aggregation partner.

- **Partner Port**

The partner's port number connected to this port.

- **Partner Key**

The key that the partner has assigned to this aggregation ID.

- **Trunk Status**

This field represents the trunking status of a port which uses a trunking method other than "None". It also represents the management link status of a port which uses the "None" trunking method. "---" means "not ready"

#### Button

- **Back**

Click to undo any changes made locally and return to the users.

## 4-5.3 Aggregation Hash Mode

### Web Interface

To configure the aggregation hash mode in the web interface:

1. Click <Port Management>, <Link Aggregation> and <Aggregator Hash Mode>
2. Click <Hash Code Contributors> to select the mode
3. Click the apply to save the setting.
4. If you want to cancel the setting then you need to click the reset button. It will revert to previously saved values.

Figure 4-5.3: Aggregation Hash Mode

### Parameter description

#### Hash Code Contributors

- **src-mac**  
Source MAC Address  
The Source MAC address can be used to calculate the destination port for the frame. Check to enable the use of the Source MAC address, or uncheck to disable. By default, Source MAC Address is enabled.
- **dst-mac**  
Destination MAC Address  
The Destination MAC Address can be used to calculate the destination port for the frame. Check to enable the use of the Destination MAC Address, or uncheck to disable. By default, Destination MAC Address is disabled.
- **ip**  
IP Address  
The IP address can be used to calculate the destination port for the frame. Check to enable the use of the IP Address, or uncheck to disable. By default, IP Address is enabled.
- **src-dst-mac**  
Source MAC Address + Destination MAC Address.
- **src-ip**  
Source IP Address.
- **dst-ip**  
Destination IP Address.
- **src-dst-ip**  
Source IP Address + Destination IP Address.



**Buttons**

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

## 4-5.4 LACP System Priority

It is used to set the priority part of the LACP system ID. LACP will only aggregate together the ports whose peer link partners are all on a single system. Each system supports LACP will be assigned a globally unique System Identifier for this purpose. A system ID is a 64-bit field comprising a 48-bit MAC Address and 16-bit priority value. The system priority can be set by the user. Its range is from 1 to 65535. Default: 32768

### Web Interface

To configure the LACP System Priority in the web interface:

1. Click <Port Management>, <Link Aggregation> and <LACP System Priority>
2. Specify the <LACP System Priority>
3. Click the apply to save the setting.
4. If you want to cancel the setting then you need to click the reset button. It will revert to previously saved values.

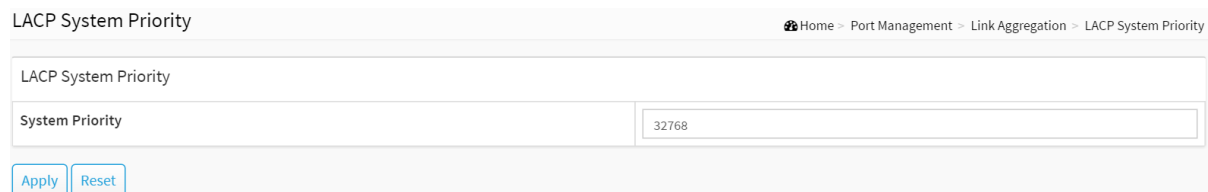


Figure 4-5.4: The LACP System Priority

### Parameter description

- **System Priority**

1-65535.

Show the System Priority part of a system ID.

#### Buttons

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

## 4-6 Loop Protection

### 4-6.1 Configuration

The Loop Protection is used to detect the presence of traffic. When switch receives packet's (looping detection frame) MAC address the same as oneself from port, show Loop Protection happens. The port will be locked when it received the looping Protection frames. If you want to resume the locked port, please find out the looping path and take off the looping path, then select the resume the locked port and click on "Resume" to turn on the locked ports.

#### Web Interface

To configure the Loop Protection parameters in the web interface:

1. Click <Port Management>, <Loop Protection> and <Configuration>
2. Evoke to select enable or disable the port loop protection
3. Click the apply to save the setting
4. If you want to cancel the setting then you need to click the reset button. It will revert to previously saved values

Loop Protection Configuration Home > Port Management > Loop Protection > Configuration

---

**Global Configuration**

Enable Loop Protection	<input type="radio"/> off
Transmission Time	<input type="text" value="5"/> seconds
Shutdown Time	<input type="text" value="180"/> seconds

---

**Port Configuration**

Port	Enable	Action	Tx Mode
1	<input checked="" type="checkbox"/>	Shutdown Port	Enable
2	<input checked="" type="checkbox"/>	Shutdown Port	Enable
N-2	<input checked="" type="checkbox"/>	Shutdown Port	Enable
N-1	<input checked="" type="checkbox"/>	Shutdown Port	Enable
N	<input checked="" type="checkbox"/>	Shutdown Port	Enable

**Figure 4-6.1: The Loop Protection Configuration**

#### Parameter description

##### Global Configuration

- **Enable Loop Protection**

Controls whether loop protections is enabled (as a whole).

- **Transmission Time**

The interval between each loop protection PDU sent on each port. Valid values are 1 to 10 seconds.

- **Shutdown Time**

The period (in seconds) for which a port will be kept disabled in the event of a loop is detected (and the port action shuts down the port). Valid values are 10 to 604800 seconds (7 days).

**Port Configuration**

- **Port**

The switch port number of the port.

- **Enable**

Controls whether loop protection is enabled on this switch port

- **Action**

Configures the action performed when a loop is detected on a port. Valid values are Shutdown Port, Shutdown Port and Log or Log Only.

- **Tx Mode**

Controls whether the port is actively generating loop protection PDU's, or whether it is just passively looking for looped PDU's.

**Buttons**

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

## 4-6.2 Status

This section displays the loop protection port status the ports of the currently selected switch.

### Web Interface

To display the Loop Protection status in the web interface:

1. Click <Port Management>, <Loop Protection> and <Status>
2. If you want to auto-refresh the information then you need to evoke the <Auto refresh>.
3. Click <Refresh> to refresh the status.

Loop Protection Status Home > Port Management > Loop Protection > Status

Auto-refresh ☐ off [Refresh](#)

Port	Action	Transmit	Loops	Status	Loop	Time of Last Loop
1	Shutdown	Enabled	0	Down	-	-
2	Shutdown	Enabled	0	Down	-	-
3	Shutdown	Enabled	0	Down	-	-
N-2	Shutdown	Enabled	0	Down	-	-
N-1	Shutdown	Enabled	0	Up	-	-
N	Shutdown	Enabled	0	Down	-	-

**Figure 4-6.2.1: Loop Protection Status**

### Parameter description

- **Port**  
The switch port number of the logical port.
- **Action**  
The currently configured port action.
- **Transmit**  
The currently configured port transmit mode.
- **Loops**  
The number of loops detected on this port.
- **Status**  
The current loop protection status of the port.
- **Loop**  
Whether a loop is currently detected on the port.
- **Time of Last Loop**  
The time of the last loop event detected.

**Buttons****Figure 4-6.2.2: Loop Protection Status buttons**

- **Auto-refresh**  
Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
- **Refresh**  
Click to refresh the page immediately.

## 5. VLAN Management

### 5-1 VLAN Configuration

To assign a specific VLAN for management purpose. The management VLAN is used to establish an IP connection to the switch from a workstation connected to a port in the VLAN. This connection supports a VSM, SNMP, and Telnet session. By default, the active management VLAN is VLAN 1, but you can designate any VLAN as the management VLAN using the Management VLAN window. Only one management VLAN can be active at a time.

When you specify a new management VLAN, your HTTP connection to the old management VLAN is lost. For this reason, you should have a connection between your management station and a port in the new management VLAN or connect to the new management VLAN through a multi-VLAN route

#### Web Interface

To configure VLAN membership configuration in the web interface:

1. Click <VLAN Management> and <VLAN Configuration>
2. Specify existing VLANs and Ether type for custom S-ports
3. Click <Apply>

VLAN Configuration Home > VLAN Management > VLAN Configuration

---

Global VLAN Configuration

Allowed Access VLANs	1
Ethertype for Custom S-ports	88a8

---

Port VLAN Configuration

Port	Mode	Port VLAN	Port Type	Ingress Filtering	Ingress Acceptance	Egress Tagging	Allowed VLANs
1	Access	1	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag Port VLAN	1
2	Access	1	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag Port VLAN	1
N-1	Access	1	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag Port VLAN	1
N	Access	1	C-Port	<input checked="" type="checkbox"/>	Tagged and Untagged	Untag Port VLAN	1

**Figure 5-1: The VLAN Configuration**

## Parameter description

### Global VLAN Configuration

- **Allowed Access VLANs**

This field shows the VLANs that are created on the switch.

By default, only VLAN 1 exists. More VLANs may be created by using a list syntax where the individual elements are separated by commas. Ranges are specified with a dash separating the lower and upper bound.

The following example will create VLANs 1, 10, 11, 12, 13, 200, and 300: 1,10-13,200,300. Spaces are allowed in between the delimiters.

- **Ethertype for Custom S-ports**

This field specifies the ethertype/TPID (specified in hexadecimal) used for Custom S-ports. The setting is in force for all ports whose Port Type is set to S-Custom-Port.

### Port VLAN Configuration

- **Port**

This is the logical port number of this row.

- **Mode**

The port mode (default is Access) determines the fundamental behavior of the port in question. A port can be in one of three modes as described below. Whenever a particular mode is selected, the remaining fields in that row will be either grayed out or made changeable depending on the mode in question. Grayed out fields show the value that the port will get when the mode is applied.

#### Access

Access ports are normally used to connect to end stations. Dynamic features like Voice VLAN may add the port to more VLANs behind the scenes. Access ports have the following characteristics:

- Member of exactly one VLAN, the Port VLAN (a.k.a. Access VLAN), which by default is 1,
- accepts untagged frames and C-tagged frames,
- discards all frames that are not classified to the Access VLAN,
- on egress all frames are transmitted untagged.

#### Trunk

Trunk ports can carry traffic on multiple VLANs simultaneously, and are normally used to connect to other switches. Trunk ports have the following characteristics:

- By default, a trunk port is member of all existing VLANs. This may be limited by the use of Allowed VLANs,
- unless VLAN Trunking is enabled on the port, frames classified to a VLAN that the port is not a member of will be discarded,
- by default, all frames but frames classified to the Port VLAN (a.k.a. Native VLAN) get tagged on egress. Frames classified to the Port VLAN do not get C-tagged on egress,
- egress tagging can be changed to tag all frames, in which case only tagged frames are accepted on ingress,
- VLAN trunking may be enabled.



**Hybrid**

Hybrid ports resemble trunk ports in many ways, but adds additional port configuration features. In addition to the characteristics described for trunk ports, hybrid ports have these abilities:

- Can be configured to be VLAN tag unaware, C-tag aware, S-tag aware, or S-custom-tag aware,
- ingress filtering can be controlled,
- ingress acceptance of frames and configuration of egress tagging can be configured independently.

**● Port VLAN**

Determines the port's VLAN ID (a.k.a. PVID). Allowed VLANs are in the range 1 through 4095, default being 1.

On ingress, frames get classified to the Port VLAN if the port is configured as VLAN unaware, the frame is untagged, or VLAN awareness is enabled on the port, but the frame is priority tagged (VLAN ID = 0).

On egress, frames classified to the Port VLAN do not get tagged if Egress Tagging configuration is set to untag Port VLAN.

The Port VLAN is called an "Access VLAN" for ports in Access mode and Native VLAN for ports in Trunk or Hybrid mode.

**● Port Type**

Ports in hybrid mode allow for changing the port type, that is, whether a frame's VLAN tag is used to classify the frame on ingress to a particular VLAN, and if so, which TPID it reacts on. Likewise, on egress, the Port Type determines the TPID of the tag, if a tag is required.

**Unaware**

On ingress, all frames, whether carrying a VLAN tag or not, get classified to the Port VLAN, and possible tags are not removed on egress.

**C-Port**

On ingress, frames with a VLAN tag with TPID = 0x8100 get classified to the VLAN ID embedded in the tag. If a frame is untagged or priority tagged, the frame gets classified to the Port VLAN. If frames must be tagged on egress, they will be tagged with a C-tag.

**S-Port**

On ingress, frames with a VLAN tag with TPID = 0x8100 or 0x88A8 get classified to the VLAN ID embedded in the tag. If a frame is untagged or priority tagged, the frame gets classified to the Port VLAN. If frames must be tagged on egress, they will be tagged with an S-tag.

**S-Custom-Port**

On ingress, frames with a VLAN tag with a TPID = 0x8100 or equal to the [Ethertype configured for Custom-S ports](#) get classified to the VLAN ID embedded in the tag. If a frame is untagged or priority tagged, the frame gets classified to the Port VLAN. If frames must be tagged on egress, they will be tagged with the custom S-tag.

**● Ingress Filtering**

Hybrid ports allow for changing ingress filtering. Access and Trunk ports always have ingress filtering enabled.

If ingress filtering is enabled (checkbox is checked), frames classified to a VLAN that the port is not a member of get discarded.

If ingress filtering is disabled, frames classified to a VLAN that the port is not a member of are accepted and forwarded to the switch engine. However, the port will never transmit frames classified to VLANs that it is not a member of.

- **VLAN Trunking**

Trunk and Hybrid ports allow for enabling VLAN trunking.

When VLAN trunking is enabled, frames classified to unknown VLANs are accepted on the port whether ingress filtering is enabled or not.

This is useful in scenarios where a cloud of intermediary switches must bridge VLANs that haven't been created. By configuring the ports that connect the cloud of switches as trunking ports, they can seamlessly carry those VLANs from one end to the other.

- **Ingress Acceptance**

Hybrid ports allow for changing the type of frames that are accepted on ingress.

**Tagged and untagged**

both tagged and untagged frames are accepted.

**Tagged Only**

Only tagged frames are accepted on ingress. Untagged frames are discarded.

**Untagged Only**

Only untagged frames are accepted on ingress. Tagged frames are discarded.

- **Egress Tagging**

Ports in Trunk and Hybrid mode may control the tagging of frames on egress.

**Untag Port VLAN**

Frames classified to the Port VLAN are transmitted untagged. Other frames are transmitted with the relevant tag.

**Tag All**

All frames, whether classified to the Port VLAN or not, are transmitted with a tag.

**Untag All**

All frames, whether classified to the Port VLAN or not, are transmitted without a tag.

This option is only available for ports in Hybrid mode.

- **Allowed VLANs**

Ports in Trunk and Hybrid mode may control which VLANs they are allowed to become members of. Access ports can only be member of one VLAN, the Access VLAN.

The field's syntax is identical to the syntax used in the Existing VLANs field. By default, a port may become member of all possible VLANs, and is therefore set to 1-4095.

The field may be left empty, which means that the port will not be member of any of the existing VLANs, but if it is configured for VLAN Trunking it will still be able to carry all unknown VLANs.

**Buttons**

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

## 5-2 VLAN Membership

This page provides an overview of membership status of VLAN users. The ports belong to the currently selected stack unit, as reflected by the page header.

### Web Interface

To configure VLAN membership configuration in the web interface:

1. Click <VLAN Management> and <VLAN Membership>
2. Scroll the bar to choice which VLANs would like to show up.
3. Click <Refresh> to update the state.

VLAN Membership Status

Home > VLAN Management > VLAN Membership

Auto-refresh ☐ off

Show 10 entries Admin Search:

VLAN ID	Port Members									
	1	2	3	4	5	6	7	8	N-1	N
1	U	U	U	U	U	U	U	U	U	U

Previous 1 Next

**Figure 5-2.1: The VLAN Membership**

### Parameter description

#### ● VLAN USER

Various internal software modules may use VLAN services to configure VLAN memberships on the fly.

The drop-down list on the right allows for selecting between showing VLAN memberships as configured by an administrator (Admin) or as configured by one of these internal software modules.

The "Combined" entry will show a combination of the administrator and internal software modules configuration, and basically reflects what is actually configured in hardware.

VLAN User module uses services of the VLAN management functionality to configure VLAN memberships and VLAN port configurations such as PVID and UVID. Currently we support the following VLAN user types:

**NAS:** NAS provides port-based authentication, which involves communications between a Supplicant, Authenticator, and an Authentication Server.

**GVRP:** Adjacent VLAN-aware devices can exchange VLAN information with each other by using Generic VLAN Registration Protocol (GVRP). GVRP is based on the Generic Attribute Registration Protocol (GARP) and propagates VLAN information throughout a bridged network.

**MVR:** MVR is used to eliminate the need to duplicate multicast traffic for subscribers in each VLAN. Multicast traffic for all channels is sent only on a single (multicast) VLAN.

**Voice VLAN:** Voice VLAN is a VLAN configured specially for voice traffic typically originating from IP phones.

**MSTP:** The 802.1s Multiple Spanning Tree protocol (MSTP) uses VLANs to create multiple spanning trees in a network, which significantly improves network resource utilization while maintaining a loop-free environment.

**DMS:** Shows DMS VLAN membership status.





**VCL** Shows MAC-based VLAN entries configured by various MAC-based VLAN users.

- **VLAN ID**

VLAN ID for which the Port members are displayed.

- **Port Members**

A row of check boxes for each port is displayed for each VLAN ID.

 
If a port is included in a VLAN, an image  and  will be displayed. Shows egress filtering frame status whether tagged or untagged. Frames classified to the Port VLAN are transmitted tagged (  ) or untagged(  ).

- **VLAN Membership**

The VLAN Membership Status Page shall show the current VLAN port members for all VLANs configured by a selected VLAN User (selection shall be allowed by a Combo Box). When combined Users are selected, it shall show this information for all the VLAN Users, and this is by default. VLAN membership allows the frames classified to the VLAN ID to be forwarded on the respective VLAN member ports.

- **Show entries**

You can choose how many items you want to show up.



You can choose the Vlan User.

- **Search**

You can search for the information that you want to see.

**Buttons**



**Figure 5-2.1: The VLAN Membership buttons**

- **Auto-refresh**

Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.

- **Refresh**

Click to refresh the page.

- **Clear**

Click to clear the page.

- **Next**

Updates the system log entries, turn to the next page.

- **Previous**

Updates the system log entries, turn to the previous page.

## 5-3 VLAN Port Status

The port status gathers the information of all VLAN status and reports it by the order of Combined, Admin, NAS, GVRP, MVR, Voice VLAN, MSTP, DMS, VCL.

### Web Interface

To display VLAN port status in the web interface:

1. Click <VLAN Management> and <VLAN Port Status>
2. Specify the Combined, Admin, NAS, GVRP, MVR, Voice VLAN, MSTP, DMS, VCL.
3. Display <Port Status> information

Port	Port Type	Ingress Filter	Frame Type	Port VLAN ID	Tx Tag
1	C-Port	true	All	1	None
2	C-Port	true	All	1	None
N-1	C-Port	true	All	1	None
N	C-Port	true	All	1	None

**Figure 5-3.1: The VLAN Port Status**

### Parameter description

#### ● VLAN USER

VLAN User module uses services of the VLAN management functionality to configure VLAN memberships and VLAN port configuration such as PVID, UVID. Currently we support following VLAN User types:

**NAS:** NAS provides port-based authentication, which involves communications between a Supplicant, Authenticator, and an Authentication Server.

**GVRP:** Adjacent VLAN-aware devices can exchange VLAN information with each other by using Generic VLAN Registration Protocol (GVRP). GVRP is based on the Generic Attribute Registration Protocol (GARP) and propagates VLAN information throughout a bridged network.

**MVR:** MVR is used to eliminate the need to duplicate multicast traffic for subscribers in each VLAN. Multicast traffic for all channels is sent only on a single (multicast) VLAN.

**Voice VLAN:** Voice VLAN is a VLAN configured specially for voice traffic typically originating from IP phones.

**MSTP:** The 802.1s Multiple Spanning Tree protocol (MSTP) uses VLANs to create multiple spanning trees in a network, which significantly improves network resource utilization while maintaining a loop-free environment.

**DMS:** Shows DMS VLAN membership status.

**VCL:** shows MAC-based VLAN entries configured by various MAC-based VLAN users.

#### ● Port

The logical port for the settings contained in the same row.

- **Port Type**

Shows the Port Type. Port type can be any of Unaware, C-port, S-port, Custom S-port.

If Port Type is Unaware, all frames are classified to the Port VLAN ID and tags are not removed. C-port is Customer Port. S-port is Service port. Custom S-port is S-port with Custom TPID.

- **Ingress Filtering**

Shows the ingress filtering on a port. This parameter affects VLAN ingress processing. If ingress filtering is enabled and the ingress port is not a member of the classified VLAN, the frame is discarded.

- **Frame Type**

Shows whether the port accepts all frames or only tagged frames. This parameter affects VLAN ingress processing. If the port only accepts tagged frames, untagged frames received on that port are discarded.

- **Port VLAN ID**

Shows the Port VLAN ID (PVID) that a given user wants the port to have.

The field is empty if not overridden by the selected user.

- **Tx Tag**

Shows egress filtering frame status whether tagged or untagged.

- Admin ▾

You can choose the Vlan User.

**Buttons**



**Figure 5-3.2: The VLAN Port Status buttons**

- **Auto-refresh**

Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.

- **Refresh**

Click to refresh the page.

- **Clear**

Click to clear the page.

## 5-4 VLAN Selective QinQ Configuration

A Q-in-Q VLAN tunnel enables a service provider to segregate the traffic of different customers in their infrastructure, while still giving the customer a full range of VLANs for their internal use by adding a second 802.1Q tag to an already tagged frame.

### Web Interface

To configure VLAN selective Q-in-Q in the web interface:

1. Click VLAN Management and VLAN Selective QinQ Configuration.
2. Click "Add New Entry".
3. Specify CVID, SPID, Port Members.
4. Click Apply.

VLAN Selective QinQ Configuration Home > VLAN Management > VLAN Selective QinQ

Delete	CVID	SPID	Port Members									
			1	2	3	4	5	6	7	N-1	N	
Table is Empty												

**Add New Entry**

Apply Reset

---

VLAN Selective QinQ Configuration Home > VLAN Management > VLAN Selective QinQ

Delete	CVID	SPID	Port Members									
			1	2	3	4	5	6	7	N-1	N	
<input type="checkbox"/>	<input type="text"/>	<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

**Add New Entry**

Apply Reset

**Figure 5-4: The VLAN Selective QinQ Configuration**

### Parameter description

- **CVID**

1-4095, The customer VLAN ID List to which the tagged packets will be added.

- **SPID**

1-4095, This configures the VLAN to join the Service Providers VLAN as a tagged member

- **Port Members**

Checkmarks indicate which ports are members of the entry. Check or uncheck as needed to modify the entry.

### Buttons

- **Delete**

To delete a QinQ configuration entry, check this box. The entry will be deleted during the next Save.

- **Add New Entry**

Click to add a new QinQ configuration.

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.



## 5-5 MAC-based VLAN

### 5-5.1 Configuration

MAC address-based VLAN decides the VLAN for forwarding an untagged frame based on the source MAC address of the frame.

A most common way of grouping VLAN members is by port, hence the name port-based VLAN. Typically, the device adds the same VLAN tag to untagged packets that are received through the same port. Later on, these packets can be forwarded in the same VLAN. Port-based VLAN is easy to configure, and applies to networks where the locations of terminal devices are relatively fixed. As mobile office and wireless network access gain more popularity, the ports that terminal devices use to access the networks are very often non-fixed. A device may access a network through Port A this time, but through Port B the next time. If Port A and Port B belong to different VLANs, the device will be assigned to a different VLAN the next time it accesses the network. As a result, it will not be able to use the resources in the old VLAN. On the other hand, if Port A and Port B belong to the same VLAN, after terminal devices access the network through Port B, they will have access to the same resources as those accessing the network through Port A do, which brings security issues. To provide user access and ensure data security in the meantime, the MAC-based VLAN technology is developed.

MAC-based VLANs group VLAN members by MAC address. With MAC-based VLAN configured, the device adds a VLAN tag to an untagged frame according to its source MAC address. MAC-based VLANs are mostly used in conjunction with security technologies such as 802.1X to provide secure, flexible network access for terminal devices.

### Web Interface

To configure MAC address-based VLAN configuration in the web interface:

1. Click <VLAN Management>, <MAC-based VLAN> and <Configuration>
2. Click <Add New Entry>
3. Specify the MAC address and VLAN ID
4. Click <Apply>

MAC-based VLAN Membership Configuration

Home > VLAN Management > MAC-based VLAN

Delete	MAC Address	VLAN ID
<input type="button" value="Delete"/>	<input type="text"/>	<input type="text"/>

MAC-based VLAN Membership Configuration

Home > VLAN Management > MAC-based VLAN

Delete	MAC Address	VLAN ID
<input type="button" value="Delete"/>	<input type="text"/>	<input type="text"/>

**Figure 5-5.1: The MAC-based VLAN Configuration**

### Parameter description

- **MAC Address**

Indicates the MAC address.

- **VLAN ID**

Indicates the VLAN ID.

- Buttons**

- **Adding New Entry**

Click to add a new MAC-based VLAN entry. An empty row is added to the table, and the MAC-based VLAN entry can be configured as needed. Any unicast MAC address can be configured for the MAC-based VLAN entry. No broadcast or multicast MAC addresses are allowed. Legal values for a VLAN ID are 1 through 4095.

The MAC-based VLAN entry is enabled on the selected stack switch unit when you click on "Save". A MAC-based VLAN without any port members on any stack unit will be deleted when you click "Save".

The button can be used to undo the addition of new MAC-based VLANs.

- **Delete**

To delete a MAC-based VLAN entry, check this box and press save. The entry will be deleted on the selected switch in the stack.

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

## 5-5.2 Status

Show the MAC-based VLAN status.

### Web Interface

To Display MAC address-based VLAN configuration in the web interface:

1. Click <VLAN Management>, <MAC-based VLAN> and <Status>
2. If you want to auto-refresh the information then you need to evoke the <Auto-refresh>.
3. Click <Refresh> to refresh the MAC-based VLAN membership status.

MAC-based VLAN Membership Status Home > VLAN Management > MAC-based VLAN > Status

Auto-refresh ☐ off [Refresh](#)

MAC Address	VLAN ID	User
00-0A-02-0B-03-0C	1	Static

**Figure 5-5.2.1: The MAC-based VLAN Configuration**

### Parameter description

- **MAC Address**  
Indicates the MAC address.
- **VLAN ID**  
Indicates the VLAN ID.
- **User**  
Indicates the user.

### Buttons



**Figure 5-5.2.2: The MAC-based VLAN Configuration buttons**

- **Auto-refresh**  
Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
- **Refresh**  
Click to refresh the page immediately.

## 5-6 Protocol-based VLAN

This section describe Protocol -based VLAN, The Switch support Protocol include Ethernet LLC SNAP Protocol,

### LLC

The Logical Link Control (LLC) data communication protocol layer is the upper sub-layer of the Data Link Layer (which is itself layer 2, just above the Physical Layer) in the seven-layer OSI reference model. It provides multiplexing mechanisms that make it possible for several network protocols (IP, IPX, Decnet and Appletalk) to coexist within a multipoint network and to be transported over the same network media, and can also provide flow control and automatic repeat request (ARQ) error management mechanisms.

### SNAP

The Subnetwork Access Protocol (SNAP) is a mechanism for multiplexing, on networks using IEEE 802.2 LLC, more protocols than can be distinguished by the 8-bit 802.2 Service Access Point (SAP) fields. SNAP supports identifying protocols by Ethernet type field values; it also supports vendor-private protocol identifier spaces. It is used with IEEE 802.3, IEEE 802.4, IEEE 802.5, IEEE 802.11 and other IEEE 802 physical network layers, as well as with non-IEEE 802 physical network layers such as FDDI that use 802.2 LLC.

### 5-6.1 Protocol to Group

This page allows you to add new protocols to Group Name (unique for each Group) mapping entries as well as allow you to see and delete already mapped entries for the selected stack switch unit switch.

### Web Interface

To configure protocol-based VLAN configuration in the web interface:

1. Click <VLAN Management>, <Protocol-based VLAN> and <Protocol to Group>
2. Click <Add New Entry>
3. Specify the Ethernet LLC SNAP protocol, value and group name
4. Click <Apply>

Protocol to Group Mapping Table

Home > VLAN Management > Protocol-based VLAN > Protocol to Group

Delete	Frame Type	Value	Group Name
<input type="button" value="Delete"/>	Ethernet	Etype: 0x 0800	

Protocol to Group Mapping Table

Home > VLAN Management > Protocol-based VLAN > Protocol to Group

Delete	Frame Type	Value	Group Name
<input type="button" value="Delete"/>	Ethernet	Etype: 0x 0800	

**Figure 5-6.1: The Protocol to Group Mapping Table**

## Parameter description

### ● Frame Type

Frame Type can have one of the following values:

1. **Ethernet**
2. **LLC**
3. **SNAP**



**NOTE:** On changing the Frame type field, valid value of the following text field will vary depending on the new frame type you selected.

### ● Value

Valid value that can be entered in this text field depends on the option selected from the the preceding Frame Type selection menu.

Below is the criteria for three different Frame Types:

1. **For Ethernet:** Values in the text field when Ethernet is selected as a Frame Type is called etype. Valid values for etype ranges from 0x0600-0xffff
2. **For LLC:** Valid value in this case is comprised of two different sub-values.
  - a. DSAP: 1-byte long string (0x00-0xff)
  - b. SSAP: 1-byte long string (0x00-0xff)
3. **For SNAP:** Valid value in this case also is comprised of two different sub-values.
  - a. OUI: OUI (Organizationally Unique Identifier) is value in format of xx-xx-xx where each pair (xx) in string is a hexadecimal value ranges from 0x00-0xff.
  - b. PID: If the OUI is hexadecimal 000000, the protocol ID is the Ethernet type (EtherType) field value for the protocol running on top of SNAP; if the OUI is an OUI for a particular organization, the protocol ID is a value assigned by that organization to the protocol running on top of SNAP. In other words, if value of OUI field is 00-00-00 then value of PID will be etype (0x0600-0xffff) and if value of OUI is other than 00-00-00 then valid value of PID will be any value from 0x0000 to 0xffff.

### ● Group Name

A valid Group Name is a unique 16-character long string.



**NOTE:** Special character and underscore ( ) are not allowed.

## Buttons

### ● Delete

To delete a Protocol to Group Name map entry, check this box. The entry will be deleted on the switch during the next Save.

### ● Adding New Entry

Click to add a new entry in mapping table. An empty row is added to the table; Frame Type, Value and the Group Name can be configured as needed. The button can be used to undo the addition of new entry.

### ● Apply

Click to save changes.

### ● Reset

Click to undo any changes made locally and revert to previously saved values.

## 5-6.2 Group to VLAN

This section allows you to map an already configured group name to a VLAN for the selected stack switch unit switch.

### Web Interface

The "Group Name to VLAN Mapping Table" is configured as followed:

1. Click <VLAN Management>, <Protocol-based VLAN> and <Group to Group>
2. Click <Add New Entry>
3. Specify the group name and VLAN ID
4. Click <Apply>

Group Name to VLAN mapping Table

Home > VLAN Management > Protocol-based VLAN > Group to VLAN

Delete	Group Name	VLAN ID	Port Members									
			1	2	3	4	5	6	7	N-1	N	
<input type="button" value="Delete"/>	<input type="text"/>	<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	

Apply Reset **Add New Entry**

Group Name to VLAN mapping Table

Home > VLAN Management > Protocol-based VLAN > Group to VLAN

Delete	Group Name	VLAN ID	Port Members									
			1	2	3	4	5	6	7	N-1	N	
<input type="button" value="Delete"/>	<input type="text"/>	<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	

Apply Reset **Add New Entry**

**Figure 5-6.2: The Group Name of VLAN Mapping Table**

### Parameter description

- **Group Name**

A valid Group Name is a string of almost 16 characters.

- **VLAN ID**

Indicates the ID to which group name will be mapped. Valid ID range: 1-4095

- **Port Members**

A row of check boxes for each port is displayed for each Group Name to VLAN ID mapping. To include a port in a mapping, check the box. To remove or exclude the port from the mapping, make sure the box is unchecked. By default, no ports are members, and all boxes are unchecked.

### Buttons

- **Delete**

To delete a Group Name to VLAN map entry, check this box. The entry will be deleted on the switch during the next Save

- **Adding New Entry**

Click to add a new entry in mapping table. An empty row is added to the table, the Group Name, VLAN ID and port members can be configured as needed. Legal values for a VLAN ID are 1 through 4095. The button can be used to undo the addition of new entry.

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

## 5-7 IP Subnet-based VLAN

The IP subnet-based VLAN entries can be configured here. This page allows for adding, updating and deleting IP subnet-based VLAN entries and assigning the entries to different ports. This page shows only static entries.

### Web Interface

To configure IP subnet-based VLAN membership in the web interface:

1. Click <VLAN Management> and <IP Subnet-based VLAN>
2. Click <Add New Entry>
3. Specify IP address, mask length and VLAN ID.
4. Click <Apply>

IP Subnet-based VLAN Membership Configuration

Home > VLAN Management > IP Subnet-based VLAN

Delete	IP Address	Mask Length	VLAN ID
<input type="button" value="Delete"/>		24	1

Apply Reset Add New Entry

IP Subnet-based VLAN Membership Configuration

Home > VLAN Management > IP Subnet-based VLAN

Delete	IP Address	Mask Length	VLAN ID
<input type="button" value="Delete"/>		24	1

Apply Reset Add New Entry

**Figure 5-7: IP Subnet-based VLAN Membership Configuration**

### Parameter description

- **IP Address**

Indicates the IP address.

- **Mask Length**

Indicates the network mask length.

- **VLAN ID**

Indicates the VLAN ID. VLAN ID can be changed for the existing entries.

### Buttons

- **Delete**

To delete an IP subnet-based VLAN entry, check this box and press save. The entry will be deleted on the selected switch in the stack.

- **Adding New Entry**

Click "Add New Entry" to add a new IP subnet-based VLAN entry. An empty row is added to the table, and the IP subnet-based VLAN entry can be configured as needed. Any IP address/mask can be configured for the IP subnet-based VLAN entry. Legal values for a VLAN ID are 1 through 4095.

The IP subnet-based VLAN entry is enabled on the selected stack switch unit when you click on "Save". The "Delete" button can be used to undo the addition of new IP subnet-based VLANs. The maximum possible IP subnet-based VLAN entries are limited to 128.

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

## 5-8 Private VLAN

The Private VLAN membership configurations for the switch can be monitored and modified here. Private VLANs can be added or deleted here. Port members of each Private VLAN can be added or removed here.

Private VLANs are based on the source port mask, and there are no connections to VLANs. This means that VLAN IDs and Private VLAN IDs can be identical.

A port must be a member of both a VLAN and a Private VLAN to be able to forward packets. By default, all ports are VLAN unaware and members of VLAN 1 and Private VLAN 1.

A VLAN unaware port can only be a member of one VLAN, but it can be a member of multiple Private VLANs.

VLAN Priority: Voice VLAN > MAC based VLAN > Protocol based VLAN > Tag based VLAN

### Web Interface

To configure port isolation in the web interface:

1. Click <VLAN Management> and <Private VLAN>
2. Configure the Private VLAN membership settings for the switch
3. Click <Apply>

Private VLAN Membership Configuration Home > VLAN Management > Private VLAN

Delete	PVLAN ID	Port Members									
		1	2	3	4	5	6	7	8	N-1	N
<input type="checkbox"/>	<input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

**Figure 5-8: The Private VLAN Configuration**

### Parameter description

- **Delete**

To delete a private VLAN entry, check this box. The entry will be deleted during the next apply.

- **Private VLAN ID**

Indicates the ID of this particular private VLAN.

- **Port Members**

A row of check boxes for each port is displayed for each private VLAN ID. To include a port in a Private VLAN, check the box. To remove or exclude the port from the Private VLAN, make sure the box is unchecked. By default, no ports are members, and all boxes are unchecked.



- **Adding New Private VLAN**

Click to add a new private VLAN ID. An empty row is added to the table, and the private VLAN can be configured as needed. The allowed range for a private VLAN ID is the same as the switch port number range. Any values outside this range are not accepted, and a warning message appears. Click "OK" to discard the incorrect entry, or click "Cancel" to return to the editing and make a correction.

The Private VLAN is enabled when you click "Apply".

The button can be used to undo the addition of new Private VLANs.

#### **Buttons**

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

## 5-9 Port Isolation

Port Isolation provides for an apparatus and method to isolate ports on layer 2 switches on the same VLAN to restrict traffic flow. The apparatus comprises a switch having said plurality of ports, each port configured as a protected port or a non-protected port. An address table memory stores an address table having a destination address and port number pair. A forwarding map generator generates a forwarding map which is responsive to a destination address of a data packet. The method for isolating ports on a layer 2 switch comprises configuring each of the ports on the layer 2 switch as a protected port or a non-protected port. A destination address on a data packet is matched with a physical address on said layer 2 switch and a forwarding map is generated for the data packet based upon the destination address on the data packet. The data packet is then sent to the plurality of ports pursuant to the forwarding map generated based upon whether the ingress port was configured as a protected or non-protected port.

This page is used for enabling or disabling port isolation on ports in a Private VLAN. A port member of a VLAN can be isolated to other isolated ports on the same VLAN and Private VLAN.

### Web Interface

To configure port isolation configuration in the web interface:

1. Click <VLAN Management> and <Port Isolation>
2. Evoke which port want to enable <Port Isolation>
3. Click <Apply>

Port Isolation Configuration Home > VLAN Management > Port Isolation

Port Number									
1	2	3	4	5	6	7	8	N-1	N
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

**Figure 5-9: The Port Isolation Configuration**

### Parameter description

#### ● Port Numbers

A check box is provided for each port of a private VLAN. When checked, port isolation is enabled on that port. When unchecked, port isolation is disabled on that port. By default, port isolation is disabled on all ports.

#### Buttons

#### ● Apply

Click to save changes.

#### ● Reset

Click to undo any changes made locally and revert to previously saved values.

## 5-10 Voice VLAN

Voice VLAN is VLAN configured specially for voice traffic. By adding the ports with voice devices attached to voice VLAN, we can perform QoS-related configuration for voice data, ensuring the transmission priority of voice traffic and voice quality.

### 5-10.1 Configuration

The Voice VLAN feature enables voice traffic forwarding on the Voice VLAN, then the switch can classify and schedule network traffic. It is recommended that there be two VLANs on a port - one for voice, one for data. Before connecting the IP device to the switch, the IP phone should configure the voice VLAN ID correctly. It should be configured through its own GUI.

#### Web Interface

To configure Voice VLAN in the web interface:

1. Click <VLAN Management> and <Voice VLAN Configuration>
2. Click <Add New Entry>
3. Select port members in the <Voice VLAN Configuration>
4. Specify VLAN ID, aging time and traffic
5. Specify mode, security, discovery protocol in the port configuration
6. Click <Apply>

Voice VLAN Configuration Home > VLAN Management > Voice VLAN > Configuration

				Port Members									
Delete	VLAN ID	Aging Time	Traffic	1	2	3	4	5	6	7	8	N-1	N
<a href="#">Delete</a>	<input type="text" value="1000"/>	<input type="text" value="86400"/>	<input type="text" value="0(Low)"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<a href="#">Add New Entry</a>													

Port Configuration			
Port	Mode	Security	Discovery Protocol
1	<input type="text" value="Forced"/>	<input type="text" value="Disabled"/>	<input type="text" value="OUI"/>
2	<input type="text" value="Forced"/>	<input type="text" value="Disabled"/>	<input type="text" value="OUI"/>
N-1	<input type="text" value="Forced"/>	<input type="text" value="Disabled"/>	<input type="text" value="OUI"/>
N	<input type="text" value="Forced"/>	<input type="text" value="Disabled"/>	<input type="text" value="OUI"/>

[Apply](#) [Reset](#)

**Figure 5-10.1: The Voice VLAN Configuration**

#### Parameter description

##### ● Port Members

Indicates the Voice VLAN port mode operation. We must disable MSTP feature before we enable Voice VLAN. It can avoid the conflict of ingress filtering.

Select which port that you want to enable the Voice VLAN mode operation.

- **VLAN ID**

Indicates the Voice VLAN ID. It should be a unique VLAN ID in the system and cannot equal each port PVID. It is a conflict in configuration if the value equals management VID, MVR VID, PVID etc. The allowed range is 1 to 4095.

- **Aging Time**

Indicates the Voice VLAN secure learning aging time. The allowed range is 10 to 10000000 seconds. It is used when security mode or auto detect mode is enabled. In other cases, it will be based on hardware aging time. The actual aging time will be situated between the [age\_time; 2 \* age\_time] interval.

- **Traffic**

Indicates the Voice VLAN traffic class. All traffic on the Voice VLAN will apply this class.

### **Port Configuration**

- **Port**

The switch port number of the Voice VLAN port.

- **Mode**

Indicates the Voice VLAN port mode.

When the port mode isn't equal disabled, we must disable MSTP feature before we enable Voice VLAN. It can avoid the conflict of ingress filtering.

Possible port modes are:

**Auto:** Enable auto detect mode. It detects whether there is VoIP phone attached to the specific port and configures the Voice VLAN members automatically.

**Forced:** Force join to Voice VLAN.

- **Security**

Indicates the Voice VLAN port security mode. When the function is enabled, all non-telephonic MAC addresses in the Voice VLAN will be blocked for 10 seconds. Possible port modes are:

**Enabled:** Enable Voice VLAN security mode operation.

**Disabled:** Disable Voice VLAN security mode operation.

- **Discovery Protocol**

Indicates the Voice VLAN port discovery protocol. It will only work when auto detect mode is enabled. We should enable LLDP feature before configuring discovery protocol to "LLDP" or "Both". Changing the discovery protocol to "OUI" or "LLDP" will restart auto detect process. Possible discovery protocols are:

**OUI:** Detect telephony device by OUI address.

**LLDP:** Detect telephony device by LLDP.

**Both:** Both OUI and LLDP.

### **Buttons**

- **Add New entry**

Click to add a new entry in Voice VLAN configuration.

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

## 5-10.2 OUI

The section describes to Configure VOICE VLAN OUI table. The maximum entry number is 16. Modifying the OUI table will restart auto detection of OUI process.

### Web Interface

To configure <Voice VLAN OUI Table> in the web interface:

1. Click <VLAN Management>, <Voice VLAN> and <OUI>
2. Select <Add New Entry> and <Delete> in the <Voice VLAN OUI Table>
3. Specify <Telephony OUI> and <Description>
4. Click <Apply>

The screenshot shows the 'Voice VLAN OUI Table' configuration page. At the top, there is a breadcrumb trail: Home > VLAN Management > Voice VLAN > OUI. Below this is a table with three columns: 'Delete', 'Telephony OUI', and 'Description'. Under the 'Delete' column, there is a 'Delete' button. Below the table, there are three buttons: 'Add New Entry' (highlighted with a red box and an arrow pointing to the table below), 'Apply', and 'Reset'. Below these buttons is another 'Voice VLAN OUI Table' section, which also has a 'Delete' button under the 'Delete' column and an 'Add New Entry' button below the table.

**Figure 5-10.2: The Voice VLAN OUI Table**

### Parameter description

- **Delete**

Check to delete the entry. It will be deleted during the next save.

- **Telephony OUI**

A telephony OUI address is a globally unique identifier assigned to a vendor by IEEE. It must be 6 characters long and the input format is "xx-xx-xx" (x is a hexadecimal digit).

- **Description**

The description of OUI address. Normally, it describes which vendor telephony device it belongs to. The allowed string length is 0 to 32.

- **Add New entry**

Click to add a new entry in Voice VLAN OUI table. An empty row is added to the table, the Telephony OUI and the corresponding description.

### Buttons

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

## 6. Quality of Service


### 6-1 Global Settings

Use the „Global Settings“ page to set the trust behavior for QoS basic mode. This configuration is active when the switch is in QoS basic mode. Packets entering a QoS domain are classified at the edge of the QoS domain.

#### Web Interface

To configure the global settings in the web interface:

1. Click <Quality of Service> and <Global Settings>
2. Select the trust mode when the switch is in QoS basic mode. If a packet CoS level and DSCP tag are mapped to separate queues, the trust mode determines the queue to which the packet is assigned.
3. Click <Apply> to save the configuration
4. If you want to cancel the setting then you need to click the reset button. It will revert to previously saved values.

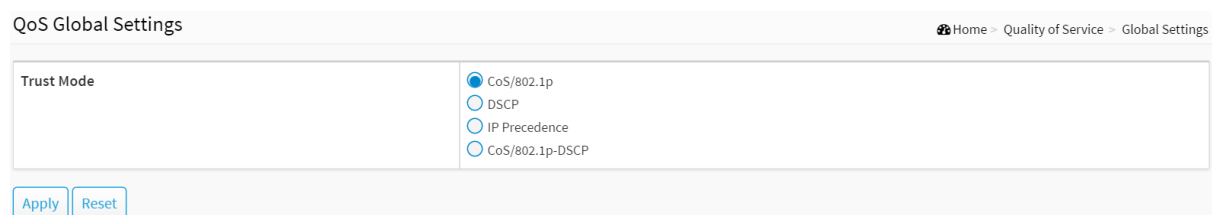

**Figure 6-1: The QoS Global Settings**

#### Parameter description

##### Trust Mode

- **CoS/802.1p**

Traffic is mapped to queues based on the VPT field in the VLAN tag, or based on the per-port default CoS/802.1p value (if there is no VLAN tag on the incoming packet), the actual mapping of the VPT to queue can be configured on the CoS/802.1p to Queue page.

- **DSCP**

All IP traffic is mapped to queues based on the DSCP field in the IP header. The actual mapping of the DSCP to queue can be configured on the "DSCP to Queue" page. If traffic is not IP traffic, it is mapped to the best effort queue.

- **IP Precedence**

Traffic is mapped to queues based on the IP precedence. The actual mapping of IP precedence to queue can be configured on the "IP Precedence to Queue" page.

- **CoS/802.1p-DSCP**

Uses the trust CoS mode for non-IP traffic and trust DSCP mode for IP traffic.

##### Buttons

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

## 6-2 Port Settings

### Web Interface

To configure the <QoS Port Setting> in the web interface:

1. Click <Quality of Service> and <Port Settings>
2. Select <Mode>, <Default CoS>, <Source CoS>, <Remark CoS> to each port
3. Click which port need to enable the <Remark Cos>, <Remark DSCP> and <Remark IP Precedence>
4. Click <Apply> to save the configuration
5. If you want to cancel the setting then you need to click the reset button. It will revert to previously saved values.

QoS Port Settings Home > Quality of Service > Port Settings

Port	Mode	Default CoS	Source CoS	Remark CoS	Remark DSCP	Remark IP Precedence
1	untrust ▼	0 ▼	C-TAG ▼	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
2	untrust ▼	0 ▼	C-TAG ▼	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
N-1	untrust ▼	0 ▼	C-TAG ▼	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
N	untrust ▼	0 ▼	C-TAG ▼	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Apply Reset

**Figure 6-2: The QoS Port Settings**

### Parameter description

- **Port**

The logical port for the settings contained in the same row.

- **Mode**

- **Untrust**

All ingress traffic on the port is mapped to the best effort queue and no classification/prioritization takes place.

- **Trust :**

Port prioritize ingress traffic is based on the system wide configured trusted mode, which is either CoS/802.1p trusted mode, IP Precedence trusted mode or DSCP trusted mode.

- **Default CoS**

Select the default CoS value to be assigned for incoming untagged packets. The range is 0 to 7.

- **Source CoS**

The CoS value is determined based on C-Tag or S-Tag for incoming tagged packets

- **Remark CoS**

Click the checkbox to remark the CoS/802.1p priority for egress traffic on this port.

- **Remark DSCP**

Click the checkbox to remark the DSCP value for egress traffic on this port.

---

- **Remark IP Precedence**

Click the checkbox to remark the IP precedence for egress traffic on this port.

---

Note: The CoS/802.1p priority and IP Precedence, or the CoS/802.1p priority and DSCP value can be remarked simultaneously for egress traffic on a port, but the DSCP value and IP Precedence cannot be remarked simultaneously.

---

**Buttons**

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.



## 6-3 Port Policing

This section provides an overview of „QoS Ingress Port Policers“ for all switch ports. The port policing is useful in constraining traffic flows and marking frames above specific rates. Policing is primarily useful for data flows and voice or video flows because voice and video usually maintains a steady rate of traffic.

### Web Interface

To configure the <QoS Port Policers> in the web interface:

1. Click <Quality of Service> and <Port Policing>
2. Click which port need to enable the <QoS Ingress Port Policers>, and configure the rate limit condition.
3. Click <Apply> to save the configuration.
4. If you want to cancel the setting then you need to click the reset button. It will revert to previously saved values.

QoS Ingress Port Policers Home > Quality of Service > Port Policing

Port	Enable	Rate (kbps)
1	<input type="checkbox"/>	<input type="text" value="1000000"/>
2	<input type="checkbox"/>	<input type="text" value="1000000"/>
N-1	<input type="checkbox"/>	<input type="text" value="1000000"/>
N	<input type="checkbox"/>	<input type="text" value="1000000"/>

**Figure 6-3: The QoS Ingress Port Policers Configuration**

### Parameter description

- **Port**

The logical port for the settings contained in the same row. Click on the port number in order to configure the schedulers.

- **Enabled**

To evoke which port you need to enable the <QoS Ingress Port Policers> function.

- **Rate**

To set the rate limit value for this port, the default is 1000000.

#### Buttons

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

## 6-4 Port Shaper

This section provides an overview of „QoS Egress Port Shapers“ for all switch ports. Others the user could get all detail information of the ports belong to the currently selected stack unit, as reflected by the page header.

### Web Interface

To configure the <QoS Port Shapers> in the web interface:

1. Click <Quality of Service> and <Port Shaper>
2. Select which port need to configure <QoS Egress Port Shaper>
3. Click which port need to enable, and configure the rate limit condition
4. Click <Apply> to save the configuration
5. If you want to cancel the setting then you need to click the reset button. It will revert to previously saved values.

QoS Egress Port Shaper for Port 1 Home > Quality of Service > Port Shaper

Port	Port 1 ▾	
------	----------	--

Queue Shaper		
Queue	Enable	Rate (kbps)
0	<input type="checkbox"/>	<input type="text" value="1000000"/>
1	<input type="checkbox"/>	<input type="text" value="1000000"/>
2	<input type="checkbox"/>	<input type="text" value="1000000"/>
6	<input type="checkbox"/>	<input type="text" value="1000000"/>
7	<input type="checkbox"/>	<input type="text" value="1000000"/>

Port Shaper	
Enable	Rate (kbps)
<input type="checkbox"/>	<input type="text" value="1000000"/>

**Figure 6-4: The QoS Egress Port Shaper**

### Parameter description

- **Port**

The logical port for the settings contained in the same row. Click on the port number in order to configure the shapers.

#### Queue Shaper

- **Queue**

The queue number of the queue shaper on this switch port.

- **Enable**

Controls whether the queue shaper is enabled for this queue on this switch port.

- **Rate(kbps)**

Controls the rate for the queue shaper. The default value is 1000000.

**Port Shaper**

- **Enable**

Controls whether the port shaper is enabled for this switch port.

- **Rate(kbps)**

Controls the rate for the port shaper. The default value is 1000000.

**Buttons**

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

## 6-5 Storm Control

The section allows user to configure the storm control for the switch. There is a destination lookup failure storm rate control, multicast storm rate control, and a broadcast storm rate control. These only affect flooded frames, i.e. frames with a (VLAN ID, DMAC) pair not present on the MAC address table. The configuration indicates the permitted packet rate for unicast, multicast or broadcast traffic across the switch

### Web Interface

To configure the storm control parameters in the web interface:

1. Click <Quality of Service> and <Storm Control>
2. Click which port need to enable, and configure the rate limit condition
4. Click the <Apply> to save the setting
5. If you want to cancel the setting then you need to click the reset button. It will revert to previously saved values

Storm Configuration Home > Quality of Service > Storm Control

Port	Broadcast		Multicast		DLF	
	Enable	Rate (pps)	Enable	Rate (pps)	Enable	Rate (pps)
1	<input type="checkbox"/>	500	<input type="checkbox"/>	500	<input type="checkbox"/>	500
2	<input type="checkbox"/>	500	<input type="checkbox"/>	500	<input type="checkbox"/>	500
N-1	<input type="checkbox"/>	500	<input type="checkbox"/>	500	<input type="checkbox"/>	500
N	<input type="checkbox"/>	500	<input type="checkbox"/>	500	<input type="checkbox"/>	500

**Figure 6-5: The Storm Control Configuration**

### Parameter description

- **Port**

The logical port for the settings contained in the same row. Click on the port number in order to configure the storm control.

- **Frame Type**

The settings in a particular row apply to the frame type listed here: Broadcast, Multicast or DLF (destination lookup failure).

- **Enable**

Enable or disable the storm control status for the given frame type.

- **Rate**

The rate unit is packets per second (pps). Valid values are: 0 ~ 262143 (pps).

The 1 kpps is actually 1002.1 pps.

#### Buttons

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

## 6-6 Port Scheduler

This section provides an overview of QoS egress port scheduler for all switch ports. and the ports belong to the currently selected stack unit, as reflected by the page header.

### Web Interface

To configure the QoS port schedulers in the web interface:

1. Click <Quality of Service> and <Port Scheduler>
2. Select <Scheduler Mode> for each port
3. If you select <WRR> or <WFQ>, you can configure weight.
4. Click the <Apply> to save the setting.
5. If you want to cancel the setting then you need to click the reset button. It will revert to previously saved values.

QoS Egress Port Scheduler Home -> Quality of Service -> Port Scheduler

Port	Scheduler Mode	Weight							
		Q0	Q1	Q2	Q3	Q4	Q5	Q6	Q7
1	Strict Priority ▾	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>
2	Strict Priority ▾	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>
N-1	Strict Priority ▾	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>
N	Strict Priority ▾	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>

**Figure 6-6: The QoS Egress Port Schedules**

### Parameter description

- **Port**

The logical port for the settings contained in the same row.

- **Scheduler Mode**

Controls whether the scheduler mode is "Strict Priority", "WRR" or "WFQ" on this switch port.

- **Weight**

Controls the weight for this queue. The default value is "0". This value is restricted to 0-127. This parameter is only shown if "Scheduler Mode" is set to "Weighted".

### Buttons

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

## 6-7 CoS/802.1p Mapping

Use the „CoS/802.1p to Queue“ page to map 802.1p priorities to egress queues. The „CoS/802.1p to Queue“ table determines the egress queues of the incoming packets based on the 802.1p priority in their VLAN tags. For incoming untagged packets, the 802.1p priority will be the default CoS/802.1p priority assigned to the ingress ports.

### Web Interface

To configure the Cos/802.1p mapping in the web interface:

1. Click <Quality of Service> and <Cos/802.1p Mapping>
2. Select <Queue ID>
3. Click the <Apply> to save the setting
4. If you want to cancel the setting then you need to click the <Reset> button. It will revert to previously saved values.

QoS Ingress CoS/802.1p to Queue Mapping Home > Quality of Service > CoS/802.1p Mapping

CoS/802.1p	Queue ID
0	1 ▼
1	0 ▼
2	2 ▼
6	6 ▼
7	7 ▼

Apply Reset

**Figure 6-7: The QoS Ingress CoS/802.1p to Queue Mapping**

### Parameter description

- **CoS/802.1p**

Displays the 802.1p priority tag values to be assigned to an egress queue, where 0 is the lowest and 7 is the highest priority.

- **Queue ID**

Select the egress queue to which the 802.1p priority is mapped. Eight egress queues are supported, where queue 7 is the highest priority egress queue and queue 0 is the lowest priority egress queue.

### Buttons

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

## 6-8 CoS/802.1p Remarking

Use the „Queues to CoS/802.1p“ page to remark the CoS/802.1p priority for egress traffic from each queue.

### Web Interface

To configure the Cos/802.1p remarking in the web interface:

1. Click <Quality of Service> and <Cos/802.1p Remarking>
2. Select <CoS/802.1p>
3. Click the <Apply> to save the setting
4. If you want to cancel the setting then you need to click the reset button. It will revert to previously saved values.

QoS Egress Queue to CoS/802.1p Remarking Home > Quality of Service > CoS/802.1p Remarking

Queue ID	CoS/802.1p
0	0 ▼
1	1 ▼
2	2 ▼
6	6 ▼
7	7 ▼

**Figure 6-8: The QoS Egress Queue to CoS/802.1p Remarking**

### Parameter description

- **Queue ID**

Displays the queue ID, where queue 7 is the highest priority egress queue and queue 0 is the lowest priority egress queue.

- **CoS/802.1p**

For each output queue, select the CoS/802.1p priority to which egress traffic from the queue is remarked.

#### Buttons

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

## 6-9 IP Precedence Mapping

To map IP precedence to egress queue.

### Web Interface

To configure the IP precedence mapping in the web interface:

1. Click <Quality of Service> and <IP Precedence Mapping>
2. Select <Queue ID>
3. Click the <Apply> to save the setting
4. If you want to cancel the setting then you need to click the reset button. It will revert to previously saved values.

QoS Ingress IP Precedence to Queue Mapping Home > Quality of Service > IP Precedence Mapping

IP Precedence	Queue ID
0	0 ▼
1	1 ▼
2	2 ▼
6	6 ▼
7	7 ▼

Apply Reset

**Figure 6-9: The QoS Ingress IP Precedence to Queue Mapping**

### Parameter description

- **IP Precedence**

Displays the IP precedence priority tag values to be assigned to an egress queue, where 0 is the lowest and 7 is the highest priority.

- **Queue ID**

Select the egress queue to which the IP precedence priority is mapped. Eight egress queues are supported, where queue 7 is the highest priority egress queue and queue 0 is the lowest priority egress queue.

### Buttons

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.



## 6-10 IP Precedence Remarking

To map egress queue to IP precedence.

### Web Interface

To configure the <IP Precedence Remarking> in the web interface:

1. Click <Quality of Service> and <IP Precedence Remarking>
2. Select <IP Precedence>
3. Click the <Apply> to save the setting.
4. If you want to cancel the setting then you need to click the reset button. It will revert to previously saved values.

QoS Egress Queue to IP Precedence Remarking Home > Quality of Service > IP Precedence Remarking

Queue ID	IP Precedence
0	0 ▼
1	1 ▼
2	2 ▼
6	6 ▼
7	7 ▼

**Figure 6-10: The QoS Egress Queue to IP Precedence Remarking**

### Parameter description

- **Queue ID**

Displays the queue ID, where queue 7 is the highest priority egress queue and queue 0 is the lowest priority egress queue.

- **IP Precedence**

For each output queue, select the IP precedence priority to which egress traffic from the queue is remarked.

### Buttons

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

## 6-11 DSCP Mapping

Use the „DSCP to Queue“ page to map IP DSCP to egress queues. The DSCP to Queue table determines the egress queues of the incoming IP packets based on their DSCP values. The original VLAN Priority Tag (VPT) of the packet is unchanged.

It is possible to achieve the desired QoS in a network by simply changing the DSCP to Queue mapping, the queue schedule method, and bandwidth allocation.

### Web Interface

To configure the DSCP mapping in the web interface:

1. Click <Quality of Service> and <DSCP Mapping>
2. Select <Queue ID>
3. Click the <Apply> to save the setting.
4. If you want to cancel the setting then you need to click the reset button. It will revert to previously saved values.

QoS Ingress DSCP to Queue Mapping Home - Quality of Service - DSCP Mapping

DSCP	Queue ID	DSCP	Queue ID	DSCP	Queue ID	DSCP	Queue ID
0 (BE)	<input type="text" value="0"/>	16 (CS2)	<input type="text" value="16"/>	32 (CS4)	<input type="text" value="32"/>	48 (CS6)	<input type="text" value="48"/>
1	<input type="text" value="1"/>	17	<input type="text" value="17"/>	33	<input type="text" value="33"/>	49	<input type="text" value="49"/>
2	<input type="text" value="2"/>	18 (AF21)	<input type="text" value="18"/>	34 (AF41)	<input type="text" value="34"/>	50	<input type="text" value="50"/>
3	<input type="text" value="3"/>	19	<input type="text" value="19"/>	35	<input type="text" value="35"/>	51	<input type="text" value="51"/>
4	<input type="text" value="4"/>	20 (AF22)	<input type="text" value="20"/>	36 (AF42)	<input type="text" value="36"/>	52	<input type="text" value="52"/>
5	<input type="text" value="5"/>	21	<input type="text" value="21"/>	37	<input type="text" value="37"/>	53	<input type="text" value="53"/>
6	<input type="text" value="6"/>	22 (AF23)	<input type="text" value="22"/>	38 (AF43)	<input type="text" value="38"/>	54	<input type="text" value="54"/>
7	<input type="text" value="7"/>	23	<input type="text" value="23"/>	39	<input type="text" value="39"/>	55	<input type="text" value="55"/>
8 (CS1)	<input type="text" value="8"/>	24 (CS3)	<input type="text" value="24"/>	40 (CS5)	<input type="text" value="40"/>	56 (CS7)	<input type="text" value="56"/>
9	<input type="text" value="9"/>	25	<input type="text" value="25"/>	41	<input type="text" value="41"/>	57	<input type="text" value="57"/>
10 (AF11)	<input type="text" value="10"/>	26 (AF31)	<input type="text" value="26"/>	42	<input type="text" value="42"/>	58	<input type="text" value="58"/>
11	<input type="text" value="11"/>	27	<input type="text" value="27"/>	43	<input type="text" value="43"/>	59	<input type="text" value="59"/>
12 (AF12)	<input type="text" value="12"/>	28 (AF32)	<input type="text" value="28"/>	44	<input type="text" value="44"/>	60	<input type="text" value="60"/>
13	<input type="text" value="13"/>	29	<input type="text" value="29"/>	45	<input type="text" value="45"/>	61	<input type="text" value="61"/>
14 (AF13)	<input type="text" value="14"/>	30 (AF33)	<input type="text" value="30"/>	46 (EF)	<input type="text" value="46"/>	62	<input type="text" value="62"/>
15	<input type="text" value="15"/>	31	<input type="text" value="31"/>	47	<input type="text" value="47"/>	63	<input type="text" value="63"/>

**Figure 6-11: The QoS Ingress DSCP to Queue Mapping**

### Parameter description

- **DSCP**

Displays the DSCP value in the incoming packet and its associated class.

- **Queue ID**

Select the traffic forwarding queue from the output queue drop-down menu to which the DSCP value is mapped.

### Buttons

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

## 6-12 DSCP Remarking

Use the „Queues to DSCP“ page to remark DSCP value for egress traffic from each queue.

### Web Interface

To configure the DSCP remarking in the web interface:

1. Click <Quality of Service> and <DSCP Remarking>
2. Select <DSCP>
3. Click the <Apply> to save the setting
4. If you want to cancel the setting then you need to click the reset button. It will revert to previously saved values.

QoS Egress Queue to DSCP Remarking Home - Quality of Service - DSCP Remarking

Queue ID	DSCP
0	0 (BE) *
1	8 (CS1) *
2	16 (CS2) *
6	48 (CS6) *
7	56 (CS7) *

Apply Reset

**Figure 6-12: The QoS Egress Queue to DSCP Remarking**

### Parameter description

- **Queue ID**

Displays the queue ID, where queue 7 is the highest priority egress queue and queue 0 is the lowest priority egress queue.

- **DSCP**

For each output queue, select the DSCP priority to which egress traffic from the queue is remarked.

#### Buttons

- **Apply**

Click to save changes.


- **Reset**

Click to undo any changes made locally and revert to previously saved values.

## 7. Spanning tree

The Spanning Tree Protocol (STP) can be used to detect and disable network loops, and to provide backup links between switches, bridges or routers. This allows the switch to interact with other bridging devices (that is, an STP-compliant switch, bridge or router) in your network to ensure that only one route exists between any two stations on the network, and provide backup links which automatically take over when a primary link goes down.

**STP** - STP uses a distributed algorithm to select a bridging device (STP-compliant switch, bridge or router) that serves as the root of the spanning tree network. It selects a root port on each bridging device (except for the root device) which incurs the lowest path cost when forwarding a packet from that device to the root device. Then it selects a designated bridging device from each LAN which incurs the lowest path cost when forwarding a packet from that LAN to the root device. All ports connected to designated bridging devices are assigned as designated ports. After determining the lowest cost spanning tree, it enables all root ports and designated ports, and disables all other ports. Network packets are therefore only forwarded between root ports and designated ports, eliminating any possible network loops.

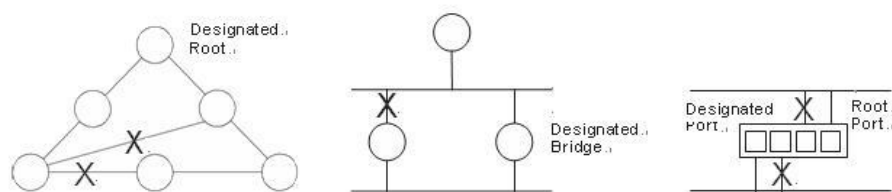

**Figure 8: The Spanning Tree Protocol**

Once a stable network topology has been established, all bridges listen for Hello BPDUs (Bridge Protocol Data Units) transmitted from the root bridge. If a bridge does not get a Hello BPDU after a predefined interval (Maximum Age), the bridge assumes that the link to the root bridge is down. This bridge will then initiate negotiations with other bridges to reconfigure the network to reestablish a valid network topology.

### 7-1 State

The section describes that you can select enable spanning tree protocol or not, and you can select what protocol version you want.

#### Web Interface

To configure the Spanning Tree Protocol version in the web interface:

1. Click <Spanning Tree> and <State>
2. Evoke to enable or disable the Spanning Tree Protocol
3. Select the Spanning Tree Protocol version
4. Click the apply to save the setting.
5. If you want to cancel the setting then you need to click the reset button. It will revert to previously saved values.

MSTP State

Home > Spanning Tree > State

Multiple Spanning Tree Protocol	<input type="checkbox"/> off
Force Version	MSTP ▼

Apply Reset

**Figure 7-1: The Spanning Tree state**

### Parameter description

- **Multiple Spanning Tree Protocol**

You can select enable spanning tree protocol or not.

- **Force Version**

The STP protocol version setting. Valid values are STP, RSTP and MSTP.

### Buttons

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

## 7-2 Region Config

The section describes to configure the basic identification of a MSTP bridge. Bridges participating in a common MST region must have the same region name and revision level.

### Web Interface

To configure the MSTP region in the web interface:

1. Click <Spanning Tree> and <Region Config>
2. Specify the region name and revision level
3. Click the <Apply> to save the setting.
4. If you want to cancel the setting then you need to click the reset button. It will revert to previously saved values.

MSTP Region Config

Home > Spanning Tree > Region Config

Region Name (0~32 characters)	00-E0-4C-00-00-00
Revision Level (0-65535)	0

Apply Reset

Figure 7-2: The Region Configuration

### Parameter description

- **Configuration Name**

The name identifying the VLAN to MSTI mapping. Bridges must share the name and revision (see below), as well as the VLAN-to-MSTI mapping configuration in order to share spanning trees for MSTI's (Intra-region). The name is at most 32 characters.

- **Configuration Revision**

The revision of the MSTI configuration named above. This must be an integer between 0 and 65535.

### Buttons

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

## 7-3 Instance View

The section providing an MST instance table which include information(vlan membership of a MSTI ) of all spanning instances provisioned in the particular MST region which the bridge belongs to. Through this table, additional MSTP configuration data can be applied and MSTP status can be retrieved.

### Web Interface

To configure the MSTP instance in the web interface:

1. Click <Spanning Tree> and <Instance>
2. Add VLAN
3. Specify the instance and port
4. Click <Instance Status> and <Port Status> to see the detail
5. If you want to cancel the setting then you need to click <Delete>

MSTP Instance Config Home > Spanning Tree > Instance View

	Instance ID	Corresponding Vlans
<input type="checkbox"/>	0	1-2,6-19,21-32,34-4094
<input type="checkbox"/>	2	20
<input type="checkbox"/>	3	33
<input type="checkbox"/>	4	3-5

**Figure 7-3.1: MSTP Instance Config**

### Parameter description

#### ● Instance ID

Every spanning tree instance need to have a unique instance ID within 0~4094. Instance 0 (CIST) always exists and can not be deleted. Additional spanning instances (MSTIs) can be added or deleted. At least one vlan must be provisioned for an MSTI to declare the need for the MSTI to be existent.

#### ● Corresponding Vlans

1-4094.

Multiple vlans can belong to an MSTI. All vlans that are not provisioned through this will be automatically assigned to Instance 0(CIST).

### Buttons

#### ● Add Vlan

To add an MSTI and provide its vlan members or modify vlan members for a specific MSTI, you can add up to 63 so that a total of 64.

#### ● Delete

To delete an MSTI.

#### ● Instance Config

To provision spanning tree performance parameters per instance.

#### ● Port Config

To provision spanning tree performance parameters per instance per port.

- **Instance Status**


To show the status report of a particular spanning tree instance.

- **Port Status**

To show the status report of all ports regarding a specific spanning tree instance.

Please refer to the following introduction:

- **Add Vlan**

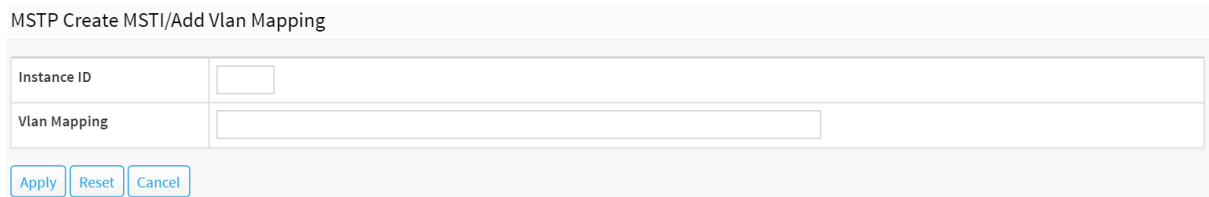

MSTP Create MSTI/Add Vlan Mapping

Instance ID	<input type="text"/>
Vlan Mapping	<input type="text"/>

**Figure 7-3.2: Add Vlan**

### Parameter description

- **Instance ID**

The Range is 1-4094

- **Vlan Mapping**

The list of VLANs mapped to the MSTI. The VLANs can be given as a single (xx, xx being between 1 and 4094) VLAN, or a range (xx-yy), each of which must be separated with comma and/or space. A VLAN can only be mapped to one MSTI. An unused MSTI should just be left empty. (I.e. not having any VLANs mapped to it.) Example: 2, 5, 20-40.

### Buttons

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

- **Cancel**

Click to undo any changes made locally and return to the users.



## ■ Instance Config to Instance 0

Instance Configuration (ID=0) Home > Spanning Tree > Instance View

Priority	32768
Max. Age	20 seconds
Forward Delay	15 seconds
Max. Hops	20 seconds

**Figure 7-3.3: Instance Config to Instance 0**

### Parameter description

- **Priority**

The priority parameter used in the CIST (Common and Internal Spanning Tree) connection.

0 / 4096 / 8192 / 12288 / 16384 / 20480 / 24576 / 28672 / 32768 / 36864 / 40960 / 45056 / 49152 / 53248 / 57344 / 61440

- **MAX. Age**

6-40 sec. The same definition as in the RSTP protocol.

- **Forward Delay**

4-30 sec. The same definition as in the RSTP protocol.

- **MAX. Hops**

6-40 sec. It's a new parameter for the multiple spanning tree protocol. It is used in the internal spanning tree instances. "CIST Remaining Hops" or "MSTI Remaining Hops" in the Spanning Tree protocol message would decreased by one when the message is propagated to the neighboring bridge. If the Remaining Hops in a message is zero, the message (BPDU) would be regarded as invalid. Max hops is used to specify the initial value of the remaining hops for regional root bridge (Either CIST Regional Root or MSTI Regional Root)

### Buttons

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

- **Back**

Click to undo any changes made locally and return to the Users.

## ■ Port Config to Instance 0

Port Config of Instance 0 Home > Spanning Tree > Instance View

Port Config								Migration Check
Port	Path Cost		Priority	Admin Edge	Admin P2P	Restricted Role	Restricted TCN	<a href="#">Mcheck</a>
1	Auto ▾		128 ▾	Yes ▾	Auto ▾	No ▾	No ▾	--- ▾
2	Auto ▾		128 ▾	Yes ▾	Auto ▾	No ▾	No ▾	--- ▾
3	Auto ▾		128 ▾	Yes ▾	Auto ▾	No ▾	No ▾	--- ▾
N-2	Auto ▾		128 ▾	Yes ▾	Auto ▾	No ▾	No ▾	--- ▾
N-1	Auto ▾		128 ▾	Yes ▾	Auto ▾	No ▾	No ▾	--- ▾
N	Auto ▾		128 ▾	Yes ▾	Auto ▾	No ▾	No ▾	--- ▾

[Apply](#) [Back](#)

**Figure 7-3.3: Port Config to Instance 0**

### Parameter description

- **Port**

The logical port for the settings contained in the same row.

- **Path Cost**

1 – 200,000,000

The same definition as in the RSTP specification. But in MSTP, this parameter can be respectively applied to ports of CIST and ports of any MSTI.

- **Priority**

0 / 16 / 32 / 48 / 64 / 80 / 96 / 112 / 128 / 144 / 160 / 176 / 192 / 208 / 224 / 240

The same definition as in the RSTP specification. But in MSTP, this parameter can be respectively applied to ports of CIST and ports of any MSTI.

- **Admin Edge**

Yes / No

The same definition as in the RSTP specification for the CIST ports.

- **Admin P2P**

Auto / True / False

The same definition as in the RSTP specification for the CIST ports.

- **Restricted Role**

Yes / No

If “Yes” causes the Port not to be selected as root port for the CIST or any MSTI, even it has the best spanning tree priority vector. Such a port will be selected as an alternate port after the root port has been selected. This parameter is “No” by default. If set, it can cause lack of spanning tree connectivity. It is set by a network administrator to prevent bridges external to a core region of the network influencing the spanning tree active topology, possibly because those bridges are not under the full control of the administrator.

- **Restricted TCN**

Yes / No

If “Yes” causes the port not to propagate received topology change notifications and topology changes to other Ports. This parameter is “No” by default. If set it can cause temporary loss of connectivity after changes in a spanning trees active topology as a result of persistent incorrectly learned station location information. It is set by a network administrator to prevent bridges external to a core region of the network, causing address flushing in that region, possibly because those bridges are not under the full control of the administrator. Or the status of MAC operation for the attached LANs transitions frequently.

- **Mcheck**

The same definition as in the RSTP specification for the CIST ports.

### Buttons

- **Apply**

Click to save changes.

- **Back**

Click to undo any changes made locally and return to the users.

## ■ Instance Status to Instance 0

Instance Status (ID=0) Home - Spanning Tree - Instance View

[Back](#) [Refresh](#)

MSTP State	Disable
Force Version	MSTP
Bridge Max Age	20
Bridge Forward Delay	15
Bridge Max Hops	20
Instance Priority	32768
Bridge Mac Address	
CIST ROOT PRIORITY	
CIST ROOT MAC	
CIST EXTERNAL ROOT PATH COST	
CIST ROOT PORT ID	
CIST REGIONAL ROOT PRIORITY	
CIST REGIONAL ROOT MAC	
CIST INTERNAL ROOT PATH COST	
CIST CURRENT MAX AGE	
CIST CURRENT FORWARD DELAY	
TIME SINCE LAST TOPOLOGY CHANGE (SECS)	
TOPOLOGY CHANGE COUNT (SECS)	

**Figure 7-3.4: Instance Status to Instance 0**

### Parameter description

- **MSTP State**

MSTP protocol is “Enable” or “Disable”

- **Force Version**

It shows the current spanning tree protocol version configured.

- **Bridge Max Age**

It shows the maximum aging setting of the bridge itself.

- **Bridge Forward Delay**

It shows the forward delay setting of the bridge itself.

- **Bridge Max Hops**

It shows the maximum number of hops setting of the bridge itself.

- **Instance Priority**

Spanning tree priority value for a specific tree instance (CIST or MSTI)

- **Bridge Mac Address**

The Mac Address of the bridge itself.

- **CIST ROOT PRIORITY**

Spanning tree priority value of the CIST root bridge

- **CIST ROOT MAC**

Mac address of the CIST root bridge

- **CIST EXTERNAL ROOT PATH COST**

Root path cost value from the point of view of the bridge's MST region.

- **CIST ROOT PORT ID**

The port ID of the bridge's root port. In MSTP, peer port of a root port may reside in different MST region or in the same MST region. The first case indicates that the root port's owner is the CIST regional root bridge.

- **CIST REGIONAL ROOT PRIORITY**

Spanning tree priority value of the CIST regional root bridge. Note that CIST Regional Root bridge is different from CIST Root bridge. One exception is that when a bridge belonging to an MST region happens to be the root bridge of the CST (Common Spanning Tree). An MST Region in the CST can be regarded as a common RSTP bridge. The IST (Internal Spanning Tree) and MSTIs are transparent to bridges outside this region.

- **CIST REGIONAL ROOT MAC**

Mac address of the CIST regional root bridge.

- **CIST INTERNAL ROOT PATH COST**

Root path cost value from the point of view of the bridges inside the IST.

- **CIST CURRENT MAX AGE**

Maximum aging time of the CIST root bridge.

- **CIST CURRENT FORWARD DELAY**

Forward delay of the CIST root bridge.

- **TIME SINCE LAST TOPOLOGY CHANGE(SECs)**

Time Since Last Topology Change is the elapsed time in unit of seconds for a bunch of "Topology Change and (or) Topology Change Notification receiving" to occur. When new series of topology changes occur again, this counter will be reset to 0.

- **TOPOLOGY CHANGE COUNT(SECs)**

The per spanning tree instance "Topology Change Count" expresses the time spent in unit of seconds since the beginning of the Spanning Tree topology change to the end of the STP convergence. Once there is no topology change occurring and no more topology change notification received, the topology change count will be reset to 0.

### **Buttons**

- **Back**

Click to undo any changes made locally and return to the users.

- **Refresh**

Click to refresh the page.

## ■ Port Status to Instance 0

Port Status of Instance 0 Home > Spanning Tree > Instance View

Back Refresh

Port No	Status	Role	Path Cost	Priority	Hello	Oper. Edge	Oper. P2P	Restricted Role	Restricted Tcn
1	FORWARDING	DSGN	200000	128	2	V	V		
2	DISCARDING	disable	20000000	128	2	V			
3	DISCARDING	disable	20000000	128	2	V			
N-2	DISCARDING	disable	20000000	128	2	V			
N-1	DISCARDING	disable	20000000	128	2	V			
N	DISCARDING	disable	20000000	128	2	V			

**Figure 7-3.5: Port Status to Instance 0**

### Parameter description

- **Port No**

The port number to which the configuration applies.

- **Status**

The forwarding status. Same definition as of the RSTP specification. Possible values are "FORWARDING", "LEARNING" and "DISCARDING"

- **Role**

The role that a port plays in the spanning tree topology. Possible values are "disable"(disable port) , "alternate"(alternate port) , "backup"(backup port) , "ROOT"(root port) , "DSGN"(designated port) , "MSTR"(master port). The last 3 are possible port roles for a port to transit to FORWARDING state

- **Path Cost**

Display currently resolved port path cost value for each port in a particular spanning tree instance.

- **Priority**

Display port priority value for each port in a particular spanning tree instance.

- **Hello**

Per port hello time display. It takes the following form:

Current Hello Time/Hello Time Setting

- **Oper. Edge**

Whether or not a port is an edge port in reality.

- **Oper. P2P**

Whether or not a port is a point-to-point port in reality.

- **Restricted Role**

Same as mentioned in "Port Config"

- **Restricted Tcn**

Same as mentioned in "Port Config"

### Buttons

- **Back**

Click to undo any changes made locally and return to the users.

- **Refresh**

Click to refresh the page.

## 8. MAC Address Tables

### 8-1 Configuration

Switching of frames is based upon the DMAC address contained in the frame. The switch builds up a table that maps MAC addresses to switch ports for knowing which ports the frames should go to (based upon the DMAC address in the frame). This table contains both static and dynamic entries. The static entries are configured by the network administrator if the administrator wants to do a fixed mapping between the DMAC address and switch ports.

The frames also contain a MAC address (SMAC address), which shows the MAC address of the equipment sending the frame. The SMAC address is used by the switch to automatically update the MAC table with these dynamic MAC addresses. Dynamic entries are removed from the MAC table if no frame with the corresponding SMAC address have been seen after a configurable age time.

### Web Interface

To configure MAC Address Table in the web interface:

1. Click <MAC Address Tables> and <Configuration>
2. Specify the <Disable Automatic Aging> and <Aging Time>
3. Specify the port members (auto, disable or secure)
4. Add new static entry, specify the VLAN IP and Mac address, port members and block
5. Click <Apply>

MAC Table Configuration Home > MAC Address Table > Configuration

---

**Aging Configuration**

Disable Automatic Aging	<input type="checkbox"/>
Aging Time	<input type="text" value="300"/> seconds

---

**MAC Table Learning**

	Port Member									
	1	2	3	4	5	6	7	N-2	N-1	N
Auto	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>	<input checked="" type="radio"/>
Disable	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Secure	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

---

**Static MAC Table Configuration**

Delete	VLAN ID	MAC Address	Block	Port Member
<input type="checkbox"/>	<input type="text" value="1"/>	<input type="text" value="00-00-00-00-00-00"/>	<input type="checkbox"/>	<input type="text" value="Port 1"/>
<input type="checkbox"/>	<input type="text" value="2"/>	<input type="text" value="00-00-00-00-00-00"/>	<input type="checkbox"/>	<input type="text" value="Port 2"/>
<input type="checkbox"/>	<input type="text" value="3"/>	<input type="text" value="00-00-00-00-00-00"/>	<input type="checkbox"/>	<input type="text" value="Port 3"/>

**Figure 8-1: The MAC Address Table Configuration**

## Parameter description

### Aging Configuration

By default, dynamic entries are removed from the MAC table after 300 seconds. This removal is also called aging.

Configure aging time by entering a value here in seconds; for example, aging time seconds. The allowed range is 10 to 1000000 seconds. Disable the automatic aging of dynamic entries by checking ☒ Disable automatic aging.

### MAC Table Learning

If the learning mode for a given port is greyed out, another module is in control of the mode, so that it cannot be changed by the user. An example of such a module is the MAC-based authentication under 802.1X. Each port can do learning based upon the following settings:

- **Auto**

Learning is done automatically as soon as a frame with unknown SMAC is received.

- **Disable**

No learning is done.

- **Secure**

Only static MAC entries are learned, all other frames are dropped.



---

**NOTE:** Make sure that the link used for managing the switch is added to the Static Mac Table before changing to secure learning mode, otherwise the management link is lost and can only be restored by using another non-secure port or by connecting to the switch via the serial interface.

---

### Static MAC Table Configuration

The static entries in the MAC table are shown in this table. The static MAC table can contain 128 entries. The maximum of 128 entries is for the whole stack, and not per switch.

- **Delete**

Check to delete the entry. It will be deleted during the next save.

- **VLAN ID**

The VLAN ID of the entry.

- **MAC Address**

The MAC address of the entry.

- **Block**

Click it, if you want block this mac address.

- **Port Members**

Checkmarks indicate which ports are members of the entry. Check or uncheck as needed to modify the entry.

**Buttons**

- **Adding a New Static Entry**

Click to add a new entry to the static MAC table. Specify the VLAN ID, MAC address, and port members for the new entry. Click "Apply".

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.



## 8-2 Information

Entries in the MAC table are shown on this page. The MAC table contains up to 8192 entries, and is sorted first by VLAN ID, then by MAC address.

### Web Interface

To display MAC Address Table in the web interface:

1. Click <MAC Address Table> and <Information>
2. Display <MAC Address Table>

Dynamic MAC Table

Home

 > 

MAC Address Table

 > 

Information

Auto-refresh 

off

Refresh

Clear

Show

10

entries

Search:

Type	VLAN	MAC Address	Block	CPU	Port Members												
					1	2	3	4	5	6	7	N-2	N-1	N			
Static	1	00-00-00-00-00-00	No		✓												
Dynamic	1	00-E0-4C-36-14-16	No		✓												
Static	2	00-00-00-00-00-00	No			✓											
Static	3	00-00-00-00-00-00	No				✓										

Previous

1

Next

**Figure 8-2: The MAC Address Table Information**

### Parameter description

#### Navigating the MAC Table

Each page shows up to 999 entries from the MAC table, default being 10, selected through the "entries per page" input field. When first visited, the web page will show the first 10 entries from the beginning of the MAC table. The first displayed will be the one with the lowest VLAN ID and the lowest MAC address found in the MAC Table.

- **Type**

Indicates whether the entry is a static or a dynamic entry, 802.1x, DMS.

- **VLAN**

The VLAN ID of the entry.

- **MAC address**

The MAC address of the entry.

- **Block :**

Whether the mac address is blocked or not.

- **Port Members**

The ports that are members of the entry.

#### Buttons



**Figure 9-2: The MAC Address Table Information buttons**

- **Auto-refresh**

Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.

- **Refresh**

Click to refresh the page.

- **Clear :**

Click to clear the page.

- **Next**

Updates the mac address entries, turn to the next page.

- **Previous**

Updates the mac address entries, turn to the previous page.



---

**NOTE:**

00-60-A7-73-01-29 : your switch MAC address (for IPv4)  
33-33-00-00-00-01 : Destination MAC (for IPv6 Router Advertisement) (reference IPv6 RA.JPG)  
33-33-00-00-00-02 : Destination MAC (for IPv6 Router Solicitation) (reference IPv6 RS.JPG)  
33-33-FF-73-01-29 : Destination MAC (for IPv6 Neighbor Solicitation) (reference IPv6 DAD.JPG)  
33-33-FF-A8-01-01: your switch MAC address (for IPv6 global IP)  
FF-FF-FF-FF-FF-FF: for Broadcast.

---

## 9. Multicast

### 9-1 IGMP Snooping

The function, is used to establish the multicast groups to forward the multicast packet to the member ports, and, in nature, avoids wasting the bandwidth while IP multicast packets are running over the network. This is because a switch that does not support IGMP or IGMP Snooping cannot tell the multicast packet from the broadcast packet, so it can only treat them all as the broadcast packet. Without IGMP Snooping, the multicast packet forwarding function is plain and nothing is different from broadcast packet.

A switch supported IGMP Snooping with the functions of query, report and leave, a type of packet exchanged between IP Multicast Router/Switch and IP Multicast Host, can update the information of the Multicast table when a member (port) joins or leaves an IP Multicast Destination Address. With this function, once a switch receives an IP multicast packet, it will forward the packet to the members who joined in a specified IP multicast group before.

The packets will be discarded by the IGMP Snooping if the user transmits multicast packets to the multicast group that had not been built up in advance. IGMP mode enables the switch to issue IGMP function that you enable IGMP proxy or snooping on the switch, which connects to a router closer to the root of the tree. This interface is the upstream interface. The router on the upstream interface should be running IGMP.

#### 9-1.1 Basic Configuration

The section describes how to set the basic IGMP snooping on the switch, which connects to a router closer to the root of the tree. This interface is the upstream interface. The router on the upstream interface should be running IGMP

#### Web Interface

To configure the IGMP Snooping parameters in the web interface:

1. Click <Multicast>, <IGMP Snooping> and <Basic Configuration>
2. Evoke to select enable or disable to configure IGMP Snooping globally
3. Evoke which port wants to become a router port or enable/ disable the fast leave function.
4. Scroll to set the <Throtting> and <Profile>
5. Click the <Apply> to save the setting
6. If you want to cancel the setting then you need to click the reset button. It will revert to previously saved values

IGMP Snooping Configuration Home > Multicast > IGMP Snooping > Basic Configuration

---

Global Configuration

Snooping Enabled	<input type="checkbox"/> off
Unregistered IPMCv4 Flooding Enabled	<input checked="" type="checkbox"/>
IGMP SSM Range	232.0.0.0 / 8
Proxy Enabled	<input type="checkbox"/>

Port Related Configuration

Port	Router Port	Fast Leave	Throttling	Profile
1	<input type="checkbox"/>	<input type="checkbox"/>	unlimited	-
2	<input type="checkbox"/>	<input type="checkbox"/>	unlimited	-
N-2	<input type="checkbox"/>	<input type="checkbox"/>	unlimited	-
N-1	<input type="checkbox"/>	<input type="checkbox"/>	unlimited	-
N	<input type="checkbox"/>	<input type="checkbox"/>	unlimited	-

Apply Reset

**Figure 9-1.1: The IGMP Snooping Configuration****Parameter description****Global Configuration**● **Snooping Enabled**

Enable IGMP Snooping globally

● **Unregistered IPMCv4 Flooding enabled**

Enable unregistered IPMCv4 traffic flooding. Unregistered IPMCv4 traffic is so-called unknown multicast.

After selected, the unregistered multicast stream will be forwarded like normal packets. Once you un-selected it, such stream will be discarded

● **IGMP SSM Range**

SSM (Source-Specific Multicast) Range allows the SSM-aware hosts and routers run the SSM service model for the groups in the address range. Format: (IP address/ sub mask)

● **Proxy Enabled**

Enable IGMP Proxy. This feature can be used to avoid forwarding unnecessary join and leave messages to the router side.

**Port Related Configuration**● **Port**

It shows the physical port index of switch.

● **Router Port**

Specify which ports act as router ports. A router port is a port on the Ethernet switch that leads towards the Layer 3 multicast device or IGMP querier.

If an aggregation member port is selected as a router port, the whole aggregation will act as a router port.

● **Fast Leave**

Enable the fast leave on the port.

● **Throttling**

Enable to limit the number of multicast groups to which a switch port can belong.

- **Profile**

You can select profile when you edit in "Multicast Filtering Profile".

**Buttons**

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

## 9-1.2 VLAN Configuration

The section describes the VLAN configuration setting process integrated with IGMP Snooping function. For Each setting page shows up to 99 entries from the VLAN table, default being 20, selected through the "entries per page" input field. When first visited, the web page will show the first 20 entries from the beginning of the VLAN Table. The first displayed will be the one with the lowest VLAN ID found in the VLAN Table. The "VLAN" input fields allow the user to select the starting point in the VLAN Table. Clicking the button will update the displayed table starting from that or the next closest VLAN Table match.

### Web Interface

To configure the „IGMP Snooping VLAN Configuration“ in the web interface:

1. Click <Multicast>, <IGMP Snooping> and <VLAN Configuration>
2. Add new IGMP VLAN
3. Click the <Apply> to save the setting
4. If you want to cancel the setting then you need to click the reset button. It will revert to previously saved values

The screenshot shows the 'IGMP Snooping Vlan Configuration' page in two states. The top state shows the 'Add New IGMP VLAN' button highlighted with a red box and an arrow pointing to the bottom state. In the bottom state, a new entry has been added to the table.

Delete	VLAN ID	Snooping Enabled	IGMP Querier	Compatibility	RV	QI(sec)	QRI(0.1 sec)	LLQI(0.1 sec)	URI(sec)
<input type="checkbox"/>		<input type="checkbox"/>	<input type="checkbox"/>	IGMP-Auto	2	125	100	10	1

**Figure 9-1.2: The IGMP Snooping VLAN Configuration**

### Parameter description

- **Start from Vlan**

You can refresh the displayed table starting from the VLAN input fields.

- **Delete**

Check to delete the entry. The designated entry will be deleted during the next save.

- **VLAN ID**

It displays the VLAN ID of the entry.

- **Snooping Enabled**

Enable the per-VLAN IGMP Snooping. Only up to 32 VLANs can be selected.

- **IGMP Querier**

Enable to join IGMP querier election in the VLAN. Disable to act as an IGMP non-querier.

- **Compatibility**

Compatibility is maintained by hosts and routers taking appropriate actions depending on the versions of IGMP operating on hosts and routers within a network. The allowed selection is IGMP-Auto, Forced IGMPv1, Forced IGMPv2, Forced IGMPv3, default compatibility value is IGMP-Auto.

- **Rv**

Robustness variable. The robustness variable allows tuning for the expected packet loss on a network. The allowed range is 1 to 255; default robustness variable value is 2.

- **QI(sec)**

Query interval. The query interval is the interval between general queries sent by the querier. The allowed range is 1 to 31744 seconds; default query interval is 125 seconds.

- **QRI(0.1 sec)**

Query Response Interval. The maximum response time used to calculate the Max Resp Code inserted into the periodic general queries. The allowed range is 0 to 31744 in tenths of seconds; default query response interval is 100 in tenths of seconds (10 seconds).

- **LLQI (0.1 sec)**

Last Member Query Interval. The Last Member Query Time is the time value represented by the Last Member Query Interval, multiplied by the Last Member Query Count. The allowed range is 0 to 31744 in tenths of seconds; default last member query interval is 10 in tenths of seconds (1 second).

- **URI(sec)**

Unsolicited Report Interval. The Unsolicited Report Interval is the time between repetitions of a host's initial report of membership in a group. The allowed range is 0 to 31744 seconds, default unsolicited report interval is 1 second. .

#### **Buttons**

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

## 9-1.3 Status

After you complete the IGMP Snooping configuration, then you could to let the switch display the IGMP Snooping status. The section provides you to let switch to display the IGMP Snooping detail status.

### Web Interface

To display the IGMP Snooping status in the web interface:

1. Click <Multicast>, <IGMP Snooping> and <Status>
2. If you want to auto-refresh the information then you need to evoke the <Auto-refresh>.
3. Click <Refresh> to refresh the <IGMP Snooping Status>

IGMP Snooping Status Home > Multicast > IGMP Snooping > Status

Auto-refresh ☐ off

Statistics									
VLAN ID	Querier Version	Host Version	Querier Status	Queries Transmitted	Queries Received	V1 Reports Received	V2 Reports Received	V3 Reports Received	V2 Leaves Received
Router Port									
Port					Status				
1					-				
2					-				
3					-				
N-2					-				
N-1					-				
N					-				

**Figure 9-1.3: The IGMP Snooping Status**

### Parameter description

#### Statistic

- **VLAN ID**

The VLAN ID of the entry.

- **Querier Version**

Working querier version currently.

- **Host Version**

Working host version currently.

- **Querier Status**

Shows the querier status is "ACTIVE" or "IDLE".

"DISABLE" denotes the specific interface is administratively disabled.

- **Queries Transmitted**

The number of transmitted queries.

- **Queries Received**

The number of received queries.

- **V1 Reports Received**

The number of Received V1 Reports.



- **V2 Reports Received**

The number of received V2 reports.

- **V3 Reports Received**

The number of received V3 reports.

- **V2 Leaves Received**

The number of received V2 leaves.

**Router Port**

Display which ports act as router ports. A router port is a port on the Ethernet switch that leads towards the Layer 3 multicast device or IGMP querier. Static denotes the specific port is configured to be a router port. Dynamic denotes the specific port is learnt to be a router port. Both denote the specific port is configured or learnt to be a router port.

- **Port**

Switch port number.

- **Status**

Indicate whether specific port is a router port or not.

**Buttons**



**Figure 10-1.3: The IGMP Snooping Status buttons**

- **Auto-refresh**

Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.

- **Refresh**

Click to refresh the page immediately.

## 9-1.4 Group Information

After you complete to set the IGMP Snooping function then you could let the switch to display the IGMP Snooping Group Information. Entries in the IGMP Group Table are shown on this page. The IGMP Group Table is sorted first by VLAN ID, and then by group. This will use the last entry of the currently displayed table as a basis for the next lookup. When the end is reached the text "No more entries" is shown in the displayed table. Use the button to start over.

### Web Interface

To display the „IGMP Snooping Group Information“ in the web interface:

1. Click <Multicast>, <IGMP Snooping> and <Group Information>
2. Specify how many entries to show in one page
3. If you want to auto-refresh the information then you need to evoke the <Auto-refresh>.
4. Click <Refresh> to refresh all entries.
5. Click previous/next to change page.

**Figure 9-1.4: The IGMP Snooping Groups Information**

### Parameter description

#### Navigating the IGMP Group Table

Each page shows up to many entries from the IGMP group table, default being 10, selected through the "entries per page" input field. When first visited, the web page will show the first 10 entries from the beginning of the IGMP group table.

The "Search" input fields allow the user to select the starting point in the IGMP group table. It will update the displayed table starting from that or the closest next IGMP group table match.

This will use the last entry of the currently displayed table as a basis for the next lookup. When the end is reached the text "No more entries" is shown in the displayed table.

- **Search**

You can search for the information that you want to see.

- **Show entries**

You can choose how many items you want to show up.

- **VLAN ID**

VLAN ID of the group.

- **Groups**

Group address of the group displayed.

- **Port Members**

Ports under this group.

**Buttons**



**Figure 10-1.4: The IGMP Snooping Groups Information buttons**

- **Auto-refresh**

Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.

- **Refresh**

Click to refresh the page immediately.

- **Next**

Updates the group information entries, turn to the next page.

- **Previous**

Updates the group information entries, turn to the previous page.

## 9-1.5 IGMP SFM Information

Entries in the IGMP SFM Information Table are shown on this page. The IGMP SFM (Source-Filtered Multicast) Information Table also contains the SSM (Source-Specific Multicast) information. This table is sorted first by VLAN ID, then by group, and then by port. Different source addresses belong to the same group are treated as single entry.

### Web Interface

To display the IGMP SFM information in the web interface:

1. Click <Multicast>, <IGMP Snooping> and <IGMP SFM Information>
2. If you want to auto-refresh the information then you need to evoke the <Auto-refresh>.
3. Click <Refresh> to refresh all entries
4. Click previous/next to change page

**Figure 9-1.5.1: The IGMP SFM Information**

### Parameter description:

#### Navigating the IGMP SFM Information Table

Each page shows up to many entries from the IGMP SFM information table, default being 10, selected through the "entries per page" input field. When first visited, the web page will show the first 10 entries from the beginning of the IGMP SFM information table.

The "Search" input fields allow the user to select the starting point in the IGMP SFM information table. It will update the displayed table starting from that or the closest next IGMP SFM information table match.

This will use the last entry of the currently displayed table as a basis for the next lookup. When the end is reached the text "No more entries" is shown in the displayed table.

- **Search**

You can search for the information that you want to see.

- **Show entries**

You can choose how many items you want to show up.

- **VLAN ID**

VLAN ID of the group.

- **Group**

Group address of the group displayed.

- **Port**

Switch port number.

- **Mode**

Indicates the filtering mode maintained per (VLAN ID, port number, group address) basis. It can be either include or exclude.

- **Source Address**

IP address of the source. Currently, system limits the total number of IP source addresses for filtering to be 128.

- **Type**

Indicates the type. It can be either allow or deny.

**Buttons**



**Figure 9-1.5.2: The IGMP Snooping Groups Information buttons**

- **Auto-refresh**

Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.

- **Refresh :**

Click to refresh the page immediately.

- **Next :**

Updates the group information entries, turn to the next page.

- **Previous**


Updates the group information entries, turn to the previous page.

## 9-2 MLD Snooping

Curiously enough, a network node that acts as a source of IPv6 multicast traffic is only an indirect participant in MLD snooping—it just provides multicast traffic, and MLD doesn't interact with it. (Note, however, that in an application like desktop conferencing a network node may act as both a source and an MLD host; but MLD interacts with that node only in its role as an MLD host.)

A source node creates multicast traffic by sending packets to a multicast address. In IPv6, addresses with the first eight bits set (that is, "FF" as the first two characters of the address) are multicast addresses, and any node that listens to such an address will receive the traffic sent to that address. Application software running on the source and destination systems cooperates to determine what multicast address to use. (Note that this is a function of the application software, not of MLD.)

When MLD snooping is enabled on a VLAN, the switch acts to minimize unnecessary multicast traffic. If the switch receives multicast traffic destined for a given multicast address, it forwards that traffic only to ports on the VLAN that have MLD hosts for that address. It drops that traffic for ports on the VLAN that have no MLD hosts

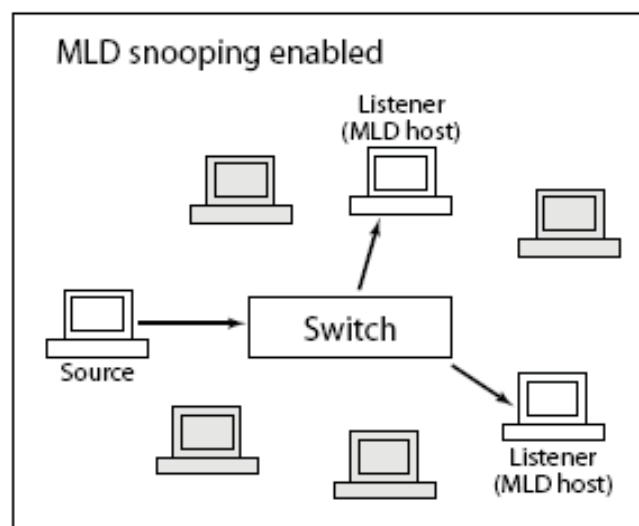

**Figure 9-2: The MLD snooping enable**

## 9-2.1 Basic Configuration

The section will let you understand how to configure the MLD Snooping basic configuration and the parameters.

### Web Interface

To configure MLD Snooping in the web interface:

1. Click <Multicast>, <MLD Snooping> and <Basic Configuration>
2. Evoke to enable or disable the global configuration parameters.
3. Evoke the port to join router port and fast leave.
4. Scroll to select the throttling mode with unlimited or 1 to 10
5. Click the <save> to save the setting
6. If you want to cancel the setting then you need to click the reset button. It will revert to previously saved values

MLD Snooping Configuration Home > Multicast > MLD Snooping > Basic Configuration

Global Configuration

Snooping Enabled	<input type="checkbox"/> off
Unregistered IPMCv6 Flooding Enabled	<input checked="" type="checkbox"/>
MLD SSM Range	ff3e:: / 96
Proxy Enabled	<input type="checkbox"/>

Port Related Configuration

Port	Router Port	Fast Leave	Throttling	Profile
1	<input type="checkbox"/>	<input type="checkbox"/>	unlimited	-
2	<input type="checkbox"/>	<input type="checkbox"/>	unlimited	-
N-1	<input type="checkbox"/>	<input type="checkbox"/>	unlimited	-
N	<input type="checkbox"/>	<input type="checkbox"/>	unlimited	-

Apply Reset

**Figure 9-2.1: The MLD Snooping Basic Configuration**

### Parameter description

#### Global Configuration

- **Snooping Enabled**

Enable the Global MLD Snooping.

- **Unregistered IPMCv6 Flooding enabled**

Enable unregistered IPMCv6 traffic flooding.

The flooding control takes effect only when MLD Snooping is enabled.

When MLD Snooping is disabled, unregistered IPMCv6 traffic flooding is always active in spite of this setting.

- **MLD SSM Range**

SSM (Source-Specific Multicast) range allows the SSM-aware hosts and routers run the SSM service model for the groups in the address (Using IPv6 address) range.

- **Proxy Enabled**

Enable MLD proxy. This feature can be used to avoid forwarding unnecessary join and leave messages to the router side.

---

**Port Related Configuration**

- **Router Port**

Specify which ports act as router ports. A router port is a port on the Ethernet switch that leads towards the Layer 3 multicast device or MLD querier. If an aggregation member port is selected as a router port, the whole aggregation will act as a router port.

- **Fast Leave**

To evoke to enable the fast leave on the port.

- **Throttling**

Enable to limit the number of multicast groups to which a switch port can belong.

- **Profile**

You can select profile when you edit in "Multicast Filtering Profile".

**Buttons**

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.



## 9-2.2 VLAN Configuration

When MLD Snooping is enabled on a VLAN, the switch acts to minimize unnecessary multicast traffic. If the switch receives multicast traffic destined for a given multicast address, it forwards that traffic only to ports on the VLAN that have MLD hosts for that address. It drops that traffic for ports on the VLAN that have no MLD hosts

The will use the last entry of the currently displayed entry as a basis for the next lookup. When the end is reached the text "No more entries" is shown in the displayed table. Use the button to start over.

### Web Interface

To configure MLD Snooping VLAN entries in the web interface:

1. Click <Multicast>, <MLD Snooping> and <VLAN Configuration>
2. Click >Add New MLD VLAN>
3. Specify the VLAN ID with entries per page.

MLD Snooping Vlan Configuration

Home > Multicast > MLD Snooping > Vlan Configuration

Start from Vlan: 1 with 20

Delete	VLAN ID	Snooping Enabled	MLD Querier	Compatibility	RV	QI(sec)	QRI(0.1 sec)	LLQI(0.1 sec)	URI(sec)
<a href="#">Delete</a>		<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	MLD-Auto	2	125	100	10	1

[Add New MLD VLAN](#)

[Apply](#) [Reset](#)

**Figure 9-2.2: The MLD Snooping VLAN Configuration**

### Parameter description

- **Delete**

Check to delete the entry. The designated entry will be deleted during the next save.

- **VLAN ID**

It displays the VLAN ID of the entry.

- **Snooping Enabled**

Enable the per-VLAN IGMP Snooping. Only up to 32 VLANs can be selected.

- **MLD Querier:**

Enable to join IGMP Querier election in the VLAN. Disable to act as an IGMP Non-Querier.

- **Compatibility**

Compatibility is maintained by hosts and routers taking appropriate actions depending on the versions of IGMP operating on hosts and routers within a network. The allowed selection is IGMP-Auto, Forced IGMPv1, Forced IGMPv2 , default compatibility value is IGMP-Auto.

- **RV**

Robustness variable. The robustness variable allows tuning for the expected packet loss on a network. The allowed range is 1 to 255; default robustness variable value is 2.

- **QI(sec)**

Query Interval. The query interval is the interval between general queries sent by the querier. The allowed range is 1 to 31744 seconds; default query interval is 125 seconds.

- **QRI(0.1sec)**

Query Response Interval. The max response time used to calculate the Max Resp Code inserted into the periodic general queries. The allowed range is 0 to 31744 in tenths of seconds; default query response interval is 100 in tenths of seconds (10 seconds).

- **LLQI (LMQI for IGMP)**

Last Member Query Interval. The Last Member Query Time is the time value represented by the Last Member Query Interval, multiplied by the Last Member Query Count. The allowed range is 0 to 31744 in tenths of seconds; default last member query interval is 10 in tenths of seconds (1 second).

- **URI(sec)**

Unsolicited Report Interval. The Unsolicited Report Interval is the time between repetitions of a host's initial report of membership in a group. The allowed range is 0 to 31744 seconds, default unsolicited report interval is 1 second. .

#### **Buttons**

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

## 9-2.3 Status

The section describes when you complete the MLD Snooping and how to display the MLD Snooping Status and detail information. It will help you to find out the detail information of MLD Snooping status.

### Web Interface

To display the MLD Snooping status in the web interface:

1. Click <Multicast>, <MLD Snooping> and <Status>
2. If you want to auto-refresh the information then you need to evoke the <Auto-refresh>
3. Click <Refresh> to refresh a MLD Snooping Status entry

MLD Snooping Status								
Auto-refresh <input type="radio"/> off <input type="button" value="Refresh"/>								
Statistics								
VLAN ID	Querier Version	Host Version	Querier Status	Queries Transmitted	Queries Received	V1 Reports Received	V2 Reports Received	V1 Leaves Received
Router Port								
Port	Status							
1	-							
2	-							
N-1	-							
N	-							

**Figure 9-2.3.1: The MLD Snooping Status**

### Parameter description

- **VLAN ID**

The VLAN ID of the entry.

- **Querier Version**

Working querier version currently.

- **Host Version**

Working host version currently.

- **Querier Status**

Show the querier status is "ACTIVE" or "IDLE".

"DISABLE" denotes the specific interface is administratively disabled.

- **Queries Transmitted**

The number of transmitted queries.

- **Queries Received**

The number of received queries.

- **V1 Reports Received**

The number of received V1 reports.

- **V2 Reports Received**

The number of received V2 reports.

- **V1 Leaves Received**

The number of received V1 leaves.

- **Router Port**

Display which ports act as router ports. A router port is a port on the Ethernet switch that leads towards the Layer 3 multicast device or MLD querier.

Static denotes the specific port is configured to be a router port.

Dynamic denotes the specific port is learnt to be a router port.

Both denote the specific port is configured or learnt to be a router port.


- **Port**

Switch port number.

- **Status**

Indicate whether specific port is a router port or not.

**Buttons**

 

**Figure 9-2.3.2: The MLD Snooping Status buttons**

- **Auto-refresh**

Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.

- **Refresh**

Click to refresh the page immediately.


## 9-2.4 Groups Information

The section describes user could get the „MLD Snooping Groups Information“. The "Search" input fields allow the user to select the starting point in the „MLD Group Table“.

### Web Interface

To display the „MLD Snooping Group Information“ in the web interface:

1. Click <Multicast>, <MLD Snooping> and <Group Information>
2. If you want to auto-refresh the information then you need to evoke the <Auto-refresh>
3. Click <Refresh> to refresh an entry of the <MLD Snooping Group Information>

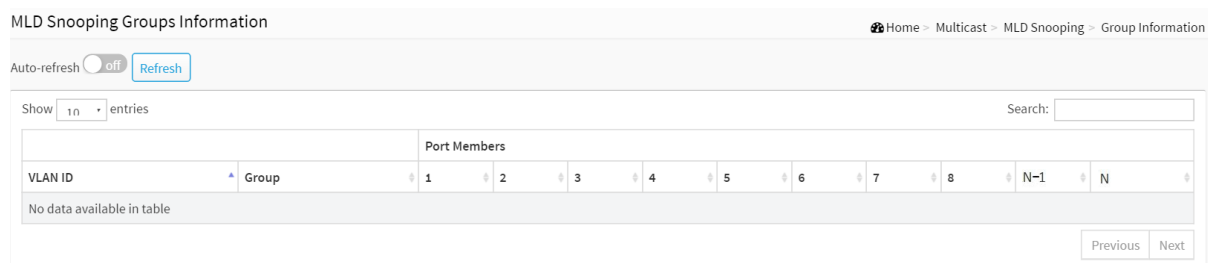

**Figure 9-2.4: The MLD Snooping Groups Information**

### Parameter description

#### Navigating the MLD Group Table

Each page shows up to many entries from the MLD group table, default being 10, selected through the "entries per page" input field. When first visited, the web page will show the first 10 entries from the beginning of the MLD group table.

The "Search" input fields allow the user to select the starting point in the MLD group table. It will update the displayed table starting from that or the closest next MLD group table match. This will use the last entry of the currently displayed table as a basis for the next lookup. When the end is reached the text "No more entries" is shown in the displayed table. Use the button to start over.

- **VLAN ID**

VLAN ID of the group.

- **Groups**

Group address of the group displayed.

- **Port Members**

Ports under this group.

- **Show entries**

You can choose how many items you want to show up.

#### Buttons



**Figure 10-2.4: The MLD Snooping Groups Information buttons**

- **Auto-refresh**

Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.

- **Refresh**

Click to refresh the page immediately.


## 9-2.5 MLD SFM Information

Entries in the MLD SFM information table are shown on this page. The MLD SFM (Source-Filtered Multicast) information table also contains the SSM (Source-Specific Multicast) information. This table is sorted first by VLAN ID, then by group, and then by port. Different source addresses belong to the same group are treated as single entry.

### Web Interface

To display the MLD SFM information in the web interface:

1. Click <Multicast>, <MLD Snooping> and <MLD SFM Information>
2. If you want to auto-refresh the information then you need to evoke the <Auto-refresh>.
3. Click <Refresh> to refresh an entry of the MLD SFM information.

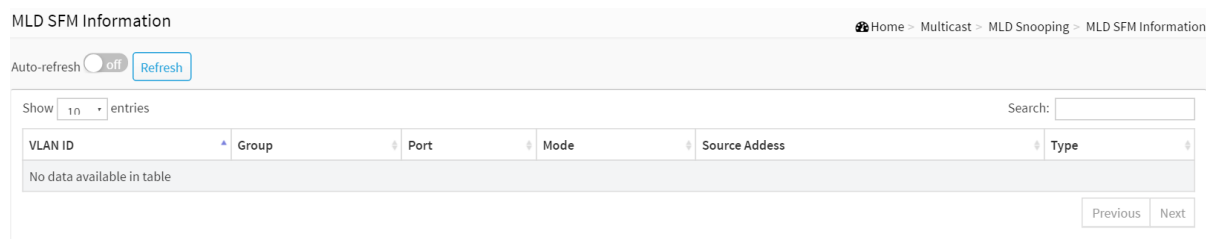

**Figure 9-2.5.1: The MLD SFM Information**

### Parameter description

#### Navigating the MLD SFM Information Table

Each page shows up to many entries from the MLD SFM information table, default being 10, selected through the "entries per page" input field. When first visited, the web page will show the first 10 entries from the beginning of the MLD SFM information table.

The "Search" input fields allow the user to select the starting point in the MLD SFM information table. It will update the displayed table starting from that or the closest next MLD SFM information table match.

This will use the last entry of the currently displayed table as a basis for the next lookup. When the end is reached the text "No more entries" is shown in the displayed table. Use the button to start over.

- **VLAN ID**

VLAN ID of the group.

- **Group**

IP Multicast group address.

- **Port**

Switch port number.

- **Mode**

Indicates the filtering mode maintained per (VLAN ID, port number, group address) basis. It can be either "Include" or "Exclude".

- **Source Address**

IP Address of the source. Currently, system limits the total number of IP source addresses for filtering to be 128.


- **Type**

Indicates the type. It can be either "Allow" or "Deny".

- **Show entries**

You can choose how many items you want to show off.

**Buttons**

 

**Figure 9-2.5.2: The MLD SFM Information buttons**

- **Auto-refresh**

Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.

- **Refresh**

Click to refresh the page immediately.



## 9-3 Multicast Filtering Profile

This page provides Multicast filtering profile related configurations.

### 9-3.1 Filtering Profile Table

The IPMC profile is used to deploy the access control on IP multicast streams. It is allowed to create at maximum 64 profiles with at maximum 128 corresponding rules for each.

#### Web Interface

To configure the IPMC profile in the web interface:

The screenshot displays the IPMC Profile Configuration web interface, which is divided into three main sections: IPMC Profile Global Setting, IPMC Profile Table Setting, and IPMC Profile Rule Configuration. Red boxes and arrows highlight the 'Add New IPMC Profile' and 'Add Last Rule' buttons, indicating the sequence of steps for configuration.

**IPMC Profile Global Setting**

Global Profile Enable: Disabled

**IPMC Profile Table Setting**

Delete	Profile Name	Profile Description	Rule
<a href="#">Delete</a>			<a href="#">Add New IPMC Profile</a>

**IPMC Profile Rule Configuration**

IPMC Profile Rule Settings (In Precedence Order)

Delete	Profile Name	Entry Name	Address Range	Action	Log
<a href="#">Delete</a>	aa		NoEntries	Deny	Disable

**Figure 9-3.1: The IPMC Profile Configuration**

**Parameter description**

- **Global Profile Mode**

Enable/disable the global IPMC profile.  
System starts to do filtering based on profile settings only when the global profile mode is enabled.

- **Profile Name**

The name used for indexing the profile table.  
Each entry has the unique name which is composed of at maximum 16 alphabetic and numeric characters.

- **Profile Description**

Additional description, which is composed of at maximum 64 alphabetic and numeric characters, about the profile.  
No blank or space characters are permitted as part of description. Use "\_" or "-" to separate the description sentence.

- **Rule**

When the profile is created, click the edit button to enter the rule setting page of the designated profile. Summary about the designated profile will be shown by clicking the view button. You can manage or inspect the rules of the designated profile by using the following buttons:



: List the rules associated with the designated profile.



: Adjust the rules associated with the designated profile.

- **Profile Name**

The name of the designated profile to be associated. This field is not editable.

- **Entry Name**

The name used in specifying the address range used for this rule.  
Only the existing profile address entries will be chosen in the selected box. This field is not allowed to be selected as none ("-") while the Rule Settings Table is committed.

- **Address Range**

The corresponding address range of the selected profile entry. This field is not editable and will be adjusted automatically according to the selected profile entry.

- **Action**

Indicates the learning action upon receiving the join/report frame that has the group address matches the address range of the rule.

Permit: Group address matches the range specified in the rule will be learned.  
Deny: Group address matches the range specified in the rule will be dropped.

- **Log**

Indicates the logging preference upon receiving the join/report frame that has the group address matches the address range of the rule.

Enable: Corresponding information of the group address, that matches the range specified in the rule, will be logged.

Disable: Corresponding information of the group address, that matches the range specified in the rule, will not be logged.

**Buttons**

- **Add New IPMC Profile**

Click to add new IPMC profile. Specify the name and configure the new entry. Click "Save".

- **Delete**

Check to delete the entry.  
The designated entry will be deleted during the next save.

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

- **Add Last Rule**

Click to add a new rule in the end of the specific profile's rule list. Specify the address entry and configure the new entry. Click "Apply"

## 9-3.2 Filtering Address Entry

This page provides address range settings used in IPMC profile.

The address entry is used to specify the address range that will be associated with IPMC Profile. It is allowed to create at maximum 128 address entries in the system.

### Web Interface

To configure the IPMC profile address in the web interface:

The figure shows two screenshots of the 'IPMC Profile Address Configuration' web interface. The top screenshot shows the 'Add New Address (Range) Entry' button highlighted with a red box and a red arrow pointing to it. The bottom screenshot shows the same interface with the 'Delete' button highlighted with a red box and a red arrow pointing to it.

**Figure 9-3.2: The IPMC Profile Address Configuration**

### Parameter description

- **Entry Name**

The name used for indexing the address entry table.  
Each entry has the unique name which is composed of at maximum 16 alphabetic and numeric characters.

- **Start Address**

The starting IPv4/IPv6 Multicast group address that will be used as an address range.

- **End Address**

The ending IPv4/IPv6 Multicast group address that will be used as an address range.

### Buttons

- **Add New Address (Range) Entry**

Click to add new address range. Specify the name and configure the addresses.  
Click "Apply"

- **Delete**

Check to delete the entry.  
The designated entry will be deleted during the next save.

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

## 10. MVR

The MVR feature enables multicast traffic forwarding on the Multicast VLAN. In a multicast television application, a PC or a television with a set-top box can receive the multicast stream. Multiple set-top boxes or PCs can be connected to one subscriber port, which is a switch port configured as an MVR receiver port. When a subscriber selects a channel, the set-top box or PC sends an IGMP join message to Switch A to join the appropriate multicast. Uplink ports that send and receive multicast data to and from the multicast VLAN are called MVR source ports.

### 10-1.1 Basic Configuration

#### Web Interface

To configure MVR in the web interface:

1. Click <MVR> and <Basic Configuration>
2. Scroll the MVR mode to enable or disable MVR and set all parameters
3. Click <Add New MVR VLAN>
4. Specify MVR VID, MVR name, IGMP address, mode, tagging, priority, LLQI, interface and channel profile
5. Select which port to <Click Immediate Leave>
6. Click the apply to save the setting
7. If you want to cancel the setting then you need to click the Reset button. It will revert to previously saved values

MVR Configurations

---

Global Setting

MVR Mode ☐ off

---

VLAN Interface Setting (Role [I:Inactive / S:Source / R:Receiver])

Delete	MVR VID	MVR Name	IGMP Address	Mode	Tagging	Priority	LLQI	Interface Channel Profile
<a href="#">Add New MVR VLAN</a>								

---

Immediate Leave Setting

Port	Immediate Leave
1	<input type="checkbox"/>
2	<input type="checkbox"/>
N-1	<input type="checkbox"/>
N	<input type="checkbox"/>

[Apply](#) [Reset](#)

**Figure 10-1.1: The MVR Configuration**

## Parameter description

- **MVR Mode**

Enable/disable MVR globally.

The Unregistered Flooding control depends on the current configuration in IGMP/MLD Snooping. It is suggested to enable Unregistered Flooding control when the MVR group table is full.

- **MVR VID**

Specify the Multicast VLAN ID.

**Be Caution:** MVR source ports are not recommended to be overlapped with management VLAN ports.

- **MVR Name**

MVR name is an optional attribute to indicate the name of the specific MVR VLAN. Maximum length of the MVR VLAN Name string is 32. MVR VLAN name can only contain alphabets or numbers. MVR VLAN name can be edited for the existing MVR VLAN entries or it can be added to the new entries.

- **IGMP Address**

Define the IPv4 address as source address used in IP header for IGMP control frames.

The default IGMP address is not set (0.0.0.0).

When the IGMP address is not set, system uses IPv4 management address of the IP interface associated with this VLAN.

When the IPv4 management address is not set, system uses the first available IPv4 management address.

Otherwise, system uses a pre-defined value. By default, this value will be 192.0.2.1.

- **Mode**

Specify the MVR mode of operation. In dynamic mode, MVR allows dynamic MVR membership reports on source ports. In compatible mode, MVR membership reports are forbidden on source ports. The default is dynamic mode.

- **Tagging**

Specify whether the traversed IGMP/MLD control frames will be sent as untagged or tagged with MVR VID. The default is tagged.

- **Priority**

Specify how the traversed IGMP/MLD control frames will be sent in prioritized manner. The default Priority is 0.

- **LLQI**

Define the maximum time to wait for IGMP/MLD report memberships on a receiver port before removing the port from multicast group membership. The value is in units of tenths of a seconds. The range is from 0 to 31744. The default LLQI is 5 tenths or one-half second.

- **Interface Channel Profile**

When the MVR VLAN is created, select the profile to expand the corresponding multicast channel settings for the specific MVR VLAN. The file established on filtering profile table.

- **Port**

The logical port for the settings.

- **Port Role**

Configure an MVR port of the designated MVR VLAN as one of the following roles.

**Inactive:** The designated port does not participate MVR operations.

**Source:** Configure uplink ports that receive and send multicast data as source ports. Subscribers cannot be directly connected to source ports.

**Receiver:** Configure a port as a receiver port if it is a subscriber port and should only receive multicast data. It does not receive data unless it becomes a member of the multicast group by issuing IGMP/MLD messages.

**Be Caution:** MVR source ports are not recommended to be overlapped with management VLAN ports. Select the port role by clicking the "role" symbol to switch the setting. I indicates Inactive; S indicates Source; R indicates Receiver. The default role is inactive.

- **Immediate Leave**

Enable the fast leave on the port.

**Buttons**

- **Add New MVR VLAN**

Click to add new mvr vlan. Specify MVR VID, MVR name, IGMP address, mode, tagging, priority, LLQI, interface channel profile. Click "Apply"

- **Delete**

Check to delete the entry. The designated entry will be deleted during the next save.

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.


## 10-1.2 Status

The section describes the switch will display the MVR detail statistics after you had configured MVR on the switch. It provides the detail MVR statistics information

### Web Interface

To display the MVR statistics information in the web interface:

1. Click <MVR> and <Status>
2. If you want to auto-refresh the information then you need to evoke the <Auto-refresh>.
3. To click the <Refresh> to refresh an entry of the MVR statistics information.

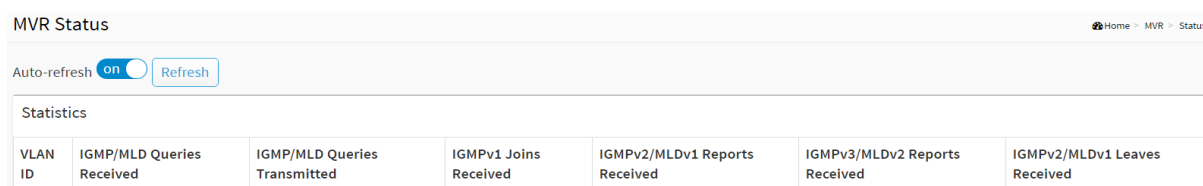

The screenshot shows the 'MVR Status' page in a web browser. At the top right, there is a breadcrumb trail: 'Home > MVR > Status'. Below the title, there is an 'Auto-refresh' toggle switch set to 'on' and a 'Refresh' button. A table titled 'Statistics' contains the following data:

VLAN ID	IGMP/MLD Queries Received	IGMP/MLD Queries Transmitted	IGMPv1 Joins Received	IGMPv2/MLDv1 Reports Received	IGMPv3/MLDv2 Reports Received	IGMPv2/MLDv1 Leaves Received

**Figure 10-1.2.1: The MVR Statistics Information**

### Parameter description

- **VLAN ID**

The Multicast VLAN ID.

- **IGMP/MLD Queries Received**

The number of received queries for IGMP and MLD, respectively.

- **IGMP/MLD Queries Transmitted**

The number of transmitted queries for IGMP and MLD, respectively.

- **IGMPv1 Joins Received**

The number of received IGMPv1 join's.

- **IGMPv2/MLDv1 Report's Received**

The number of received IGMPv2 join's and MLDv1 report's, respectively.

- **IGMPv3/MLDv2 Report's Received**

The number of received IGMPv3 join's and MLDv2 report's, respectively.

- **IGMPv2/MLDv1 Leave's Received**

The number of received IGMPv2 leave's and MLDv1 done's, respectively.

### Buttons



**Figure 10-1.2.2: The MVR Statistics Information buttons**

- **Auto-refresh**

Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.

- **Refresh**

Click to refresh the page immediately.




### 10-1.3 MVR Groups Information

The section describes user could display the MVR groups detail information on the switch. Entries in the MVR group table are shown on this page. The MVR group Table is sorted first by VLAN ID, and then by group.

#### Web Interface

To display the MVR groups information in the web interface:

1. Click <MVR> and <Groups Information>
2. If you want to auto-refresh the information then you need to evoke the <Auto-refresh>.
3. To click the <Refresh> to refresh an entry of the MVR groups information.
4. Click previous/next to change page.

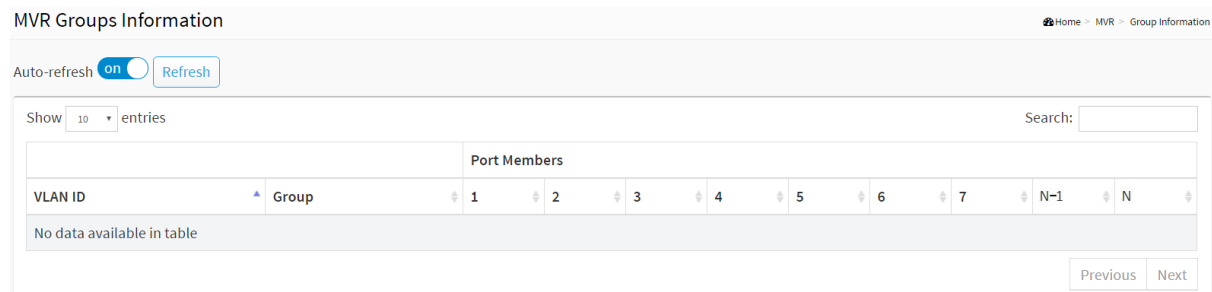

**Figure 10-1.3: The MVR Groups Information**

#### Parameter description

##### Navigating the MVR Channels (Groups) Information Table

Each page shows up to many entries from the MVR group table, default being 10, selected through the "entries per page" input field. When first visited, the web page will show the first 10 entries from the beginning of the MVR Channels (Groups) Information Table.

The "Search" input fields allow the user to select the starting point in the MVR Channels (Groups) Information Table. It will update the displayed table starting from that or the closest next MVR Channels (Groups) Information Table match.

The will use the last entry of the currently displayed table as a basis for the next lookup. When the end is reached the text "No more entries" is shown in the displayed table. Use the button to start over

##### MVR Channels (Groups) Information Table Columns

- **Show entries**

You can choose how many items you want to show up.

- **Search**

You can search for the information that you want to see.

- **VLAN ID**

VLAN ID of the group.

- **Groups**

Group ID of the group displayed.

- **Port Members**

Ports under this group.

- Buttons**



**Figure 10-1.3: The MVR Groups Information buttons**

- **Auto-refresh**

Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.

- **Refresh**

Click to refresh the page immediately.

- **Next**

Updates the system log entries, turn to the next page.

- **Previous**

Updates the system log entries, turn to the previous page.

## 10-1.4 MVR SFM Information

The MVR SFM (Source-Filtered Multicast) Information Table also contains the SSM (Source-Specific Multicast) information. This table is sorted first by VLAN ID, then by group, and then by port. Different source addresses belong to the same group are treated as single entry.

### Web Interface

To display the MVR SFM information in the web interface:

1. Click <MVR> and <MVR SFM Information>
2. If you want to auto-refresh the information then you need to evoke the <Auto-refresh>.
3. To click the <Refresh> to refresh an entry of the MVR groups information.
4. Click previous/next to change page.

**Figure 10-1.4.1: The MVR SFM Information**

### Parameter description

#### Navigating the MVR SFM Information Table

Each page shows up to many entries from the MVR SFM Information Table, default being 10, selected through the "entries per page" input field. When first visited, the web page will show the first 10 entries from the beginning of the MVR SFM Information Table.

The "Search" input fields allow the user to select the starting point in the MVR SFM Information Table. It will update the displayed table starting from that or the closest next MVR SFM Information Table match.

The will use the last entry of the currently displayed table as a basis for the next lookup. When the end is reached the text "No more entries" is shown in the displayed table. Use the button to start over.

#### MVR SFM Information Table Columns

- **Show entries**

You can choose how many items you want to show up.

- **Search**

You can search for the information that you want to see.

- **VLAN ID**

VLAN ID of the group.

- **Group**  
IP Multicast group address.
- **Port**  
Switch port number.
- **Mode**  
Indicates the filtering mode maintained per (VLAN ID, port number, group address) basis. It can be either "Include" or "Exclude".
- **Source Address**  
IP Address of the source. Currently, system limits the total number of IP source addresses for filtering to be 128. When there is not any source filtering address, the text "None" is shown in the source address field.
- **Type**  
Indicates the type. It can be either "Allow" or "Deny".
- **Hardware Filter/Switch**  
Indicates whether data plane destined to the specific group address from the source IPv4/IPv6 address could be handled by chip or not.

**Buttons**

**Figure 10-1.4.2: The MVR SFM Information buttons**

- **Auto-refresh**  
Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
- **Refresh**  
Click to refresh the page immediately.
- **Next**  
Updates the system log entries, turn to the next page.
- **Previous**  
Updates the system log entries, turn to the previous page.

# 11. DHCP

The section describes to configure and display the DHCP Snooping parameters of the switch. The DHCP Snooping can prevent attackers from adding their own DHCP servers to the network.

## 11-1 Snooping

### 11-1.1 Configuration

DHCP Snooping is used to block intruder on the untrusted ports of the switch device when it tries to intervene by injecting a bogus DHCP reply packet to a legitimate conversation between the DHCP client and server.

The section describes to configure the DHCP Snooping parameters of the switch. The DHCP Snooping can prevent attackers from adding their own DHCP servers to the network.

#### Web Interface

To configure DHCP snooping in the web interface:

1. Click <DHCP>, <Snooping> and <Configuration>
2. Select <On> in the mode of <DHCP Snooping Configuration>
3. Select <Trusted> of the specific port in the mode of <Port Mode Configuration>
4. Click <Apply>

DHCP Snooping Configuration

Home > DHCP > Snooping > Configuration

Snooping Mode: ☒ On

Port Mode Configuration

Port	Mode
1	Untrusted
2	Untrusted
N-1	Untrusted
N	Trusted

Apply Reset

**Figure 11-1.1: The DHCP Snooping Configuration**

#### Parameter description

##### ● Snooping Mode

Indicates the DHCP snooping mode operation. Possible modes are:

on: Enable DHCP snooping mode operation. When DHCP snooping mode operation is enabled, the DHCP request messages will be forwarded to trusted ports and only allow reply packets from trusted ports.

off: Disable DHCP snooping mode operation.

- **Port Mode Configuration**

Indicates the DHCP snooping port mode. Possible port modes are:

Trusted: Configures the port as trusted source of the DHCP messages. Trusted port can forward DHCP packets normally.

Untrusted: Configures the port as untrusted source of the DHCP messages. Untrusted port will discard the packets when it receive DHCP packets.

**Buttons**

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.


## 11-1.2 Snooping Table

This page display the dynamic IP assigned information after DHCP Snooping mode is enabled. All DHCP clients obtained the dynamic IP address from the DHCP server will be listed in this table except for local VLAN interface IP addresses. Entries in the Dynamic DHCP Snooping Table are shown on this page.

### Web Interface

To monitor a DHCP in the web interface:

1. Click <DHCP>, <Snooping> and <Snooping Table>

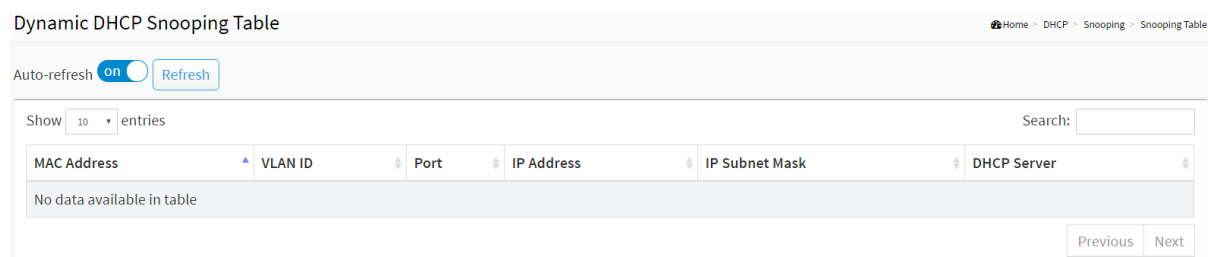

**Figure 11-1.2: The DHCP snooping table**

### Parameter description

- **Show entries**

You can choose how many items you want to show up.

- **Search**

You can search for the information that you want to see.

- **MAC Address**

User MAC address of the entry.

- **VLAN ID**

VLAN-ID in which the DHCP traffic is permitted.

- **Port**

Switch port number for which the entries are displayed.

- **IP Address**

User IP address of the entry.

- **IP Subnet Mask**

User IP subnet mask of the entry.

- **DHCP Server**

DHCP server address of the entry.

### Buttons



**Figure 12-1.2: The DHCP snooping table buttons**

- **Auto-refresh**

Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.

- **Refresh**

Click to refresh the page immediately.

- **Next**

Updates the system log entries, turn to the next page.

- **Previous**

Updates the system log entries, turn to the previous page.



## 11-1.3 Detailed Statistics

This page provides statistics for DHCP Snooping. Notice that the normal forward per-port TX statistics isn't increased if the incoming DHCP packet is done by L3 forwarding mechanism. And clear the statistics on specific port may not take effect on global statistics since it gathers the different layer overview.

### Web Interface

To display DHCP Relay statistics in the web interface:

1. Click <DHCP>, <Snooping> and <Detailed Statistics>
2. Select port that you want to display the DHCP Detailed Statistics.
3. If you want to auto-refresh the information then you need to evoke the <Auto-refresh>.
4. To click the <Refresh> to refresh an entry of the DHCP Detailed Statistics.

DHCP Detail Statistics Port 1

Auto-refresh ☐ Refresh Port 1 ▾

Receive Packets		Transmit Packets	
Rx Discover	0	Tx Discover	0
Rx Offer	0	Tx Offer	0
Rx Request	0	Tx Request	0
Rx Decline	0	Tx Decline	0
Rx ACK	0	Tx ACK	0
Rx NAK	0	Tx NAK	0
Rx Release	0	Tx Release	0
Rx Inform	0	Tx Inform	0
Rx Lease Query	0	Tx Lease Query	0
Rx Lease Unassigned	0	Tx Lease Unassigned	0
Rx Lease Unknown	0	Tx Lease Unknown	0
Rx Lease Active	0	Tx Lease Active	0
Rx Discarded Checksum Error	0		
Rx Discarded from Untrusted	0		

**Figure 11-1.3.1: The DHCP Detailed Statistics**

### Parameter description

#### Server Statistics

- **Rx and Tx Discover**

The number of discover (option 53 with value 1) packets received and transmitted.

- **Rx and Tx Offer**

The number of offer (option 53 with value 2) packets received and transmitted.

- **Rx and Tx Request**

The number of request (option 53 with value 3) packets received and transmitted.

- **Rx and Tx Decline**

The number of decline (option 53 with value 4) packets received and transmitted.

- **Rx and Tx ACK**

The number of ACK (option 53 with value 5) packets received and transmitted.

- **Rx and Tx NAK**

The number of NAK (option 53 with value 6) packets received and transmitted.

- **Rx and Tx Release**

The number of release (option 53 with value 7) packets received and transmitted.

- **Rx and Tx Inform**

The number of inform (option 53 with value 8) packets received and transmitted.

- **Rx and Tx Lease Query**

The number of lease query (option 53 with value 10) packets received and transmitted.

- **Rx and Tx Lease Unassigned**

The number of lease unassigned (option 53 with value 11) packets received and transmitted.

- **Rx and Tx Lease Unknown**

The number of lease unknown (option 53 with value 12) packets received and transmitted.

- **Rx and Tx Lease Active**

The number of lease active (option 53 with value 13) packets received and transmitted.

- **Rx Discarded checksum error**

The number of discard packet that IP/UDP checksum is error.

- **Rx Discarded from Untrusted**

The number of discarded packet that are coming from untrusted port.

#### **Buttons**



**Figure 11-1.3.2: The DHCP Detailed Statistics buttons**

- **Auto-refresh**

Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.

- **Refresh**

Click to refresh the page immediately.

- **Port 1**

Select port that you want to display the DHCP detailed statistics.

## 11-2 Relay

### 11-2.1 Configuration

A DHCP relay agent is used to forward and to transfer DHCP messages between the clients and the server when they are not in the same subnet domain. It stores the incoming interface IP address in the GIADDR field of the DHCP packet. The DHCP server can use the value of GIADDR field to determine the assigned subnet. For such condition, please make sure the switch configuration of VLAN interface IP address and PVID (Port VLAN ID) correctly.

#### Web Interface

To configure DHCP Relay in the web interface:

1. Click <DHCP>, <Relay> and <Configuration>
2. Specify the relay mode, relay server, relay information mode and relay information policy
3. Click <Apply>

DHCP Relay Configuration	
Relay Mode	<input type="checkbox"/> off
Relay Server	<input type="text" value="0.0.0.0"/>
Relay Information Mode	<input type="checkbox"/> off
Relay Information Policy	Replace ▾

**Figure 11-2.1: The DHCP Relay Configuration**

#### Parameter description

- **Relay Mode**

Indicates the DHCP relay mode operation.

Possible modes are:

on: Enable DHCP relay mode operation. When DHCP relay mode operation is enabled, the agent forwards and transfers DHCP messages between the clients and the server when they are not in the same subnet domain. The DHCP broadcast message won't be flooded for security considerations.

off: Disable DHCP relay mode operation.

- **Relay Server**

Indicates the DHCP relay server IP address.

- **Relay Information Mode**

Indicates the DHCP relay information mode option operation. The option 82 circuit ID format as "[vlan\_id][module\_id][port\_no]". The first four characters represent the VLAN ID, the fifth and sixth characters are the module ID (in standalone device it always equal 0, in stackable device it means switch ID), and the last two characters are the port number. For example, "00030108" means the DHCP message receive form VLAN ID 3, switch ID 1, port No 8. and the option 82 remote ID value is equal the switch MAC address.

Possible modes are:

Enabled: Enable DHCP relay information mode operation. When DHCP relay information mode operation is enabled, the agent inserts specific information (option 82) into a DHCP message when forwarding to DHCP server and removes it from a DHCP message when transferring to DHCP client. It only works when DHCP relay operation mode is enabled.

Disabled: Disable DHCP relay information mode operation.

- **Relay Information Policy**

Indicates the DHCP relay information option policy. When DHCP relay information mode operation is enabled, if the agent receives a DHCP message that already contains relay agent information it will enforce the policy. The "Replace" policy is invalid when relay information mode is disabled. Possible policies are:

Replace: Replace the original relay information when a DHCP message that already contains it is received.

Keep: Keep the original relay information when a DHCP message that already contains it is received.

Drop: Drop the package when a DHCP message that already contains relay information is received.

### **Buttons**

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

## 11-2.2 Statistics

This page provides statistics for DHCP relay.

### Web Interface

To monitor a DHCP Relay statistics in the web interface:

1. Click <DHCP>, <Relay> and <Relay Statistics>
2. To display DHCP relay statistics

DHCP Relay Statistics

Auto-refresh ☐ off [Refresh](#) [Clear](#)

Server Statistics

Transmit to Server	Transmit Error	Receive from Server	Receive Missing Agent Option	Receive Missing Circuit ID	Receive Missing Remote ID
0	0	0	0	0	0

Client Statistics

Transmit to Client	Transmit Error	Receive from Client	Receive Agent Option	Replace Agent Option	Keep Agent Option	Drop Agent Option
0	0	0	0	0	0	0

**Figure 11-2.2.1: The DHCP relay statistics**

### Parameter description

#### Server Statistics

- **Transmit to Server**

The number of packets that are relayed from client to server.

- **Transmit Error**

The number of packets that resulted in errors while being sent to clients.

- **Receive from Server**

The number of packets received from server.

- **Receive Missing Agent Option**

The number of packets received without agent information options.

- **Receive Missing Circuit ID**

The number of packets received with the circuit ID option missing.

- **Receive Missing Remote ID**

The number of packets received with the remote ID option missing.

#### Client Statistics

- **Transmit to Client**

The number of relayed packets from server to client.

- **Transmit Error**

The number of packets that resulted in error while being sent to servers.

- **Receive from Client**

The number of received packets from server.

- **Receive Agent Option**

The number of received packets with relay agent information option.

- **Replace Agent Option**

The number of packets which were replaced with relay agent information option.

- **Keep Agent Option**

The number of packets whose relay agent information was retained.

- **Drop Agent Option**

The number of packets that were dropped which were received with relay agent information.

**Buttons**



**Figure 11-2.2.2: The DHCP relay statistics buttons**

- **Auto-refresh**

Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.

- **Refresh**

Click to refresh the page immediately.

## 11-3 Server

This page configures mode to enable/disable DHCP server per system and per VLAN. And configures start IP and end IP addresses. DHCP server will allocate these IP addresses to DHCP client. Deliver configuration parameters to DHCP client.

### Web Interface

To configure DHCP server in the web interface:

1. Click <DHCP> and <Server>
2. Click <Add Interface>
3. Specify VLAN, mode, start IP, end IP, lease time, subnet mask, default router and DNS server.
4. Click <Apply>

The screenshot shows the 'DHCP Server Configuration' web interface. At the top, there is a breadcrumb trail: Home > DHCP > Server. Below this is a table with columns: Delete, VLAN, Mode, Start IP, End IP, Lease time, Subnet mask, Default router, and DNS server. Below the table are buttons for 'Add Interface', 'Apply', and 'Reset'. A red box highlights the 'Add Interface' button, and a red arrow points from it to the 'Add Interface' button in the configuration table below.

**DHCP Server Configuration**

Home > DHCP > Server

Interfaces

Delete	VLAN	Mode	Start IP	End IP	Lease time	Subnet mask	Default router	DNS server
<a href="#">Delete</a>		Disabled ▾						

[Add Interface](#) [Apply](#) [Reset](#)

**DHCP Server Configuration**

Home > DHCP > Server

Interfaces

Delete	VLAN	Mode	Start IP	End IP	Lease time	Subnet mask	Default router	DNS server
<a href="#">Delete</a>		Disabled ▾						

[Add Interface](#) [Apply](#) [Reset](#)

**Figure 11-3: The DHCP server configuration**

### Parameter description

- **VLAN**

Configure the VLAN in which DHCP server is enabled or disabled. Allowed VLAN are in the range 1 through 4095

- **Mode**

Indicate the operation mode per VLAN. Possible modes are:

**Enable:** Enable DHCP server per VLAN.

**Disable:** Disable DHCP server per VLAN.

- **Start IP and End IP**

Define the IP range. The Start IP must be smaller than or equal to the end IP.

- **Lease Time**

Display lease time of the pool.

- **Subnet Mask**

Configure subnet mask of the DHCP address.

- **Default router**

Configure the destination IP network or host address of this route.

- **DNS Server**

Specify DNS server.

**Buttons**

- **Delete**

Check to delete the entry. It will be deleted during the next save.

- **Add Interface**

Click to add a new DHCP server.

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.



## 12. Security

This section shows you to configure the port security settings of the switch. You can use the port security to restrict input to an interface by limiting and identifying MAC addresses.

### 12-1 Management

#### 12-1.1 Account

This page provides an overview of the current users. Currently the only way to login as another user on the web server is to close and reopen the browser

#### Web Interface

To configure user in the web interface:

1. Click <Security>, <Management> and <Account>
2. Click <Add New User>
3. Specify the user name
4. Click <Apply>

Account Configuration Home > Security > Management Access Method > Account

User Name	Privilege Level
admin	15

[Add New User](#)

---

Add User

User Settings

User Name	<input type="text"/>
Password	<input type="password"/>
Password (again)	<input type="password"/>
Privilege Level	<input type="text" value="1"/>

**Figure 12-1.1: The Account configuration**

#### Parameter description

- **User Name**

The name identifying the user. The field can be input 31 characters. This is also a link to add/edit user.

- **Password**

To type the password. The field can be input 31 characters, and the allowed content is the ASCII characters from 32 to 126.

- **Password (again)**

To type the password again. You must type the same password again in the field.

- **Privilege Level**

The privilege level of the user. The allowed range is 1 to 15. If the privilege level value is 15, it can access all groups, i.e. that is granted the fully control of the device. But others value need to refer to each group privilege level. User's privilege should be same or greater than the group privilege level to have the access of that group. By default setting, most groups privilege level 5 has the read-only access and privilege level 10 has the read-write access. And the system maintenance (software upload, factory defaults and etc.) need user privilege level 15. Generally, the privilege level 15 can be used for an administrator account, privilege level 10 for a standard user account and privilege level 5 for a guest account.

**Buttons**

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

- **Cancel**

Click to undo any changes made locally and return to the Users.

- **Delete User**

Delete the current user. This button is not available for new configurations (Add new user)

## 12-1.2 Privilege Levels

This page provides an overview of the privilege levels. The switch provides user set Account, Aggregation, Diagnostics, EEE, GARP, GVRP, IP, IPMC Snooping LACP LLDP LLDP MED MAC Table MRP MVR MVRP Maintenance Mirroring Ports Private VLANs QoS SMTP SNMP Security Spanning Tree System Trap Event VCL VLANs Voice VLAN Privilege Levels from 1 to 15 .

### Web Interface

To configure privilege level in the web interface:

1. Click <Security>, <Management> and <Privilege Level>
2. Specify the privilege level
3. Click <Apply>

Privilege Level Configuration Home > Security > Management > Privilege Level

Group Name	Privilege Level	
	Read-Only	Read-Write
access-mgmt	5 ▼	10 ▼
account	15 ▼	15 ▼
arp-inspection	5 ▼	10 ▼
upnp	5 ▼	10 ▼
vlan	5 ▼	10 ▼

Apply Reset

**Figure12-1.2: The Privilege Level configuration**

### Parameter description

#### ● Group Name

The name identifying the privilege group. In most cases, a privilege level group consists of a single module (e.g. LACP, RSTP or QoS), but a few of them contains more than one. The following description defines these privilege level groups in details:

System: Contact, name, location, timezone, daylight saving time, log.

Security: Authentication, system access management, port (contains Dot1x port, MAC based and the MAC address limit), ACL, HTTPS, SSH, ARP inspection, IP source guard.

IP: Everything except 'ping'.

Port: Everything except 'VeriPHY'.

Diagnostics: 'ping' and 'VeriPHY'.

Maintenance: CLI- system reboot, system restore default, system password, configuration save, configuration load and firmware load. Web- users, privilege levels and everything in maintenance.

#### ● Privilege Levels

Every group has an authorization privilege level for the following sub groups: configuration read-only, configuration/execute read-write. User privilege should be same or greater than the authorization privilege level to have the access to that group.

**Buttons**

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

### 12-1.3 Auth Method

This page shows how to configure a user with auth method when he logs into the switch via one of the management client interfaces.

#### Web Interface

To configure an authentication method in the web interface:

1. Click <Security>, <Management> and <Auth Method>
2. Specify the client (console, telnet, ssh, web) which you want to monitor.
3. Specify the methods (none, local, radius, tacacs), service port, cmd Lvl, cfg cmd, fallback, exec.
4. Click <Apply>

Auth Method Configuration Home > Security > Management > Auth Method

---

Authentication Method Configuration

Client	Methods			Service Port
console	local ▼	none ▼	none ▼	
telnet	local ▼	none ▼	none ▼	23
ssh	local ▼	none ▼	none ▼	22
http	local ▼	none ▼	none ▼	80
https				443
	local ▼	none ▼	none ▼	

HTTP Redirect ☐

---

Command Authorization Method Configuration

Client	Methods	Cmd Lvl	Cfg Cmd	Fallback
console	none ▼	0	<input type="checkbox"/>	<input type="checkbox"/>
telnet	none ▼	0	<input type="checkbox"/>	<input type="checkbox"/>
ssh	none ▼	0	<input type="checkbox"/>	<input type="checkbox"/>

---

Accounting Method Configuration

Client	Methods	Cmd Lvl	Exec
console	none ▼	0	<input type="checkbox"/>
telnet	none ▼	0	<input type="checkbox"/>
ssh	none ▼	0	<input type="checkbox"/>

**Figure 12-1.3: The Authentication Method Configuration**

**Parameter description****Authentication Method Configuration**

- **Client**

The management client for which the configuration below applies.

- **Method**

Authentication method can be set to one of the following values:

- none: authentication is disabled and login is not possible.
- local: use the local user database on the switch for authentication.
- radius: use a remote RADIUS server for authentication.
- tacacs: use a remote TACACS server for authentication.

Methods that involves remote servers are timed out if the remote servers are offline. In this case the next method is tried. Each method is tried from left to right and continues until a method either approves or rejects a user. If a remote server is used for primary authentication it is recommended to configure secondary authentication as "local". This will enable the management client to login via the local user database if none of the configured authentication servers are alive.

- **Service Port**

The TCP port for each client service. The valid port number is 1 ~ 65534.

- **HTTP Redirect**

Enable http automatic redirect.

**Command Authorization Method Configuration**

- **Client**

The management client for which the configuration below applies.

- **Method**

Authorization method can be set to one of the following values:

- none: authorization is disabled and login is not possible.
- tacacs+: use a remote TACACS+ server for authorization.

- **Cmd Lvl**

Runs authorization for all commands at the specified privilege level. Specific command level that should be authorized. Valid entries are 0 through 15.

- **Cfg Cmd**

Enable or disable the configure command.

- **Fallback**

The local database can act as a fallback method for several functions. This behavior is designed to help you prevent accidental lockout from the security appliance.

- **Client**

The management client for which the configuration below applies.

- **Method**

accounting Method can be set to one of the following values:

- none : accounting is disabled and login is not possible.
- tacacs+ : use a remote TACACS+ server for accounting.

- **Cmd Lvl**

Runs accounting for all commands at the specified privilege level. Specific command level that should be authorized. Valid entries are 0 through 15.

- **Exec**

Runs accounting to determine if the user is allowed to run an EXEC shell. This facility might return user profile information such as autocommand information.

**Buttons**

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

## 12-1.4 Access Management

This section shows you to configure access management table of the switch including HTTP/HTTPS, SNMP, and TELNET/SSH. You can manage the switch over an Ethernet LAN, or over the Internet.

### Web Interface

To configure access management in the web interface:

1. Click <Security>, <Management> and <Access Management>
2. Select <on> in the mode field of access management configuration
3. Click <Add New Entry>
4. Specify the IP address and mask Length.
5. Check access management method (HTTP/HTTPS, SNMP, and TELNET/SSH) in the entry.
6. Click <Apply>

Access Management Configuration Home > Security > Management Access Method > Access Management

Mode ☐ off

Delete	VLAN ID	IP Address	Mask Length	HTTP/HTTPS	SNMP	TELNET/SSH
<input type="button" value="Delete"/>	1			<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="button" value="Delete"/>	1			<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

**Figure 12-1.4: The Access Management Configuration**

### Parameter description

- **Mode**

Indicates the access management mode operation. Possible modes are:

**On:** Enable access management mode operation.

**Off:** Disable access management mode operation.

- **VLAN ID**

Indicates the VLAN ID for the access management entry.

- **Delete**

Check to delete the entry. It will be deleted during the next save.

- **IP address**

Enter the source IP address.

- **Mask Length**

Enter the Mask Length.

- **HTTP/HTTPS**

Indicates that the host can access the switch from HTTP/HTTPS interface if the host IP address matches the IP address range provided in the entry.



- **SNMP**

Indicates that the host can access the switch from SNMP interface if the host IP address matches the IP address range provided in the entry.

- **TELNET/SSH**

Indicates that the host can access the switch from TELNET/SSH interface if the host IP address matches the IP address range provided in the entry.

**Buttons**

- **Add New Entry**

Click to add a new access management entry.

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

## 12-2 SNMP

Any Network Management System (NMS) running the Simple Network Management Protocol (SNMP) can manage the managed devices equipped with SNMP agent, provided that the Management Information Base (MIB) is installed correctly on the managed devices. The SNMP is a protocol that is used to govern the transfer of information between SNMP manager and agent and traverses the Object Identity (OID) of the management Information Base (MIB), described in the form of SMI syntax. SNMP agent is running on the switch to response the request issued by SNMP manager.

Basically, it is passive except issuing the trap information. The switch supports a switch to turn on or off the SNMP agent. If you set the field SNMP "Enable", SNMP agent will be started up. All supported MIB OIDs, including RMON MIB, can be accessed via SNMP manager. If the field SNMP is set "Disable", SNMP agent will be de-activated, the related Community Name, Trap Host IP Address, Trap and all MIB counters will be ignored.

### 12-2.1 Configuration

This section describes how to configure SNMP on the switch. This function is used to configure SNMP settings, community name, trap host and public traps as well as the throttle of SNMP. A SNMP manager must pass the authentication by identifying both community names, then it can access the MIB information of the target device. So, both parties must have the same community name. Once completing the setting, click <Apply> button, the setting takes effect.

#### Web Interface

To configure SNMP in the web interface:

1. Click <Security>, <SNMP> and <Configuration>
2. Evoke SNMP state to enable or disable the SNMP function.
3. Specify the read and write community
4. Click <Apply>

Read Community	<input type="text" value="public"/>	
Write Community	<input type="text" value="private"/>	Enabled ▾

**Figure 12-2.1: The SNMP Configuration**

#### Parameter description

##### ● Read Community

Indicates the community read access string to permit access to SNMP agent. The allowed string length is 1 to 31, and the allowed content is the ASCII characters from 33 to 126.

The field is applicable only when SNMP version is SNMPv1 or SNMPv2c. If SNMP version is SNMPv3, the community string will be associated with SNMPv3 communities table. It provides more flexibility to configure security name than a SNMPv1 or SNMPv2c community string. In addition to community string, a particular range of source addresses can be used to restrict source subnet.

- **Write Community**

Indicates the community write access string to permit access to SNMP agent. The allowed string length is 1 to 31, and the allowed content is the ASCII characters from 33 to 126.

The field is applicable only when SNMP version is SNMPv1 or SNMPv2c. If SNMP version is SNMPv3, the community string will be associated with SNMPv3 communities table. It provides more flexibility to configure security name than a SNMPv1 or SNMPv2c community string. In addition to community string, a particular range of source addresses can be used to restrict source subnet.

**Buttons**

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

## 12-2.2 SNMPv3

### 12-2.2.1 Communities

The function is used to configure SNMPv3 communities. The community is unique. To create a new community account, please check <Add new community> button, and enter the account information then check <Save>. Max group number: 6

#### Web Interface

To configure the configure SNMP Communities in the web interface:

1. Click <Security>, <SNMP>, <SNMPv3> and <Communities>
2. Click <Add New Entry>
3. Specify the SNMP communities parameters
4. Click <Apply>
5. If you want to modify or clear the setting then click <Reset>.

SNMPv3 Community Configuration

Home > Security > SNMP > SNMPv3 > Communities

Delete	Community	Source IP	Source Mask
<a href="#">Add New Entry</a>			
<a href="#">Apply</a>	<a href="#">Reset</a>		

SNMPv3 Community Configuration

Home > Security > SNMP > SNMPv3 > Communities

Delete	Community	Source IP	Source Mask
<a href="#">Delete</a>	<input type="text"/>	<input type="text" value="0.0.0.0"/>	<input type="text" value="0"/>
<a href="#">Delete</a>	<input type="text"/>	<input type="text" value="0.0.0.0"/>	<input type="text" value="0"/>

[Add New Entry](#)

[Apply](#) [Reset](#)

**Figure 12-2.2.1: The SNMPv3 Communities Configuration**

#### Parameter description

- **Community**

Indicates the community access string to permit access to SNMPv3 agent. The allowed string length is 1 to 32, and the allowed content is ASCII characters from 33 to 126. The community string will be treated as security name and map a SNMPv1 or SNMPv2c community string.

- **Source IP**

Indicates the SNMP access source address. A particular range of source addresses can be used to restrict source subnet when combined with source mask.

- **Source Mask**

Indicates the SNMP access source address mask

#### Buttons

- **Add New Entry**

Click to add new entry. Specify the name and configure the new entry. Click "Save".

- **Delete**

Check to delete the entry. It will be deleted during the next save.

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

## 12-2.2.2 Users

The function is used to configure SNMPv3 user. The index key is UserName. To create a new UserName account, please check <Add New User> button, and enter the user information then check <Apply>. Max group number: 6

### Web Interface

To configure SNMP users in the web interface:

1. Click <Security>, <SNMP>, <SNMPv3> and <Users>
2. Click <Add New Entry>
3. Specify the SNMPv3 users parameter
4. Click <Apply>

SNMPv3 User Configuration

Home > Security > SNMP > SNMPv3 > Users

Delete	UserName	SecurityLevel	AuthenticationProtocol	AuthenticationPassword	PrivacyProtocol	PrivacyPassword
<a href="#">Delete</a>	<input type="text"/>	Auth, Priv	MD5	<input type="text"/>	DES	<input type="text"/>

[Add New Entry](#) [Apply](#) [Reset](#)

SNMPv3 User Configuration

Home > Security > SNMP > SNMPv3 > Users

Delete	UserName	SecurityLevel	AuthenticationProtocol	AuthenticationPassword	PrivacyProtocol	PrivacyPassword
<a href="#">Delete</a>	<input type="text"/>	Auth, Priv	MD5	<input type="text"/>	DES	<input type="text"/>

[Add New Entry](#) [Apply](#) [Reset](#)

**Figure 12-2.2.2: The SNMP Users Configuration**

### Parameter description

- **User Name :**

A string identifying the user name that this entry should belong to. The allowed string length is 1 to 31, and the allowed content is ASCII characters from 33 to 126.

- **Security Level**

Indicates the security model that this entry should belong to. Possible security models are:

**NoAuth, NoPriv:** No authentication and no privacy.

**Auth, NoPriv:** Authentication and no privacy.

**Auth, Priv:** Authentication and privacy.

The value of security level cannot be modified if entry already exists. That means it must first be ensured that the value is set correctly.

- **Authentication Protocol**

Indicates the authentication protocol that this entry should belong to. Possible authentication protocols are:

**MD5:** An optional flag to indicate that this user uses MD5 authentication protocol.

**SHA:** An optional flag to indicate that this user uses SHA authentication protocol.

The value of security level cannot be modified if entry already exists. That means must first ensure that the value is set correctly.

- **Authentication Password**

A string identifying the authentication password phrase. For MD5 authentication protocol, the allowed string length is 8 to 39. For SHA authentication protocol, the allowed string length is 8 to 39. The allowed content is ASCII characters from 33 to 126.

- **Privacy Protocol**

Indicates the privacy protocol that this entry should belong to. Possible privacy protocols are:

**DES:** An optional flag to indicate that this user uses DES authentication protocol.

**AES:** An optional flag to indicate that this user uses AES authentication protocol.

- **Privacy Password**

A string identifying the privacy password phrase. The allowed string length is 8 to 31, and the allowed content is ASCII characters from 33 to 126.

#### **Buttons**

- **Add New Entry**

Click to add new entry. Specify the name and configure the new entry. Click "Apply".

- **Delete**

Check to delete the entry. It will be deleted during the next save.

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

### 12-2.2.3 Groups

The function is used to configure SNMPv3 group. The entry index keys are "Security Model" and "Security Name". To create a new group account, please check <Add New Group> button, and enter the group information then check <Save>. Max group number:12.

#### Web Interface

To configure SNMP groups in the web interface:

1. Click <Security>, <SNMP>, <SNMPv3> and <Groups>
2. Click <Add New Entry>
3. Specify the SNMP group parameter
4. Click <Apply>

The screenshot displays the 'SNMPv3 Group Configuration' web interface in two states. The top state shows the initial configuration page with a table header containing 'Delete', 'Security Model', 'User Name', and 'Group Name'. Below the header is an 'Add New Entry' button, which is highlighted with a red rectangle and a red arrow pointing to the bottom state. The bottom state shows the configuration form after clicking 'Add New Entry', featuring a 'Delete' button, a 'Security Model' dropdown menu (currently set to 'v1'), a 'User Name' dropdown menu, and a 'Group Name' text input field. At the bottom of the form are 'Apply' and 'Reset' buttons. The breadcrumb navigation at the top right of both states reads: 'Home > Security > SNMP > SNMPv3 > Groups'.

**Figure 12-2.2.3: The SNMP Groups Configuration**

#### Parameter description

- **Security Model**

Indicates the security model that this entry should belong to. Possible security models are:

**v1**: Reserved for SNMPv1.

**v2c**: Reserved for SNMPv2c.

**usm**: User-based Security Model (USM).

- **Security Name**

A string identifying the security name that this entry should belong to. The allowed string length is 1 to 31, and the allowed content is ASCII characters from 33 to 126.

- **Group Name**

A string identifying the group name that this entry should belong to. The allowed string length is 1 to 32, and the allowed content is ASCII characters from 33 to 126.



**Buttons**

- **Add New Entry**

Click to add new entry. Specify the name and configure the new entry. Click "Apply".

- **Delete**

Check to delete the entry. It will be deleted during the next save.

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

### 12-2.2.4 Views

The function is used to configure SNMPv3 view. The entry index keys are „OID“ „Subtree“ and „View Name“. To create a new view account, please check <Add new view> button, and enter the view information then click <Apply>. Max group number: 12

Configure SNMPv3 view table on this page. The entry index keys are „View Name“ and „OID Subtree“.

#### Web Interface

To configure SNMP views in the web interface:

1. Click <Security>, <SNMP>, <SNMPv3> and <Views>
2. Click <Add New Entry>
3. Specify the SNMP View parameters
4. Click <Apply>
5. If you want to modify or clear the setting then click <Reset>.

SNMPv3 View Configuration

Home > Security > SNMP > SNMPv3 > Views

Delete	View Name	View Type	OID Subtree
<a href="#">Add New Entry</a>			
<a href="#">Apply</a> <a href="#">Reset</a>			

SNMPv3 View Configuration

Home > Security > SNMP > SNMPv3 > Views

Delete	View Name	View Type	OID Subtree
<a href="#">Delete</a>	<input type="text"/>	Included ▾	<input type="text"/>
<a href="#">Add New Entry</a>			
<a href="#">Apply</a> <a href="#">Reset</a>			

**Figure 12-2.2.4: The SNMP Views Configuration**

#### Parameter description

- **View Name**

A string identifying the view name that this entry should belong to. The allowed string length is 1 to 31, and the allowed content is ASCII characters from 33 to 126.

- **View Type**

Indicates the view type that this entry should belong to. Possible view types are:

**Included:** An optional flag to indicate that this view subtree should be included.

**Excluded:** An optional flag to indicate that this view subtree should be excluded.

In general, if a view entry's view type is 'excluded', there should be another view entry existing with view type as 'included' and it's OID subtree should overstep the 'excluded' view entry.

- **OID Subtree**

The OID defining the root of the subtree to add to the named view. The allowed OID length is 1 to 128. The allowed string content is digital number or asterisk(\*).

**Buttons**

- **Add New Entry**

Click to add new entry. Specify the name and configure the new entry. Click "Save".

- **Delete**

Check to delete the entry. It will be deleted during the next save.

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

### 12-2.2.5 Access

The function is used to configure SNMPv3 accesses. The Entry index key are Group Name, Security Model and Security level. To create a new access account, please check <Add new access> button, and enter the access information then check <Apply>. Max group number: 12.

#### Web Interface

To configure SNMP access in the web interface:

1. Click <Security>, <SNMP>, <SNMPv3> and <Accesses>
2. Click <Add New Entry>
3. Specify the SNMP access parameters.
4. Click <Apply>
5. If you want to modify or clear the setting then click <Reset>.

The figure shows two screenshots of the 'SNMPv3 Access Configuration' web interface. The top screenshot shows the 'Add New Entry' button highlighted with a red box and a red arrow pointing to the bottom screenshot. The bottom screenshot shows the configuration form with the following fields and buttons:

Delete	Group Name	Security Model	Security Level	Read View Name	Write View Name
<a href="#">Delete</a>	<input type="text"/>	<input type="text" value="any"/>	<input type="text" value="NoAuth, NoPriv"/>	<input type="text" value="None"/>	<input type="text" value="None"/>

Buttons: [Add New Entry](#), [Apply](#), [Reset](#)

**Figure 12-2.2.5: The SNMP Accesses Configuration**

#### Parameter description

- **Group Name**

A string identifying the group name that this entry should belong to. The allowed string length is 1 to 31, and the allowed content is ASCII characters from 33 to 126.

- **Security Model**

Indicates the security model that this entry should belong to. Possible security models are:

**Any:** Any security model accepted (v1|v2c|usm).

**v1:** Reserved for SNMPv1.

**v2c:** Reserved for SNMPv2c.

**usm:** User-based Security Model (USM).

- **Security Level**

Indicates the security model that this entry should belong to. Possible security models are:

**NoAuth, NoPriv:** No authentication and no privacy.

**Auth, NoPriv:** Authentication and no privacy.

**Auth, Priv:** Authentication and privacy.

- **Read View Name**

The name of the MIB view defining the MIB objects for which this request may request the current values. The allowed string length is 1 to 31, and the allowed content is ASCII characters from 33 to 126.

- **Write View Name**

The name of the MIB view defining the MIB objects for which this request may potentially set new values. The allowed string length is 1 to 31, and the allowed content is ASCII characters from 33 to 126.

**Buttons**

- **Add New Entry**

Click to add new entry. Specify the name and configure the new entry. Click "Apply".

- **Delete**

Check to delete the entry. It will be deleted during the next save.

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

## 12-2.3 Trap Event Severity

This page displays current trap event severity configurations. Trap event severity can also be configured here.

### Web Interface

To configure trap event severity in the web interface:

1. Click <Security>, <SNMP> and <Trap Event Severity>
2. Scroll to select the group name and severity level
3. Click the <Apply> to save the setting
4. If you want to cancel the setting then you need to click the <Reset> button. It will revert to previously saved values

Trap Event Severity Configuration Home > Security > SNMP > Trap Event Severity

Group Name	Severity Level	Syslog	Trap
ACCESS-MGMT	Info ▼	<input checked="" type="checkbox"/>	<input type="checkbox"/>
ACL	Info ▼	<input checked="" type="checkbox"/>	<input type="checkbox"/>
USER	Info ▼	<input checked="" type="checkbox"/>	<input type="checkbox"/>
WARM-START	Warning ▼	<input checked="" type="checkbox"/>	<input type="checkbox"/>

**Figure 12-2.3: The Trap Event Severity Configuration**

### Parameter description

- **Group Name**

The name identifying the severity group.

- **Severity Level**

Every group has an severity level. The following level types are supported:

- <0> **Emergency:** System is unusable.
- <1> **Alert:** Action must be taken immediately.
- <2> **Critical:** Critical conditions.
- <3> **Error:** Error conditions.
- <4> **Warning:** Warning conditions.
- <5> **Notice:** Normal but significant conditions.
- <6> **Information:** Information messages.
- <7> **Debug:** Debug-level messages.

- **Syslog**

Enable - Select this group name in syslog.

- **Trap**

Enable - Select this group name in trap.

### Buttons

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

## 12-3 RMON Configuration

An RMON implementation typically operates in a client/server model. Monitoring devices contain RMON software agents that collect information and analyze packets. These probes act as servers and the network management applications that communicate with them act as clients.

### 12-3.1 Statistics

#### 12-3.1.1 Configuration

Configure RMON statistics table on this page. The entry index key is **ID**.

#### Web Interface

To configure the RMON statistics in the web interface:

1. Click <Security>, <RMON>, <Statistics> and <Configuration>
2. Click <Add New Entry>
3. Specify the ID parameters.
4. Click <Apply>

RMON Statistics Configuration

Home > Security > RMON > Statistics > Configuration

Delete	ID	Data Source
<a href="#">Add New Entry</a>		
<a href="#">Apply</a>	<a href="#">Reset</a>	

RMON Statistics Configuration

Home > Security > RMON > Statistics > Configuration

Delete	ID	Data Source
<a href="#">Delete</a>	<input type="text"/>	.1.3.6.1.2.1.2.2.1.1. <input type="text"/>
<a href="#">Add New Entry</a>		
<a href="#">Apply</a>	<a href="#">Reset</a>	

**Figure 12-3.1.1: The RMON Statistics Configuration**

#### Parameter description

These parameters are displayed on the "RMON Statistics Configuration" page:

- **ID**

Indicates the index of the entry. The range is from 1 to 65535.

- **Data Source**

Indicates the port ID which wants to be monitored. If in stacking switch, the value must add 1000\*(switch ID-1), for example, if the port is switch 3 port 5, the value is 2005

**Buttons**

- **Delete**

Check to delete the entry. It will be deleted during the next save.

- **Add New Entry**

Click to add a new entry.

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.



### 12-3.1.2 Status

This section provides an overview of RMON statistics entries. Each page shows up to 99 entries from the statistics table, default being 20, selected through the "entries per page" input field. When first visited, the web page will show the first 20 entries from the beginning of the statistics table. The first displayed will be the one with the lowest ID found in the statistics table.

#### Web Interface

To display RMON statistics in the web interface:

1. Click <Security>, <RMON>, <Statistics> and <Status>
2. Specify the port which want to check
3. Checked <Auto-refresh>
4. Click <Refresh> to refresh the port detailed statistics.

Data Source ID (ifindex)	Drop	Octets	Pkts	Broadcast	Multicast	CRC Errors	Under size	Over size	Frag.	Jabb.	Coll.	Bytes	64	65	127	128	255	256	511	512	1023	1024	1588
No data available in table																							

**Figure 12-3.1.2.1: The RMON Statistics Status**

#### Parameter description

- **ID**  
Indicates the index of statistics entry.
- **Data Source(if Index)**  
The port ID which wants to be monitored.
- **Drop**  
The total number of events in which packets were dropped by the probe due to lack of resources.
- **Octets**  
The total number of octets of data (including those in bad packets) received on the network.
- **Pkts**  
The total number of packets (including bad packets, broadcast packets, and multicast packets) received.
- **Broad-cast**  
The total number of good packets received that were directed to the broadcast address.
- **Multi-cast**  
The total number of good packets received that were directed to a multicast address.

- **CRC Errors**

The total number of packets received that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, but had either a bad Frame Check Sequence (FCS) with an integral number of octets (FCS Error) or a bad FCS with a non-integral number of octets (Alignment Error).

- **Under-size**

The total number of packets received that were less than 64 octets.

- **Over-size :**

The total number of packets received that were longer than 1518 octets.

- **Frag.**

The number of frames which size is less than 64 octets received with invalid CRC.

- **Jabb.**

The number of frames which size is larger than 64 octets received with invalid CRC.

- **Coll.**

The best estimate of the total number of collisions on this Ethernet segment.

- **64 Bytes**

The total number of packets (including bad packets) received that were 64 octets in length.

- **65~127**

The total number of packets (including bad packets) received that were between 65 to 127 octets in length.

- **128~255**

The total number of packets (including bad packets) received that were between 128 to 255 octets in length.

- **256~511**

The total number of packets (including bad packets) received that were between 256 to 511 octets in length.

- **512~1023**

The total number of packets (including bad packets) received that were between 512 to 1023 octets in length.

- **1024~1588**

The total number of packets (including bad packets) received that were between 1024 to 1588 octets in length.

- **Search**

You can search for the information that you want to see.

- **Show entries**

You can choose how many items you want to show off.

**Buttons****Figure 12-3.1.2.2: The RMON Statistics Status buttons**

- **Auto-refresh**  
Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
- **Refresh**  
Click to refresh the page immediately.
- **Next**  
Updates the system log entries, turn to the next page.
- **Previous**  
Updates the system log entries, turn to the previous page.

## 12-3.2 History

### 12-3.2.1 Configuration

Configure RMON History table on this page. The entry index key is **ID**.

#### Web Interface

To configure the RMON history in the web interface:

1. Click <Security>, <RMON>, <History> and <Configuration>
2. Click <Add New Entry>
3. Specify the ID parameters.
4. Click <Apply>

The screenshot shows the 'RMON History Configuration' page in two states. The top state shows the 'Add New Entry' button highlighted with a red box and a red arrow pointing to it. The bottom state shows the same page after a new entry has been added, with a red arrow pointing to the 'Delete' button of the new entry.

Delete	ID	Data Source	Interval	Buckets	Buckets Granted
<a href="#">Add New Entry</a>					
<a href="#">Apply</a>	<a href="#">Reset</a>				

RMON History Configuration

Delete	ID	Data Source	Interval	Buckets	Buckets Granted
<a href="#">Delete</a>	<input type="text"/>	.1.3.6.1.2.1.2.2.1.1. <input type="text"/>	<input type="text" value="1800"/>	<input type="text" value="50"/>	
<a href="#">Add New Entry</a>					
<a href="#">Apply</a>	<a href="#">Reset</a>				

**Figure 12-3.2.1: The RMON History Configuration**

#### Parameter description

These parameters are displayed on the "RMON History Configuration" page:

- **ID**  
Indicates the index of the entry. The range is from 1 to 65535.
- **Data Source**  
Indicates the port ID which wants to be monitored. If in stacking switch, the value must add 1000\*(switch ID-1), for example, if the port is switch 3 port 5, the value is 2005
- **Interval**  
Indicates the interval in seconds for sampling the history statistics data. The range is from 1 to 3600, default value is 1800 seconds.
- **Buckets**  
Indicates the maximum data entries associated this history control entry stored in RMON. The range is from 1 to 3600, default value is 50.
- **Buckets Granted**  
The number of data shall be saved in the RMON.

**Buttons**

- **Delete**

Check to delete the entry. It will be deleted during the next save.

- **Add New Entry**

Click to add a new entry.

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

### 12-3.2.2 Status

This section provides an overview of RMON history entries. Each page shows up to 99 entries from the History table, default being 20, selected through the "entries per page" input field. When first visited, the web page will show the first 20 entries from the beginning of the history table. The first displayed will be the one with the lowest history index and sample index found in the history table.

#### Web Interface

To display a RMON History Status in the web interface:

1. Click <Security>, <RMON>, <History> and <Status>
2. Checked <Auto-refresh>
3. Click <Refresh> to refresh the port detailed statistics.

**Figure 12-3.2.2: The RMON History Status**

#### Parameter description

- **Index**

Indicates the index of History control entry.

- **Sample Index**

Indicates the index of the data entry associated with the control entry.

- **Sample Start**

The value of sysUpTime at the start of the interval over which this sample was measured.

- **Drop**

The total number of events in which packets were dropped by the probe due to lack of resources.

- **Octets**

The total number of octets of data (including those in bad packets) received on the network.

- **Pkts**

The total number of packets (including bad packets, broadcast packets, and multicast packets) received.

- **Broadcast**

The total number of good packets received that were directed to the broadcast address.

- **Multicast**

The total number of good packets received that were directed to a multicast address.

- **CRC Errors**

The total number of packets received that had a length (excluding framing bits, but including FCS octets) of between 64 and 1518 octets, inclusive, but had either a bad Frame Check Sequence (FCS) with an integral number of octets (FCS Error) or a bad FCS with a non-integral number of octets (Alignment Error).

- **Under-size**

The total number of packets received that were less than 64 octets.

- **Over-size**

The total number of packets received that were longer than 1518 octets.

- **Frag.**

The number of frames which size is less than 64 octets received with invalid CRC.

- **Jabb.**

The number of frames which size is larger than 64 octets received with invalid CRC.

- **Coll.**

The best estimate of the total number of collisions on this Ethernet segment.

- **Utilization**

The best estimate of the mean physical layer network utilization on this interface during this sampling interval, in hundredths of a percent.

- **Search**

You can search for the information that you want to see.

- **Show entries**

You can choose how many items you want to show off.

#### **Buttons**



**Figure 13-3.2.2: The RMON History Status buttons**

- **Auto-refresh**

Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.

- **Refresh**

Click to refresh the page immediately.

- **Next**

Updates the system log entries, turn to the next page.

- **Previous**

Updates the system log entries, turn to the previous page.

## 12-3.3 Alarm

### 12-3.3.1 Configuration

Configure RMON Alarm table on this page. The entry index key is **ID**.

#### Web Interface

To configure the RMON alarm in the web interface:

1. Click <Security>, <RMON>, <Alarm> and <Configuration>
2. <Click Add New Entry>
3. Specify the ID parameters
4. Click <Apply>

The screenshot shows the 'RMON Alert Configuration' web interface. At the top, there is a breadcrumb trail: Home > Security > RMON > Alarm > Configuration. Below this is a table with columns: Delete, ID, Interval, Variable, Sample Type, Value, Startup Alarm, Rising Threshold, Rising Index, Falling Threshold, and Falling Index. Below the table, there are buttons for 'Add New Entry', 'Apply', and 'Reset'. The 'Add New Entry' button is highlighted with a red box, and a red arrow points to it. Below the buttons, there is another instance of the 'RMON Alert Configuration' page, showing the same table and buttons, but with a sample entry filled in: ID is empty, Interval is 30, Variable is .1.3.6.1.2.1.2.2.1.0.0, Sample Type is Delta, Value is 0, Startup Alarm is RisingOrFalling, and the thresholds and indices are all 0.

**Figure 12-3.3.1: The RMON Alarm Configuration**

#### Parameter description

These parameters are displayed on the "RMON Alarm Configuration" page:

- **ID**

Indicates the index of the entry. The range is from 1 to 65535.

- **Interval**

Indicates the interval in seconds for sampling and comparing the rising and falling threshold. The range is from 1 to  $2^{31}-1$ .

- **Variable**

Indicates the particular variable to be sampled, the possible variables are:

**InOctets:** The total number of octets received on the interface, including framing characters.

**InUcastPkts:** The number of uni-cast packets delivered to a higher-layer protocol.

**InNUcastPkts:** The number of broad-cast and multi-cast packets delivered to a higher-layer protocol.

**InDiscards:** The number of inbound packets that are discarded even the packets are normal.

**InErrors:** The number of inbound packets that contained errors preventing them from being deliverable to a higher-layer protocol.



**InUnknownProtos:** The number of the inbound packets that were discarded because of the unknown or un-support protocol.

**OutOctets:** The number of octets transmitted out of the interface, including framing characters.

**OutUcastPkts:** The number of uni-cast packets that request to transmit.

**OutNUcastPkts:** The number of broad-cast and multi-cast packets that request to transmit.

**OutDiscards:** The number of outbound packets that are discarded.

**OutErrors:** The number of outbound packets that could not be transmitted because of errors.

**OutQLen:** The length of the output packet queue (in packets).

- **Sample Type**

The method of sampling the selected variable and calculating the value to be compared against the thresholds, possible sample types are:

**Absolute:** Get the sample directly.

**Delta:** Calculate the difference between samples (default).

- **Value**

The value of the statistic during the last sampling period.

- **Startup Alarm**

The method of sampling the selected variable and calculating the value to be compared against the thresholds, possible sample types are:

**RisingTrigger** alarm when the first value is larger than the rising threshold.

**FallingTrigger** alarm when the first value is less than the falling threshold.

**RisingOrFallingTrigger** alarm when the first value is larger than the rising threshold or less than the falling threshold (default).

- **Rising Threshold**

Rising threshold value (-2147483648-2147483647).

- **Rising Index**

Rising event index (1-65535).

- **Falling Threshold**

Falling threshold value (-2147483648-2147483647)

- **Falling Index**

Falling event index (1-65535).

**Buttons**

- **Delete**

Check to delete the entry. It will be deleted during the next save.

- **Add New Entry**

Click to add a new entry.

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

### 12-3.3.2 Status

This page provides an overview of RMON Alarm entries. Each page shows up to 99 entries from the alarm table, default being 20, selected through the "entries per page" input field. When first visited, the web page will show the first 20 entries from the beginning of the alarm table. The first displayed will be the one with the lowest ID found in the alarm table

#### Web Interface

To display a "RMON Alarm Status" in the web interface:

1. Click <Security>, <RMON>, <Alarm> and <Status>
2. Checked <Auto-refresh>
3. Click <Refresh> to refresh the port detailed statistics.

**Figure 12-3.3.2: RMON Alarm Status**

#### Parameter description

- **ID**  
Indicates the index of alarm control entry.
- **Interval**  
Indicates the interval in seconds for sampling and comparing the rising and falling threshold.
- **Variable**  
Indicates the particular variable to be sampled
- **Sample Type**  
The method of sampling the selected variable and calculating the value to be compared against the thresholds.
- **Value**  
The value of the statistic during the last sampling period.
- **Startup Alarm**  
The alarm that may be sent when this entry is first set to valid.
- **Rising Threshold**  
Rising threshold value.
- **Rising Index**  
Rising event index.
- **Falling Threshold**  
Falling threshold value.

- **Falling Index**

Falling event index.

- **Search**

You can search for the information that you want to see.

- **Show entries**

You can choose how many items you want to show off.

**Buttons**



**Figure 13-3.3.2: RMON Alarm Status buttons**

- **Auto-refresh**

Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.

- **Refresh**

Click to refresh the page immediately.

- **Next**

Updates the system log entries, turn to the next page.

- **Previous**

Updates the system log entries, turn to the previous page.

## 12-3.4 Event

### 12-3.4.1 Configuration

Configure RMON Event table on this page. The entry index key is **ID**.

#### Web Interface

To configure RMON events in the web interface:

1. Click <Security>, <RMON>, <Event> and <Configuration>
2. Click <Add New Entry>
3. Specify the ID parameters
4. Click <Apply>

RMON Event Configuration Home > Security > RMON > Event > Configuration

Delete	ID	Desc	Type	Community	Event Last Time
<a href="#">Add New Entry</a>					
<a href="#">Apply</a>					

RMON Event Configuration Home > Security > RMON > Event > Configuration

Delete	ID	Desc	Type	Community	Event Last Time
<a href="#">Delete</a>	<input type="text"/>	<input type="text"/>	none ▼	<input type="text"/>	
<a href="#">Add New Entry</a>					
<a href="#">Apply</a>					

**Figure 12-3.4.1: The RMON Event Configuration**

#### Parameter description

These parameters are displayed on the "RMON History Configuration" page:

- **ID**  
Indicates the index of the entry. The range is from 1 to 65535.
- **Desc**  
Indicates this event, the string length is from 0 to 127, default is a null string.
- **Type**  
Indicates the notification of the event, the possible types are:  
**None:** No SNMP log is created, no SNMP trap is sent.  
**Log:** Create SNMP log entry when the event is triggered.  
**Snmp trap:** Send SNMP trap when the event is triggered.  
**Log and trap:** Create SNMP log entry and sent SNMP trap when the event is triggered.
- **Community**  
Specify the community when trap is sent, the string length is from 0 to 127, default is "public".

- **Event Last Time**

Indicates the value of sysUpTime at the time this event entry last generated an event.

**Buttons**

- **Delete**

Check to delete the entry. It will be deleted during the next save.

- **Add New Entry**

Click to add a new entry.

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

### 12-3.4.2 Status

This page provides an overview of RMON event status entries. Each page shows up to 99 entries from the event table, default being 20, selected through the "entries per page" input field. When first visited, the web page will show the first 20 entries from the beginning of the event table. The first displayed will be the one with the lowest event index and log index found in the event table.

#### Web Interface

To display a RMON Event Status in the web interface:

1. Click <Security>, <RMON>, <Event> and <Status>
2. Checked <Auto-refresh>
3. Click <Refresh> to refresh the port detailed statistics
4. Specify port which wants to check.

**Figure 12-3.4.2: RMON Event Status**

#### Parameter description

- **Event Index**  
Indicates the index of the event entry.
- **Log Index**  
Indicates the index of the log entry.
- **LogTime**  
Indicates event log time
- **LogDescription**  
Indicates the event description.
- **Search**  
You can search for the information that you want to see.
- **Show entries**  
You can choose how many items you want to show off.

**Buttons****Figure 13-3.4.2: RMON Event Status buttons**

- **Auto-refresh**  
Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
- **Refresh**  
Click to refresh the page immediately.
- **Next**  
Updates the system log entries, turn to the next page.
- **Previous**  
Updates the system log entries, turn to the previous page.

12-4 IEEE 802.1X

12-4.1 Configuration

The section describes to configure the 802.1X parameters of the switch. The 802.1X can be employed to connect users to a variety of resources including Internet access, conference calls, printing documents on shared printers, or by simply logging on to the Internet.

Web Interface

- To configure the IEEE 802.1X in the web interface:
1. Click <Security>, <IEEE 802.1X> and <Configuration>
  2. Select <on> in the mode of IEEE 802.1X configuration
  3. Checked reauthentication enabled
  4. Set Reauthentication Period (Default is 3600 seconds)
  5. Select <Admin State> and displays <Port State>
  6. Click the <Apply> to save the setting.
  7. If you want to cancel the setting then you need to click the <Reset> button. It will revert to previously saved values.

802.1X Configuration

Home - Security - IEEE 802.1X - Configuration

Refresh

System Configuration

Mode	<div>off</div>
Reauthentication Enabled	<input type="checkbox"/>
Reauthentication Period	<div>3600</div> seconds
EAPOL Timeout	<div>30</div> seconds
Guest VLAN Enabled	<input type="checkbox"/>
Guest VLAN ID	<div>1</div>
Max. Reauth. Count	<div>2</div>
Allow Guest VLAN if EAPOL Seen	<input type="checkbox"/>

Port Configuration

Port	Admin State	Guest VLAN Enabled	Port State	Restart	
1	<div>Force Authorized</div>	<input type="checkbox"/>	Globally Disabled	<div>Reauthenticate</div>	<div>Reinitialize</div>
2	<div>Force Authorized</div>	<input type="checkbox"/>	Globally Disabled	<div>Reauthenticate</div>	<div>Reinitialize</div>
N-1	<div>Force Authorized</div>	<input type="checkbox"/>	Globally Disabled	<div>Reauthenticate</div>	<div>Reinitialize</div>
N	<div>Force Authorized</div>	<input type="checkbox"/>	Globally Disabled	<div>Reauthenticate</div>	<div>Reinitialize</div>

Apply

Reset

Figure 12-4.1: The IEEE 802.1X Configuration

Parameter description

System Configuration

- **Mode**  
Indicates if IEEE 802.1X is globally enabled or disabled on the switch. If globally disabled, all ports are allowed forwarding of frames.



- **Reauthentication Enabled**

If checked, successfully authenticated supplicants/clients are reauthenticated after the interval specified by the Reauthentication Period. Reauthentication for 802.1X-enabled ports can be used to detect if a new device is plugged into a switch port or if a supplicant is no longer attached.

For MAC-based ports, reauthentication is only useful if the RADIUS server configuration has changed. It does not involve communication between the switch and the client, and therefore doesn't imply that a client is still present on a port (see Aging Period below).

- **Reauthentication Period**

Determines the period, in seconds, after which a connected client must be reauthenticated. This is only active if the "Reauthentication Enabled" checkbox is checked. Valid values are in the range 1 to 3600 seconds.

- **EAPOL Timeout**

Determines the retransmission time of "Request Identity EAPOL" frames. Valid values are in the range 1 to 65535 secs. This has no effect for MAC-based ports.

- **Guest VLAN Enabled**

A Guest VLAN is a special VLAN - typically with limited network access - on which 802.1X-unaware clients are placed after a network administrator-defined timeout. The switch follows a set of rules for entering and leaving the Guest VLAN as listed below.

The "Guest VLAN Enabled" checkbox provides a quick way to globally enable/disable Guest VLAN functionality. When checked, the individual ports' ditto setting determines whether the port can be moved into Guest VLAN. When unchecked, the ability to move to the Guest VLAN is disabled on all ports.

- **Guest VLAN ID**

This is the value that a port's Port VLAN ID is set to if a port is moved into the Guest VLAN. It is only changeable if the Guest VLAN option is globally enabled. Valid values are in the range [1; 4094].

- **Max. Reauth. Count**

The number of times the switch transmits an "EAPOL Request Identity" frame without response before considering entering the Guest VLAN is adjusted with this setting. The value can only be changed if the Guest VLAN option is globally enabled. Valid values are in the range [1; 255].

- **Allow Guest VLAN if EAPOL Seen**

The switch remembers if an EAPOL frame has been received on the port for the life-time of the port. Once the switch considers whether to enter the Guest VLAN, it will first check if this option is enabled or disabled. If disabled (unchecked; default), the switch will only enter the Guest VLAN if an EAPOL frame has not been received on the port for the life-time of the port. If enabled (checked), the switch will consider entering the Guest VLAN even if an EAPOL frame has been received on the port for the life-time of the port.

The value can only be changed if the Guest VLAN option is globally enabled.

## **Port Configuration**

- **Port**

The port number for which the configuration below applies.

- **Admin State**

If 802.1X is globally enabled, this selection controls the port's authentication mode. The following modes are available:

### ■ **Force Authorized**

In this mode, the switch will send one "EAPOL Success" frame when the port link comes up, and any client on the port will be allowed network access without authentication.

### ■ **Force Unauthorized**

In this mode, the switch will send one "EAPOL Failure" frame when the port link comes up, and any client on the port will be disallowed network access.

### ■ **Port-based 802.1X :**

In the 802.1X-world, the user is called the supplicant, the switch is the authenticator, and the RADIUS server is the authentication server. The authenticator acts as the man-in-the-middle, forwarding requests and responses between the supplicant and the authentication server. Frames sent between the supplicant and the switch are special 802.1X frames, known as EAPOL (EAP Over LANs) frames. EAPOL frames encapsulate EAP PDUs (RFC3748). Frames sent between the switch and the RADIUS server are RADIUS packets. RADIUS packets also encapsulate EAP PDUs together with other attributes like the switch's IP address, name, and the supplicant's port number on the switch. EAP is very flexible, in that it allows for different authentication methods, like MD5-Challenge, PEAP, and TLS. The important thing is that the authenticator (the switch) doesn't need to know which authentication method the supplicant and the authentication server are using, or how many information exchange frames are needed for a particular method. The switch simply encapsulates the EAP part of the frame into the relevant type (EAPOL or RADIUS) and forwards it.

When authentication is complete, the RADIUS server sends a special packet containing a success or failure indication. Besides forwarding this decision to the supplicant, the switch uses it to open up or block traffic on the switch port connected to the supplicant



**NOTE:** Suppose two backend servers are enabled and that the server timeout is configured to X seconds (using the AAA configuration page), and suppose that the first server in the list is currently down (but not considered dead).

Now, if the supplicant retransmits "EAPOL Start" frames at a rate faster than X seconds, then it will never get authenticated, because the switch will cancel on-going backend authentication server requests whenever it receives a new "EAPOL Start" frame from the supplicant.

And since the server hasn't yet failed (because the X seconds haven't expired), the same server will be contacted upon the next backend authentication server request from the switch. This scenario will loop forever. Therefore, the server timeout should be smaller than the supplicant's "EAPOL Start" frame retransmission rate.

### ● **Guest VLAN Enabled**

When Guest VLAN is both globally enabled and enabled (checked) for a given port, the switch considers moving the port into the Guest VLAN according to the rules outlined below.

This option is only available for EAPOL-based modes, i.e.:

- Port-based 802.1X
- Single 802.1X
- Multi 802.1X

For trouble-shooting VLAN assignments, use the "Monitor→VLANs→VLAN Membership and VLAN Port" pages. These pages show which modules have (temporarily) overridden the current Port VLAN configuration.

**Guest VLAN Operation:** When a Guest VLAN enabled port's link comes up, the switch starts transmitting EAPOL Request Identity frames. If the number of transmissions of such frames exceeds Max. Reauth. Count and no EAPOL frames have been received in the meanwhile, the switch considers entering the Guest VLAN. The interval between transmission of EAPOL Request Identity frames is configured with EAPOL Timeout. If Allow Guest VLAN if EAPOL Seen is enabled, the port will now be placed in the Guest VLAN. If disabled, the switch will first check its history to see if an EAPOL frame has previously been received on the port (this history is cleared if the port link goes down or the port's Admin State is changed), and if not, the port will be placed in the Guest VLAN. Otherwise it will not move to the Guest VLAN, but continue transmitting EAPOL Request Identity frames at the rate given by EAPOL Timeout.

Once in the Guest VLAN, the port is considered authenticated, and all attached clients on the port are allowed access on this VLAN. The switch will not transmit an EAPOL Success frame when entering the Guest VLAN.

While in the Guest VLAN, the switch monitors the link for EAPOL frames, and if one such frame is received, the switch immediately takes the port out of the Guest VLAN and starts authenticating the supplicant according to the port mode. If an EAPOL frame is received, the port will never be able to go back into the Guest VLAN if the "Allow Guest VLAN if EAPOL Seen" is disabled.

- **Port State**

The current state of the port. It can undertake one of the following values:

Globally Disabled: IEEE 802.1X is globally disabled.

Link Down: IEEE 802.1X is globally enabled, but there is no link on the port.

Authorized: The port is in Force Authorized or a single-supplicant mode and the supplicant is authorized.

Unauthorized: The port is in Force Unauthorized or a single-supplicant mode and the supplicant is not successfully authorized by the RADIUS server.

X Auth/Y Unauth: The port is in a multi-supplicant mode. Currently X clients are authorized and Y are unauthorized.

- **Restart**

Two buttons are available for each row. The buttons are only enabled when authentication is globally enabled and the port's Admin State is in an EAPOL-based or MAC-based mode. Clicking these buttons will not cause settings changed on the page to take effect.

**Re-authenticate:** Schedules a re-authentication whenever the quiet-period of the port runs out (EAPOL-based authentication). For MAC-based authentication, re-authentication will be attempted immediately.

The button only has effect for successfully authenticated clients on the port and will not cause the clients to get temporarily unauthorized.

**Reinitialize:** Forces a re-initialization of the clients on the port and thereby a re-authentication immediately. The clients will transfer to the unauthorized state while the re-authentication is in progress.

## **Buttons**

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

## 12-4.2 Status

The section describes to show the each port 802.1X status information of the switch. The status includes Admin State, Port State, Last Source, Last ID and Port VLAN ID.

### Web Interface

To displays 802.1X status in the web interface:

1. Click <Security>, <IEEE 802.1X> and <Status>
2. Checked <Auto-refresh>
3. Click <Refresh> to refresh the port detailed statistics.
4. You can select which port that you want display 802.1X statistics.



Port	Admin State	Port State	Last Source	Last ID	Port VLAN ID
1	Force Authorized	Globally Disabled			0
2	Force Authorized	Globally Disabled			0
3	Force Authorized	Globally Disabled			0
N-2	Force Authorized	Globally Disabled			0
N-1	Force Authorized	Globally Disabled			0
N	Force Authorized	Globally Disabled			0

**Figure 12-4.2.1: The IEEE 802.1X Status**

### Parameter description

#### 802.1X Status

- **Port**

The switch port number. Click to navigate to detail 802.1X statistics for this port.

- **Admin State**

The port's current administrative state. Refer to "802.1X Admin State" for a description of possible values.

- **Port State**

The current state of the port. Refer to "802.1X Port State" for a description of the individual states.

- **Last Source**

The source MAC address carried in the most recently received EAPOL frame for EAPOL-based authentication, and the most recently received frame from a new client for MAC-based authentication.

- **Last ID**

The user name (supplicant identity) carried in the most recently received Response Identity EAPOL frame for EAPOL-based authentication, and the source MAC address from the most recently received frame from a new client for MAC-based authentication.

- **Port VLAN ID**

The VLAN ID that 802.1X has put the port in. The field is blank, if the Port VLAN

ID is not overridden by 802.1X.

If the VLAN ID is assigned by the RADIUS server, "(RADIUS-assigned)" is appended to the VLAN ID. Read more about RADIUS-assigned VLANs here.

If the port is moved to the Guest VLAN, "(Guest)" is appended to the VLAN ID. Read more about Guest VLANs here.

### Buttons



**Figure 12-4.2.2: The IEEE 802.1X Status buttons**

- **Auto-refresh**

Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.

- **Refresh**

Click to refresh the page immediately.

- **If you select port1 to display 802.1X Statistics.**



**Figure 12-4.2.3: The 802.1X Statistics Port 1**

### Parameter description

- **Port**

You can select which port that you want display 802.1X statistics.

- **Admin State**

The port's current administrative state. Refer to "802.1X Admin State" for a description of possible values.

- **Port State**

The current state of the port. Refer to "802.1X Port State" for a description of the individual states.

### Buttons



**Figure 12-4.2.4: The IEEE 802.1X Statistics Port buttons**

- **Auto-refresh**

Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.

- **Refresh**

Click to refresh the page.

- **Clear**

Clears the counters for the selected port.

## 12-5 IP Source Guard

The section describes to configure the IP Source Guard detail parameters of the switch. You could use the IP Source Guard configure to enable or disable at the port of the switch.

### 12-5.1 Configuration

This section describes how to configure IP Source Guard setting including:  
 Mode (enabled or disabled)  
 Maximum dynamic clients (0, 1, 2, unlimited)

#### Web Interface

To configure IP Source Guard in the web interface:

1. Click <Security>, <IP Source Guard> and <Configuration>
2. Select <On> in the mode of <IP Source Guard Configuration>
3. Select <Enabled> of the specific port in the mode of <Port Mode Configuration>
4. Select maximum dynamic clients (0, 1, 2, unlimited) of the specific port in the mode of <Port Mode Configuration>
5. Click <Apply>

IP Source Guard Configuration Home > Security > IP Source Guard > Configuration

Mode	<input type="radio"/> off	
------	---------------------------	--

Port Mode Configuration		
Port	Mode	Max Dynamic Clients
1	Disabled ▼	Unlimited ▼
2	Disabled ▼	Unlimited ▼
N-1	Disabled ▼	Unlimited ▼
N	Disabled ▼	Unlimited ▼

**Figure 12-5.1: The IP Source Guard Configuration**

#### Parameter description

- **Mode of IP Source Guard Configuration**

Enable or disable the IP Source Guard globally. All configured ACEs will be lost when the mode is enabled.

- **Port Mode Configuration**

Specify IP Source Guard is enabled on which ports. Only when both global mode and port mode on a port are enabled, IP Source Guard is enabled on this port.

- **Max Dynamic Clients**

Specify the maximum number of dynamic clients that can be learned on given port. This value can be 0, 1, 2 or unlimited. If the port mode is enabled and the value of max dynamic client is equal to 0, it means only allow the IP packets forwarding that are matched in static entries on the specific port.

**Buttons**

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

## 12-5.2 Static Table

The section describes to configure the "Static IP Source Guard Table" parameters of the switch. You could use this table to configure static entries.

### Web Interface

To configure a Static IP Source Guard Table in the web interface:

1. Click <Security>, <IP Source Guard> and <Static Table>
2. Click <Add New Entry>
3. Specify the port, IP address and MAC address in the entry.
4. Click <Apply>

Static IP Source Guard Table

Home > Security > IP Source Guard > Static Table

Delete	Port	IP Address	MAC Address
Add New Entry			
Apply Reset			

Static IP Source Guard Table

Home > Security > IP Source Guard > Static Table

Delete	Port	IP Address	MAC Address
Delete	1 ▼		

Add New Entry

Apply Reset

**Figure 12-5.2: The Static IP Source Guard Table**

### Parameter description

- **Port**  
The logical port for the settings.
- **IP Address**  
Allowed Source IP address.
- **MAC address**  
Allowed Source MAC address.

### Buttons

- **Add New Entry**  
Click to add a new entry to the Static IP Source Guard table. Specify the Port, VLAN ID, IP address, and IP Mask for the new entry. Click "Apply".
- **Delete**  
Check to delete the entry. It will be deleted during the next save.
- **Apply**  
Click to save changes.
- **Reset**  
Click to undo any changes made locally and revert to previously saved values.




## 12-5.3 Dynamic Table

Entries in the “Dynamic IP Source Guard Table” are shown on this page. The table is sorted first by port, then by IP address, and then by MAC address.

### Web Interface

To configure a “Dynamic IP Source Guard Table” in the web interface:

1. Click <Security>, <IP Source Guard> and <Dynamic Table>
2. Click <Refresh> to refresh the port detailed statistics or enable <Auto-refresh>
3. Specify the port, IP address and entries per page

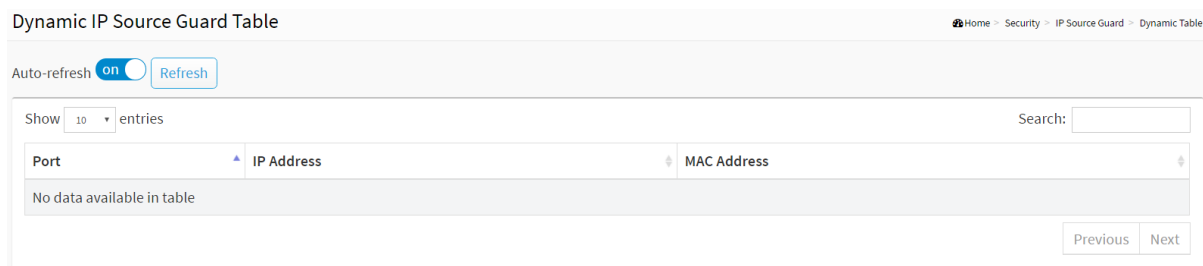


**Figure 12-5.3: The Dynamic IP Source Guard Table**

### Parameter description

- **Port**  
Switch port number for which the entries are displayed.
- **IP Address**  
User IP address of the entry.
- **MAC Address**  
Source MAC address.
- **Search**  
You can search for the information that you want to see.
- **Show entries**  
You can choose how many items you want to show off.

### Buttons

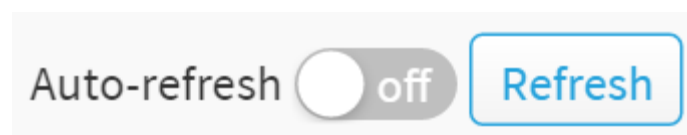

**Figure 12-5.3: The Dynamic IP Source Guard Table buttons**

- **Next**  
Updates the system log entries, turn to the next page.
- **Previous**  
Updates the system log entries, turn to the previous page.
- **Auto-refresh**  
Check this box to refresh the page automatically every 3 seconds.
- **Refresh**  
Click to refresh the page immediately.

## 12-6 ARP Inspection

The section describes to configure the ARP Inspection parameters of the switch. You could use the ARP Inspection configure to manage the ARP table.

### 12-6.1 Configuration

This section describes how to configure ARP Inspection setting including mode (on and off) and port (enabled or disabled).

#### Web Interface

To configure an ARP Inspection in the web interface:

1. Click <Security>, <ARP Inspection> and <Port Configuration>
2. Select <on> in the mode of <ARP Inspection Configuration>
3. Select <Enabled> of the specific port in the mode of <Port Mode Configuration>
4. Click <Apply>

ARP Inspection Configuration

Home > Security > ARP Inspection > Port Configuration

Mode: ☐ off

Port Mode Configuration

Port	Mode	Check VLAN	Log Type
1	<input type="checkbox"/>	<input type="checkbox"/>	None ▼
2	<input type="checkbox"/>	<input type="checkbox"/>	None ▼
N-1	<input type="checkbox"/>	<input type="checkbox"/>	None ▼
N	<input type="checkbox"/>	<input type="checkbox"/>	None ▼

Apply Reset

**Figure 12-6.1: The ARP Inspection Configuration**

#### Parameter description

- **Mode of ARP Inspection Configuration**

Enable or disable ARP Inspection globally.

- **Port Mode Configuration**

Specify ARP Inspection is enabled on which ports. Possible modes are:

**Enabled:** Enable ARP Inspection operation.

**Disabled:** Disable ARP Inspection operation.

If you want to inspect the VLAN configuration, you have to enable the setting of "Check VLAN". The default setting of "Check VLAN" is disabled. When the setting of "Check VLAN" is disabled, the log type of ARP Inspection will refer to the port setting. If the setting of "Check VLAN" is enabled, the log type of ARP Inspection will refer to the VLAN setting. Possible setting of "Check VLAN" are:

Enabled: Enable check VLAN operation.

Disabled: Disable check VLAN operation.

Only the global mode and port mode on a given port are enabled, and the setting of "Check VLAN" is disabled, the log type of ARP Inspection will refer to the port setting. There are four log types and possible types are:

**None:** Log nothing.

**Deny:** Log denied entries.

**Permit:** Log permitted entries.

**ALL:** Log all entries.

#### **Buttons**

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

## 12-6.2 VLAN Configuration

Specify ARP Inspection is enabled on which VLANs.

### Web Interface

To configure a VLAN Mode in the web interface:

1. Click <Security>, <ARP Inspection> and <VLAN Configuration>
2. Click <Add New Entry>
3. Specify the <VLAN ID> and <Log Type>
4. Click <Apply>

The screenshot shows the 'VLAN Mode Configuration' web interface. At the top, there is a breadcrumb trail: Home > Security > ARP Inspection > VLAN Configuration. Below this, there is a table with columns: Delete, VLAN ID, and Log Type. A red box highlights the 'Add New Entry' button, and a red arrow points from it to the configuration table below. The configuration table has a 'Delete' button, a 'VLAN ID' input field with the value '1', and a 'Log Type' dropdown menu with 'None' selected. Below the table, there are buttons for 'Add New Entry', 'Apply', and 'Reset'.

**Figure 12-6.2: The VLAN Mode Configuration**

### Parameter description

#### ● VLAN Mode Configuration

Specify ARP Inspection is enabled on which VLANs. First, you have to enable the port setting on Port mode configuration web page. Only when both global and port mode on a given port are enabled, ARP Inspection is enabled on this given port. Second, you can specify which VLAN will be inspected on VLAN mode configuration web page. The log type also can be configured on per VLAN setting.

Possible types are:

**None:** Log nothing.

**Deny:** Log denied entries.

**Permit:** Log permitted entries.

**ALL:** Log all entries.

#### Buttons

#### ● Add New Entry

Click to add a new VLAN to the ARP Inspection VLAN table.

#### ● Delete

Check to delete the entry. It will be deleted during the next save.

#### ● Apply

Click to save changes.

#### ● Reset

Click to undo any changes made locally and revert to previously saved values.

## 12-6.3 Static Table

The section describes to configure the "Static ARP Inspection Table" parameters of the switch. You could use this table to manage ARP entries.

### Web Interface

To configure a "Static ARP Inspection Table" in the web interface:

1. Click <Security>, <ARP Inspection> and <Static Table>
2. Click <Add New Entry>
3. Specify the port, VLAN ID, IP address, and MAC address in the entry.
4. Click <Apply>

Static ARP Inspection Table

Home > Security > ARP Inspection > Static Table

Delete	Port	VLAN ID	MAC Address	IP Address
Add New Entry				
Apply Reset				

Static ARP Inspection Table

Home > Security > ARP Inspection > Static Table

Delete	Port	VLAN ID	MAC Address	IP Address
Delete	1	1		
Add New Entry				
Apply Reset				

**Figure 12-6.3: The Static ARP Inspection Table**

### Parameter description

- **Port**  
The logical port for the settings.
- **VLAN ID**  
The vlan id for the settings.
- **MAC Address**  
Allowed Source MAC address in ARP request packets.
- **IP Address**  
Allowed Source IP address in ARP request packets.
- **Adding new entry**  
Click to add a new entry to the Static ARP Inspection table. Specify the Port, VLAN ID, MAC address, and IP address for the new entry. Click "Apply".

### Buttons

- **Add New Entry**  
Click to add a new VLAN to the ARP Inspection VLAN table.
- **Delete**  
Check to delete the entry. It will be deleted during the next save.
- **Apply**  
Click to save changes.
- **Reset**  
Click to undo any changes made locally and revert to previously saved values.

## 12-6.4 Dynamic Table

Entries in the Dynamic ARP Inspection Table are shown on this page. This table contains up to 1024 entries, and is sorted first by port, then by VLAN ID, then by MAC address, and then by IP address.

### Navigating the ARP Inspection Table


Each page shows up to many entries from the Dynamic ARP Inspection Table, default being 10, selected through the "entries per page" input field. When first visited, the web page will show the first 10 entries from the beginning of the table.

The "Search" input fields allow the user to select the starting point in the Dynamic ARP Inspection Table. It will update the displayed table starting from that or the closest next Dynamic ARP Inspection Table match.

This will use the last entry of the currently displayed table as a basis for the next lookup. When the end is reached the text "No more entries" is shown in the displayed table. Use the button to start over.

## Web Interface

To configure a Dynamic ARP Inspection Table in the web interface:

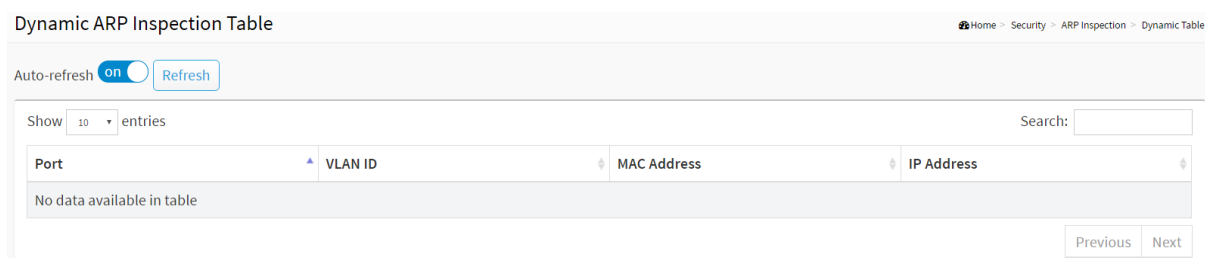


**Figure 12-6.4.1: The Dynamic ARP Inspection Table**

## Parameter description

### ARP Inspection Table Columns

- **Port**  
Switch Port Number for which the entries are displayed.
- **VLAN ID**  
VLAN-ID in which the ARP traffic is permitted.
- **MAC Address**  
User MAC address of the entry.
- **IP Address**  
User IP address of the entry.
- **Search**  
You can search for the information that you want to see.
- **Show entries**  
You can choose how many items you want to show up.

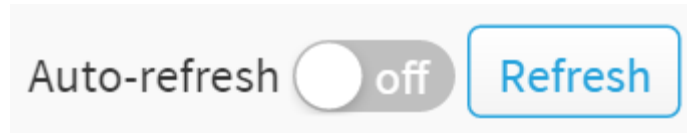**Buttons**

**Figure 12-6.4.2: The Dynamic ARP Inspection Table buttons**

- **Auto-refresh**  
Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.
- **Refresh**  
Click to refresh the page immediately.
- **Next**  
Updates the system log entries, turn to the next page.
- **Previous**  
Updates the system log entries, turn to the previous page.

## 12-7 Port Security

### 12-7.1 Configuration

This section shows you to configure the port security settings of the switch. You can use port security to restrict input to an interface by limiting and identifying MAC addresses.

#### Web Interface

To configure a port security in the web interface:

1. Click <Security>, <Port Security> and <Configuration>
2. Select <Enabled> in the mode of <System Configuration>
3. Set mode (enabled, disabled), limit, action (trap, shutdown, trap & shutdown) for each port.
4. Click the <Apply> to save the setting.
5. If you want to cancel the setting then you need to click the <Reset> button. It will revert to previously saved values.

Port Security Configuration Home > Security > Port Security > Configuration

---

System Configuration

Mode ☐ off

---

Port Configuration

Port	Mode	Limit	Action	State	Re-open
1	Disabled ▾	4	None ▾	Disabled	<a href="#">Reopen</a>
2	Disabled ▾	4	None ▾	Disabled	<a href="#">Reopen</a>
N-1	Disabled ▾	4	None ▾	Disabled	<a href="#">Reopen</a>
N	Disabled ▾	4	None ▾	Disabled	<a href="#">Reopen</a>

[Apply](#) [Reset](#)

**Figure 12-7.1: The Port Security Configuration**

#### Parameter description

##### System Configuration

- **Mode**

Indicates if limit control is globally enabled or disabled on the switch. If globally disabled, other modules may still use the underlying functionality, but limit checks and corresponding actions are disabled.

##### Port Configuration

The table has one row for each port on the selected switch and a number of columns, which are:

- **Port**

The port number to which the configuration below applies.

- **Mode**

Controls whether limit control is enabled on this port. Both this and the global mode must be set to enabled for limit control to be in effect. Notice that other



modules may still use the underlying port security features without enabling limit control on a given port.

- **Limit**

The maximum number of MAC addresses that can be secured on this port. This number cannot exceed 1024. If the limit is exceeded, the corresponding action is taken. The switch is "born" with a total number of MAC addresses from which all ports draw whenever a new MAC address is seen on a Port Security-enabled port. Since all ports draw from the same pool, it may happen that a configured maximum cannot be granted, if the remaining ports have already used all available MAC addresses.

- **Action**

If the limit is reached, the switch can take one of the following actions:

**None:** Do not allow more than Limit MAC addresses on the port, but take no further action.

**Trap:** If Limit + 1 MAC addresses is seen on the port, send an SNMP trap. If aging is disabled, only one SNMP trap will be sent, but with aging enabled, new SNMP traps will be sent every time the limit gets exceeded.

**Shutdown:** If Limit + 1 MAC addresses is seen on the port, shut down the port. This implies that all secured MAC addresses will be removed from the port, and no new address will be learned. Even if the link is physically disconnected and reconnected on the port (by disconnecting the cable), the port will remain shut down. There are three ways to re-open the port:

- 1) Boot the switch,
- 2) Disable and re-enable limit control on the port or the switch,
- 3) Click the "Reopen" button.

**Trap & Shutdown:** If Limit + 1 MAC addresses is seen on the port, both the "Trap" and the "Shutdown" actions described above will be taken.

- **State**

This column shows the current state of the port as seen from the limit control's point of view. The state takes one of four values:

**Disabled:** Limit control is either globally disabled or disabled on the port.

**Ready:** The limit is not yet reached. This can be shown for all actions.

**Limit Reached:** Indicates that the limit is reached on this port. This state can only be shown if "Action" is set to "none" or "Trap".

**Shutdown:** Indicates that the port is shut down by the limit control module. This state can only be shown if "Action" is set to "Shutdown" or "Trap&Shutdown".

- **Re-open Button**

If a port is shut down by this module, you may reopen it by clicking this button, which will only be enabled if this is the case. For other methods, refer to shut down in the action section.



**NOTE:** That clicking the reopen button causes the page to be refreshed, so non-committed changes will be lost

## Buttons

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

## 12-7.2 Status

This section shows the port security status. Port security is a module with no direct configuration. Configuration comes indirectly from other modules - the user modules. When a user module has enabled port security on a port, the port is set-up for software-based learning. In this mode, frames from unknown MAC addresses are passed on to the port security module, which in turn asks all user modules whether to allow this new MAC address to forward or block it. For a MAC address to be set in the forwarding state, all enabled user modules must unanimously agree on allowing the MAC address to forward. If only one chooses to block it, it will be blocked until that user module decides otherwise. The status page is divided into two sections - one with a legend of user modules and one with the actual port status.

### Web Interface

To display a port security status in the web interface:

1. Click <Security>, <Port Security> and <Status>
2. Checked <Auto-refresh>
3. Click <Refresh> to refresh the port detailed statistics.
4. Click the port number to see the status for this particular port.

Port Security Status Home > Security > Port Security > Status

Auto-refresh ☐ off ☒ on [Refresh](#)

Port	State	Mac Count
1	Disabled	-
2	Disabled	-
N-2	Disabled	-
N-1	Disabled	-
N	Disabled	-

**Figure 12-7.2.1: The Port Security Status**

### Parameter description

#### ● Port

The port number for which the status applies. Click the port number to see the status for this particular port.

#### ● State

Shows the current state of the port. It can take one of four values:

**Disabled:** No user modules are currently using the port security service.

**Ready:** The port security service is in use by at least one user module, and is awaiting frames from unknown MAC addresses to arrive.

**Limit Reached:** The port security service is enabled by at least the limit control user module, and that module has indicated that the limit is reached and no more MAC addresses should be taken in.

**Shutdown:** The port security service is enabled by at least the limit control user module, and that module has indicated that the limit is exceeded. No MAC addresses can be learned on the port until it is administratively re-opened on the limit control configuration Web-page.

- **MAC Count (Current Learned)**

The columns indicates the number of currently learned MAC addresses (forwarding as well as blocked) and the number of MAC addresses that can be learned on the port, respectively.

If no user modules are enabled on the port, the current column shows a dash (-).

**Buttons**

**Figure 12-7.2.2: The Port Security Status buttons**

- **Auto-refresh**

Check this box to refresh the page automatically. Automatic refresh occurs every 3 seconds.

- **Refresh**

Click to refresh the page immediately.

## 12-8 RADIUS

### 12-8.1 Configuration

#### Web Interface

To configure a RADIUS in the web interface:

1. Click <Security>, <RADIUS> and <Configuration>
2. Set timeout, retransmit, deadtime, key, NAS-IP-Address, NAS IPv6-Address and NAS-Identifier.
3. Click <Add New Entry>
4. Set hostname, auth port, acct port, timeout, retransmit and key.
5. Click the <Apply> to save the setting
6. If you want to cancel the setting then you need to click the <Reset> button. It will revert to previously saved values.

RADIUS Server Configuration Home > Security > RADIUS > Configuration

Global Configuration

Timeout	5 seconds
Retransmit	3 times
Deadtime	0 minutes
Key	
NAS-IP-Address	
NAS-IPv6-Address	
NAS-Identifier	

Server Configuration

Delete	Hostname	Auth Port	Acct Port	Timeout	Retransmit	Key
<a href="#">Add New Entry</a>						

[Apply](#) [Reset](#)

Server configuration

Delete	Hostname	Auth Port	Acct Port	Timeout	Retransmit	Key
<a href="#">Delete</a>						

[Add New Entry](#)

[Apply](#) [Reset](#)

**Figure 12-8.1: The RADIUS Configuration**

#### Parameter description

##### Global Configuration

These settings are common for all of the RADIUS servers.

- **Timeout**

Timeout is the number of seconds, in the range 1 to 1000, to wait for a reply from a RADIUS server before retransmitting the request.

- **Retransmit**

Retransmit is the number of times, in the range 1 to 1000, a RADIUS request is retransmitted to a server that is not responding. If the server has not responded after the last retransmit it is considered to be dead.

- **Deadtime**

Deadtime, which can be set to a number between 0 to 1440 minutes, is the period during which the switch will not send new requests to a server that has failed to respond to a previous request. This will stop the switch from continually

trying to contact a server that it has already determined as dead.  
Setting the deadtime to a value greater than 0 (zero) will enable this feature, but only if more than one server has been configured.

- **Key**  
The secret key - up to 63 characters long - shared between the RADIUS server and the switch.
- **NAS-IP-Address**  
The IPv4 address to be used as attribute 4 in RADIUS Access-Request packets. If this field is left blank, the IP address of the outgoing interface is used.
- **NAS-IPv6-Address**  
The IPv6 address to be used as attribute 95 in RADIUS Access-Request packets. If this field is left blank, the IP address of the outgoing interface is used.
- **NAS-Identifier**  
The identifier - up to 255 characters long - to be used as attribute 32 in RADIUS Access-Request packets. If this field is left blank, the NAS-Identifier is not included in the packet.

### Server Configuration

The table has one row for each RADIUS server and a number of columns:

- **Delete**  
To delete a RADIUS server entry, check this box. The entry will be deleted during the next save.
- **Hostname**  
The IP address or hostname of the RADIUS server.
- **Auth Port**  
The UDP port to use on the RADIUS server for authentication.
- **Acct Port**  
The UDP port to use on the RADIUS server for accounting.
- **Timeout**  
This optional setting overrides the global timeout value. Leaving it blank will use the global timeout value.
- **Retransmit**  
This optional setting overrides the global retransmit value. Leaving it blank will use the global retransmit value.
- **Key**  
This setting overrides the global key. Leaving it blank will use the global key.

### Buttons

- **Adding New Server Entry**  
Click to add a new RADIUS server. An empty row is added to the table, and the RADIUS server can be configured as needed. Up to 5 servers are supported. The button can be used to undo the addition of the new server.
- **Apply**  
Click to save changes.
- **Reset**  
Click to undo any changes made locally and revert to previously saved values.

## 12-8.2 Status

This section shows you an overview/detail of the RADIUS Authentication and Accounting servers' status to ensure the function is workable.

### Web Interface

To display a RADIUS status in the web interface:

1. Click <Security>, <RADIUS> and <Status>
2. Select server to display the detail statistics for a particular RADIUS

RADIUS Server Status		
Home > Security > RADIUS > Status		
RADIUS Authentication Server Status		
#	IP Address	Status
1	0.0.0.0:0	Disabled
2	0.0.0.0:0	Disabled
3	0.0.0.0:0	Disabled
4	0.0.0.0:0	Disabled
5	0.0.0.0:0	Disabled
RADIUS Accounting Server Status		
#	IP Address	Status
1	0.0.0.0:0	Disabled
2	0.0.0.0:0	Disabled
3	0.0.0.0:0	Disabled
4	0.0.0.0:0	Disabled
5	0.0.0.0:0	Disabled

**Figure 12-8.2.1: The RADIUS Server Status Overview**

### Parameter description

#### RADIUS Authentication Server Status

- **#**  
The RADIUS server number. Click to navigate to detailed statistics for this server.
- **IP Address**  
The IP address and UDP port number (in <IP Address>:<UDP Port> notation) of this server.
- **State**  
The current state of the server. This field takes one of the following values:
  - **Disabled**  
The server is disabled.
  - **Not Ready**  
The server is enabled, but IP communication is not yet up and running.
  - **Ready :**  
The server is enabled, IP communication is up and running, and the RADIUS module is ready to accept access attempts.

### ■ Dead (X seconds left)

Access attempts were made to this server, but it did not reply within the configured timeout. The server has temporarily been disabled, but will get re-enabled when the dead-time expires. The number of seconds left before this occurs is displayed in parentheses. This state is only reachable when more than one server is enabled.

## RADIUS Accounting Server Status

### ● #

The RADIUS server number. Click to navigate to detailed statistics for this server.

### ● IP Address

The IP address and UDP port number (in <IP Address>:<UDP Port> notation) of this server.

### ● State

The current state of the server. This field takes one of the following values:

#### ■ Disabled

The server is disabled.

#### ■ Not Ready:

The server is enabled, but IP communication is not yet up and running.

#### ■ Ready

The server is enabled, IP communication is up and running, and the RADIUS module is ready to accept accounting attempts.

#### ■ Dead (X seconds left)

Accounting attempts were made to this server, but it did not reply within the configured timeout. The server has temporarily been disabled, but will get re-enabled when the dead-time expires. The number of seconds left before this occurs is displayed in parentheses. This state is only reachable when more than one server is enabled.

### ● If you select Server#1 to display RADIUS Statistics

RADIUS Statistics

Auto-refresh

off

Refresh

Clear

server #1

Home > Security > RADIUS > Status

ADIUS Authentication Statistics for Server #1

Receive Packets		Transmit Packets	
Access Accepts	0	Access Requests	0
Access Rejects	0	Access Retransmissions	0
Access Challenges	0	Pending Requests	0
Malformed Access Responses	0	Timeouts	0
Bad Authenticators	0		
Unknown Types	0		
Packets Dropped	0		
Other Info			
IP Address	0.0.0.0:0		
State	Disabled		
Round-Trip Time	0 ms		

RADIUS Accounting Statistics for Server #1			
Receive Packets		Transmit Packets	
Responses	0	Requests	0
Malformed Responses	0	Retransmissions	0
Bad Authenticators	0	Pending Requests	0
Unknown Types	0	Timeouts	0
Packets Dropped	0		
Other Info			
IP Address	0.0.0.0:0		
State	Disabled		
Round-Trip Time	0 ms		

**Figure 12-8.2.2: The RADIUS Statistics Server****Parameter description**

- **server**

You can select which server that you want to display RADIUS.

**RADIUS Authentication Statistics for Server #1**

The statistics map closely to those specified in RFC4668 - RADIUS Authentication Client MIB.

Use the server select box to switch between the backend servers to show details for.

- **Access Accepts**

The number of RADIUS Access-Accept packets (valid or invalid) received from the server.

- **Access Rejects**

The number of RADIUS Access-Reject packets (valid or invalid) received from the server.

- **Access Challenges**

The number of RADIUS Access-Challenge packets (valid or invalid) received from the server.

- **Malformed Access Responses**

The number of malformed RADIUS Access-Response packets received from the server. Malformed packets include packets with an invalid length. Bad authenticators or Message Authenticator attributes or unknown types are not included as malformed access responses.

- **Bad Authenticators**

The number of RADIUS Access-Response packets containing invalid authenticators or Message Authenticator attributes received from the server.

- **Unknown Types**

The number of RADIUS packets that were received with unknown types from the server on the authentication port and dropped.

- **Packets Dropped**

The number of RADIUS packets that were received from the server on the authentication port and dropped for some other reason.

- **Access Requests**

The number of RADIUS Access-Request packets sent to the server. This does not include retransmissions.



- **Access Retransmissions**

The number of RADIUS Access-Request packets retransmitted to the RADIUS authentication server.

- **Pending Requests**

The number of RADIUS Access-Request packets destined for the server that have not yet timed out or received a response. This variable is incremented when an Access-Request is sent and decremented due to receipt of an Access-Accept, Access-Reject, Access-Challenge, timeout, or retransmission.

- **Timeouts**

The number of authentication timeouts to the server. After a timeout, the client may retry to the same server, send to a different server, or give up. A retry to the same server is counted as a retransmit as well as a timeout. A send to a different server is counted as a request as well as a timeout.

- **IP Address**

IP address and UDP port for the authentication server in question.

- **State**

Shows the state of the server. It takes one of the following values:

- **Disabled :**

The selected server is disabled.

- **Not Ready**

The server is enabled, but IP communication is not yet up and running.

- **Ready**

The server is enabled, IP communication is up and running, and the RADIUS module is ready to accept access attempts.

- **Dead (X seconds left)**

Access attempts were made to this server, but it did not reply within the configured timeout. The server has temporarily been disabled, but will get re-enabled when the dead-time expires. The number of seconds left before this occurs is displayed in parentheses. This state is only reachable when more than one server is enabled.

- **Round-Trip Time**

The time interval (measured in milliseconds) between the most recent Access-Reply/Access-Challenge and the Access-Request that matched it from the RADIUS authentication server. The granularity of this measurement is 100 ms. A value of 0 ms indicates that there hasn't been round-trip communication with the server yet.

### **RADIUS Accounting Statistics for Server #1**

The statistics map closely to those specified in RFC4670 - RADIUS Accounting Client MIB.

Use the server select box to switch between the backend servers to show details for.

- **Responses**

The number of RADIUS packets (valid or invalid) received from the server.

- **Malformed Responses**

The number of malformed RADIUS packets received from the server. Malformed packets include packets with an invalid length. Bad authenticators or unknown types are not included as malformed access responses.

- **Bad Authenticators**

The number of RADIUS packets containing invalid authenticators received from the server.

- **Unknown Types**

The number of RADIUS packets of unknown types that were received from the server on the accounting port.

- **Packets Dropped**

The number of RADIUS packets that were received from the server on the accounting port and dropped for some other reason.

- **Requests**

The number of RADIUS packets sent to the server. This does not include retransmissions

- **Retransmissions**

The number of RADIUS packets retransmitted to the RADIUS accounting server.

- **Pending Requests**

The number of RADIUS packets destined for the server that have not yet timed out or received a response. This variable is incremented when a request is sent and decremented due to receipt of a response, timeout, or retransmission.

- **Timeouts**

The number of accounting timeouts to the server. After a timeout, the client may retry to the same server, send to a different server, or give up. A retry to the same server is counted as a retransmit as well as a timeout. A send to a different server is counted as a request as well as a timeout.

- **IP Address**

IP address and UDP port for the accounting server in question.

- **State**

Shows the state of the server. It takes one of the following values:

- **Disabled**

The selected server is disabled.

- **Not Ready**

The server is enabled, but IP communication is not yet up and running.

- **Ready**

The server is enabled, IP communication is up and running, and the RADIUS module is ready to accept accounting attempts.

- **Dead (X seconds left)**

Accounting attempts were made to this server, but it did not reply within the configured timeout. The server has temporarily been disabled, but will get re-enabled when the dead-time expires. The number of seconds left before this occurs is displayed in parentheses. This state is only reachable when more than one server is enabled.

- **Round-Trip Time**

The time interval (measured in milliseconds) between the most recent response and the request that matched it from the RADIUS accounting server. The granularity of this measurement is 100 ms. A value of 0 ms indicates that there hasn't been round-trip communication with the server yet.

## 12-9 TACACS+

### 12-9.1 Configuration

#### Web Interface

To configure the TACACS+ servers in the web interface:

1. Click Security and TACACS+.
2. Click "Add New Entry".
3. Specify the Timeout, Deadtime, Key.
4. Specify the Hostname, Port, Timeout and Key in the server.
5. Click Apply.

The screenshot displays the 'TACACS+ Server Configuration' web interface. It is divided into two main sections, each containing a 'Global Configuration' form and a 'Server Configuration' table.

**Global Configuration:**

- Timeout:** 5 seconds
- Deadtime:** 0 minutes
- Key:** (empty text field)

**Server Configuration:**

The first instance of the 'Server Configuration' table has an 'Add New Entry' button highlighted with a red box. An arrow points from this button to the 'Add New Entry' button in the second instance of the table below it.

The second instance of the 'Server Configuration' table has the following structure:

Delete	Hostname	Port	Timeout	Key
<a href="#">Delete</a>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>

Below the table, there is an 'Add New Entry' button and 'Apply' and 'Reset' buttons.

**Figure 12-9.1: The TACACS+ Server Configuration**

#### Parameter description:

##### Global Configuration

These settings are common for all of the TACACS+ servers.

##### ● Timeout

Timeout is the number of seconds, in the range 1 to 1000, to wait for a reply from a TACACS+ server before it is considered to be dead.

- **Deadtime**

Deadtime, which can be set to a number between 0 to 1440 minutes, is the period during which the switch will not send new requests to a server that has failed to respond to a previous request. This will stop the switch from continually trying to contact a server that it has already determined as dead.

Setting the Deadtime to a value greater than 0 (zero) will enable this feature, but only if more than one server has been configured.

- **Key**

The secret key - up to 63 characters long - shared between the TACACS+ server and the switch.

### **Server Configuration**

The table has one row for each TACACS+ server and a number of columns, which are:

- **Delete**

To delete a TACACS+ server entry, check this box. The entry will be deleted during the next Save.

- **Hostname**

The IP address or hostname of the TACACS+ server.

- **Port**

The TCP port to use on the TACACS+ server for authentication.

- **Timeout:** This optional setting overrides the global timeout value. Leaving it blank will use the global timeout value.

- **Key**

This optional setting overrides the global key. Leaving it blank will use the global key.

### **Buttons**

- **Delete**

This button can be used to undo the addition of the new server.

- **Add New Server**

Click to add a new TACACS+ server. An empty row is added to the table, and the TACACS+ server can be configured as needed. Up to 5 servers are supported.

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

## 13. Access Control


### 13-1 Access Control List

The section describes how to configure Access Control List rule. An Access Control List (ACL) is a sequential list of permit or deny conditions that apply to IP addresses, MAC addresses, or other more specific criteria. This switch tests ingress packets against the conditions in an ACL one by one. A packet will be accepted as soon as it matches a permit rule, or dropped as soon as it matches a deny rule. If no rules match, the frame is accepted. Other actions can also be invoked when a matching packet is found, including rate limiting, copying matching packets to another port or to the system log, or shutting down a port.

This page shows the Access Control List (ACL), which is made up of the ACEs defined on this switch. Each row describes the ACE that is defined. The maximum number of ACEs is 256 on each switch. Click on the lowest plus sign to add a new ACE to the list. The reserved ACEs used for internal protocol, cannot be edited or deleted, the order sequence cannot be changed the priority is highest.

#### Web Interface

To configure Access Control List in the web interface:

1. Click <Access Control> and <Access Control List>
2. Click the  button to add a new ACL, or use the other ACL.
3. modification buttons to specify the editing action (i.e., edit, delete, or moving the relative position of entry in the list).
4. To specific the parameter of the ACE.
5. Click <Apply>
6. If you want to cancel the setting then you need to click the reset button. It will revert to previously saved values.
7. When editing an entry on the ACE configuration page, note that the items displayed depend on various selections, such as frame type and IP protocol type. Specify the relevant criteria to be matched for this rule, and set the actions to take when a rule is matched.

Access Control List Configuration Home > Access Control > Access Control List

Auto-refresh ☐ off Refresh Clear Remove All

ACE	Ingress Port	Frame Type	Action	Metering	Mirror	Counter	
							+

ACE Configuration Home > Access Control > Access Control List

Ingress Port All  
 Port 1  
 Port 2  
 Port 3  
 ~ ~ ~

Frame Type Any

Action Permit

Mirror Disabled

Metering Disabled

Counter Disabled

Apply Reset Cancel

**Figure 13-1.1: The Access Control List Configuration & ACE Configuration**

**Parameter description**

- **ACE :**

The ACE number for the Access Control List.

- **Ingress Port**

Indicates the ingress port of the ACE.

- **Frame Type**

Indicates the frame type of the ACE. Possible values are:

**Any:** The ACE will match any frame type.

**Ethernet Type:** The ACE will match Ethernet Type frames. Note that an Ethernet Type based ACE will not get matched by IP and ARP frames.

**IPv4:** The ACE will match all IPv4 frames.

- **Action**

Indicates the forwarding action of the ACE.

**Permit:** Frames matching the ACE may be forwarded and learned.

**Deny:** Frames matching the ACE are dropped.

**Shutdown:** Specify the port shut down operation of the ACE.

- **Metering**

Select metering mode, enable or disable.

- **Mirror**

Select mirror mode, enable or disable.

- **Counter**

The counter indicates the number of times the ACE was hit by a frame.

Modification Buttons

You can modify each ACE (Access Control Entry) in the table using the following buttons:



: Inserts a new ACE before the current row.



: Edits the ACE row.



: Deletes the ACE.



: The lowest plus sign adds a new entry at the bottom of the ACE listings.

**ACE Configuration**

An ACE consists of several parameters. These parameters vary according to the frame type that you select. First select the ingress port for the ACE, and then select the frame type. Different parameter options are displayed depending on the frame type selected.

A frame that hits this ACE matches the configuration that is defined here.

- **Ingress Port**

Select the ingress port for which this ACE applies.

All: The ACE applies to all port.

Port n: The ACE applies to this port number, where n is the number of the switch port.

## ● **Frame Type**

Select the frame type for this ACE. These frame types are mutually exclusive.

**Any:** Any frame can match this ACE.

**Ethernet Type:** Only Ethernet Type frames can match this ACE. The IEEE 802.3 describes the value of length/type field specifications to be greater than or equal to 1536 decimal (equal to 0600 hexadecimal).

**IPv4:** Only IPv4 frames can match this ACE. Notice the IPv4 frames won't match the ACE with ethernet type.

## ● **Action**

Specify the action to take with a frame that hits this ACE.

**Permit:** The frame that hits this ACE is granted permission for the ACE operation.

**Deny:** The frame that hits this ACE is dropped.

**Shutdown:** Specify the port shut down operation of the ACE.

Note: The shutdown feature only works when the packet length is less than 1518 (without VLAN tags).

## ● **Metering**

Select metering mode, enable or disable.

## ● **Mirror**

Select mirror mode, enable or disable.

## ● **Counter**

The counter indicates the number of times the ACE was hit by a frame.

### ■ **Select Frame Type to Ethernet Type:**

ACE Configuration Home > Access Control > Access Control List

Ingress Port	<div> <div>All</div> <div>Port 1</div> <div>Port 2</div> <div>Port 3</div> <div>...</div> </div>	Action	Permit
Frame Type	Ethernet Type	Mirror	Disabled
MAC Parameters		Metering	Disabled
SMAC Filter	Any	Counter	Disabled
DMAC Filter	Any	VLAN Parameters	
Ethernet Type Parameters		C-VLAN Tagged	Any
Ethernet Type Filter	Any	C-VLAN ID Filter	Any
		C-VLAN Tag Priority	Any
		S-VLAN Tagged	Any
		S-VLAN ID Filter	Any
		S-VLAN Tag Priority	Any

**Figure 13-1.2: The ACE Configuration (Select Frame Type to Ethernet Type)**

### **MAC Parameters**

## ● **SMAC Filter**

Specify the destination MAC filter for this ACE.

**Any:** No SMAC filter is specified. (SMAC filter status is "don't-care".)

**Specific:** If you want to filter a specific destination MAC address with this ACE, choose this value. A field for entering a SMAC value appears.

- **DMAC Filter**

Specify the destination MAC filter for this ACE.

**Any:** No DMAC filter is specified. (DMAC filter status is "don't-care".)

**MC:** Frame must be multicast.

**BC:** Frame must be broadcast.

**UC:** Frame must be unicast.

**Specific:** If you want to filter a specific destination MAC address with this ACE, choose this value. A field for entering a DMAC value appears.

### **Ethernet Type Parameters**

- **Ethernet Type Filter**

Specify the destination Ethernet Type filter for this ACE.

**Any:** No Ethernet Type filter is specified. (Ethernet Type filter status is "don't-care".)

**Specific:** If you want to filter a specific destination Ethernet Type with this ACE, choose this value. A field for entering an Ethernet Type value appears.

### **VLAN Parameters**

- **C-VLAN Tagged**

Indicates tag type. Possible values are:

**Any:** Match tagged and untagged frames.

**Enable:** Match C-VLAN tagged frames.

**Disable:** Disable C-VLAN tagged frames.

- **C-VLAN ID Filter**

Specify the C-VLAN ID filter for this ACE.

**Any:** No C-VLAN ID filter is specified. (C-VLAN ID filter status is "don't-care".)

**Specific:** If you want to filter a specific C-VLAN ID with this ACE, choose this value. A field for entering a C-VLAN ID number appears.

- **C-VLAN Tag Priority**

Specify the tag priority for this ACE. A frame that hits this ACE matches this tag priority. The allowed number range is 0 to 7 or range 0-1, 2-3, 4-5, 6-7, 0-3 and 4-7. The value "Any" means that no tag priority is specified (tag priority is "don't-care".)

- **S-VLAN Tagged**

Indicates tag type. Possible values are:

**Any:** Match tagged and untagged frames.

**Enable:** Match S-VLAN tagged frames.

**Disable:** Disable S-VLAN tagged frames.

- **S-VLAN ID Filter**

Specify the S-VLAN ID filter for this ACE.

**Any:** No S-VLAN ID filter is specified. (S-VLAN ID filter status is "don't-care".)

**Specific:** If you want to filter a specific S-VLAN ID with this ACE, choose this value. A field for entering the S-VLAN ID number appears.

- **S-VLAN Tag Priority**

Specify the tag priority for this ACE. A frame that hits this ACE matches this tag priority. The allowed number range is 0 to 7 or range 0-1, 2-3, 4-5, 6-7, 0-3 and 4-7. The value <Any> means that no tag priority is specified (tag priority is "don't-care".)

- Select Frame Type to IPv4:



ACE Configuration Home > Access Control > Access Control List

Ingress Port	<div style="border: 1px solid #ccc; padding: 2px;"> All  Port 1  Port 2  Port 3  ... </div>	Action	<div style="border: 1px solid #ccc; padding: 2px;"> Permit ▼ </div>
Frame Type	<div style="border: 1px solid #ccc; padding: 2px;"> IPv4 ▼ </div>	Mirror	<div style="border: 1px solid #ccc; padding: 2px;"> Disabled ▼ </div>
<div style="border: 1px solid #ccc; padding: 5px;"> IP Parameters </div>		Metering	<div style="border: 1px solid #ccc; padding: 2px;"> Disabled ▼ </div>
<div style="border: 1px solid #ccc; padding: 2px;"> IP Protocol Filter </div>		<div style="border: 1px solid #ccc; padding: 2px;"> Disabled ▼ </div>	
<div style="border: 1px solid #ccc; padding: 2px;"> IP Fragment </div>			
<div style="border: 1px solid #ccc; padding: 2px;"> ToS Filter </div>			
<div style="border: 1px solid #ccc; padding: 2px;"> SIP Filter </div>			
<div style="border: 1px solid #ccc; padding: 2px;"> DIP Filter </div>			

Apply
Reset
Cancel

**Figure 13-1.3: The ACE Configuration (Select Frame Type to Ipv4)**

### IP Parameters

- **IP Protocol Filter**

**Any:** The ACE will match any frame type.

**ICMP:** The ACE will match IPv4 frames with ICMP protocol.

**UDP:** The ACE will match IPv4 frames with UDP protocol.

**TCP:** The ACE will match IPv4 frames with TCP protocol.

**Other:** The ACE will match IPv4 frames, which are not ICMP/UDP/TCP.

- **IP Fragment**

IP Fragment IPv4 frame fragmented option: yes, no, any.

- **ToS Filter**

ToS Filter option: Any, DSCP, IP Precedence.

- **SIP Filter**

SIP Filte option: Any, host, network.

- **DIP Filter**

DIP Filte option: Any, host, network

### Buttons

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

- **Auto-refresh**

To evoke the auto-refresh to refresh the information automatically.

- **Refresh, clear, Remove All**

You can click them for refresh the ACL configuration or clear them by manual. Others remove all to clean up all ACL configurations on the table.

- **Cancel**

Return to the previous page.

# 14. Event Notification

## 14-1 SNMP Trap

Configure Trap on this page.

### Web Interface

To configure SNMP traps in the web interface:

1. Click <Event Notification> and <SNMP Trap>
2. Click any entry then you can create new SNMP trap on the switch.
3. Specify <Server IP Community> and <Severity Level>
4. Click <Apply>

SNMP Trap Hosts Configuration Home · Event Notification · SNMP Trap

Delete	No	Version	Server IP	Community Name	Severity Level
<input type="checkbox"/>	1				
<input type="checkbox"/>	2				
<input type="checkbox"/>	3				
<input type="checkbox"/>	4				
<input type="checkbox"/>	5				
<input type="checkbox"/>	6				

Edit SNMP Trap Host

Trap Host Settings

No	1
Trap Version	v2c
Server IP	<input type="text"/>
community	<input type="text"/>
Severity Level	Emerg ▼

**Figure 14-1: The SNMP Trap Configuration**

### Parameter description

- **No**  
The index of the trap host entry.
- **Version**  
Indicates the SNMP trap supported version. Possible versions are:  
SNMP v2c: Set SNMP trap supported version 2c.
- **Server IP**  
This is the IP of the trap host.

- **Community Name**

Indicates the community access string when sending SNMP trap packet. The allowed string length is 0 to 255, and the allowed content is ASCII characters from 33 to 126.

- **Severity Level**

Indicates what kind of message will send to trap server. Possible modes are:

**Emerg**: System is unusable.

**Alert**: Action must be taken immediately.

**Crit**: Critical conditions.

**Error**: Error conditions.

**Warning**: Warning conditions.

**Notice**: Normal but significant conditions.

**Info**: Information messages.

**Debug**: Debug-level messages.

#### **Buttons**

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.

## 15. Diagnostics

This chapter provides a set of basic system diagnosis. These includes ping, traceroute, cable diagnostics and port mirror.

### 15-1 Ping

This section allows you to issue ICMP Echo packets to troubleshoot Ipv4/6 connectivity issues.

#### Web Interface

To configure a PING in the web interface:

1. Click <Diagnostics> and <Ping>
2. Specify <IP Address>, <IP Version>, <Ping Length> and <Ping Count>
3. Click <Start>

The screenshot displays the 'ICMP Ping' web interface. At the top right, there is a breadcrumb trail: 'Home > Diagnostics > Ping'. The main configuration area contains four input fields: 'IP Address' with the value '0.0.0.0', 'IP Version' with a dropdown menu set to 'IPv4', 'Ping Length' with the value '56', and 'Ping Count' with the value '5'. Below these fields is a blue 'Start' button. The results section, which has a light gray background, shows the output of the ping command: 'PING 0.0.0.0 (0.0.0.0): 56 data bytes', followed by five lines of detailed results for sequence numbers 0 through 4, all showing a time of 0.000 ms. Below this, it says '--- 0.0.0.0 ping statistics ---', followed by '5 packets transmitted, 5 packets received, 0% packet loss' and 'round-trip min/avg/max = 0.000/0.000/0.000 ms'.

**Figure 15-1: The ICMP Ping**

#### Parameter description

- **IP Address**  
To specify the target IP address of the ping.
- **IP Version**  
To select the IP version.
- **Ping Length**  
The payload size of the ICMP packet. Values range from 1 to 1452 bytes.
- **Ping Count**  
The count of the ICMP packet. Values range from 1 to 60 times.
- **Start**  
Click the "Start" button to start to ping the target IP address.

## 15-2 Cable Diagnostics

This section shows how to run cable diagnostics for copper ports.

### Web Interface

To configure a cable diagnostics in the web interface:

1. Click <Diagnostics> and <Cable Diagnostics>
2. Specify port which want to check.
3. Click <Start>

Cable Diagnostics Home > Diagnostics > Cable Diagnostics

Port 1 Start

Cable Status								
Port	Pair A	Length A	Pair B	Length B	Pair C	Length C	Pair D	Length D
1	--	--	--	--	--	--	--	--
2	--	--	--	--	--	--	--	--
3	--	--	--	--	--	--	--	--
N-3	--	--	--	--	--	--	--	--
N-2	--	--	--	--	--	--	--	--

**Figure 15-2: The Cable Diagnostics**

### Parameter description

- **Port**

The port where you are requesting cable diagnostics.

#### Cable Status

- **Port**

Port number

- **Pair**

The status of the cable pair.

- **Length**

The length (in meters) of the cable pair.

#### Button

- **Start**

Start to cable diagnostics the port that you selected.

## 15-3 Traceroute

This page allows you to issue ICMP, TCP, or UDP packets to diagnose network connectivity issues.

### Web Interface

To start a traceroute in the web interface:

1. Click <Diagnostics> and <Traceroute>
2. Specify IP address, IP version, IP protocol and traceroute size
3. Click <Start>

The screenshot shows the 'Traceroute' web interface. At the top right, there is a breadcrumb trail: 'Home > Diagnostics > Traceroute'. The main area contains a form with the following fields and values:

Field	Value
IP Address	0.0.0.0
IP Version	IPv4
IP Protocol	ICMP
Wait Time	5
Maximum TTL	30
Probe Count	3

At the bottom left of the form is a 'Start' button.

**Figure 15-3: The Traceroute**

### Parameter description

- **IP Address**  
The destination IP address.
- **IP Version**  
To set the IP version what you want.
- **Protocol**  
The protocol (ICMP, UDP, TCP) packets to send.
- **Wait Time**  
Set the time (in seconds) to wait for a response to a probe (default 5.0 sec). Values range from 1 to 60.
- **Maximum TTL**  
Specifies the maximum number of hops (max time-to-live value) traceroute will probe. Values range from 1 to 255. The default is 30.
- **Probe Count**  
Sets the number of probe packets per hop. Values range from 1 to 10. The default is 3.

## 15-4 Mirror

You can mirror traffic from any source port to a target port for real-time analysis. You can then attach a logic analyzer or RMON probe to the target port and study the traffic crossing the source port in a completely unobtrusive manner.

Mirror configuration is to monitor the traffic of the network. For example, we assume that port A and port B are monitoring port and monitored port respectively, thus, the traffic received by port B will be copied to port A for monitoring.

### Web Interface

To configure the port mirror function in the web interface:

1. Click <Diagnostics> and <Mirroring>
2. Select the <Monitor Destination Port> (Mirror Port).
3. Select mode (disabled, enable, TX only and RX only) for each monitored port.
4. Click the <Apply> button to save the setting.
5. If you want to cancel the setting then you need to click the <Reset> button to revert to previously saved values.

Mirror Configuration Home > Diagnostics > Mirroring

Mode	<input type="checkbox"/> on <input checked="" type="checkbox"/> off
Monitor Destination Port	Port 1 ▼

Monitor Source Port Configuration

Port	Mode
1	Disabled ▼
2	Disabled ▼
N-2	Disabled ▼
N-1	Disabled ▼
N	Disabled ▼

**Figure 15-4: The Mirror Configuration**

### Parameter description

- **Mode**

Indicates the mirror mode operation. Possible modes are:

**on:** Enable mirror mode operation.

**off:** Disable mirror mode operation.

- **Monitor Destination Port**

Port to output the mirrored traffic. Also known as the mirror port. Frames from ports that have either source (rx) or destination (tx) mirroring enabled are mirrored on this port.

## **Mirror Source Port Configuration**

The following table is used for Rx and Tx enabling.

- **Port**

The logical port for the settings contained in the same row.

- **Mode**

Select mirror mode.

Rx only: Frames received on this port are mirrored on the mirror port. Frames transmitted are not mirrored.

Tx only: Frames transmitted on this port are mirrored on the mirror port. Frames received are not mirrored.

Disabled: neither frames transmitted nor frames received are mirrored.

Enabled Frames received and frames transmitted are mirrored on the mirror port.

### **Buttons**

- **Apply**

Click to save changes.

- **Reset**

Click to undo any changes made locally and revert to previously saved values.



## 16. Maintenance

This chapter describes the entire Maintenance configuration tasks including Save/Backup/Restore/Activate/Delete Restart Device, Factory Defaults, Firmware upgrade.

### 16-1 Configuration

The switch stores its configuration in a number of files in text format. The files are either virtual (RAM-based) or stored in flash on the switch.

There are three system files:

- **running-config:** A virtual file that represents the currently active configuration on the switch. This file is volatile.
- **startup-config:** The startup configuration for the switch, read at boot time.
- **default-config:** A read-only file with vendor-specific configuration. This file is read when the system is restored to default settings.


#### 16-1.1 Save startup-config

This copy running-config to startup-config, thereby ensuring that the current active configuration will be used at the next reboot.

#### Web Interface

To save running configuration in the web interface:

1. Click <Maintenance>, <Configuration> and <Save startup-config>
2. Click <Save Configuration>

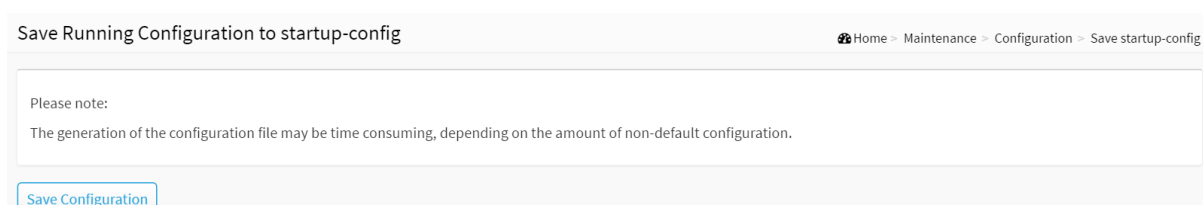

**Figure 16-1.1: The Save Startup Configuration**

#### Parameter description

##### Button

- **Save Configuration**

Click to save configuration, the running configuration will be written to flash memory for system boot up to load this startup configuration file.

## 16-1.2 Backup

This section describes how to export the switch configuration for maintenance needs. Any current configuration files will be exported as text format.

The configuration files on the switch can be backed up and saved on the station running the web browser.

It is possible to transfer any of the files on the switch to the web browser. Select the `running-config` may take a little while to complete, as the file must be prepared before backup.

### Web Interface

To backup configuration in the web interface:

1. Click `<Maintenance>`, `<Configuration>` and `<Backup>`
2. Click `<Backup>`

Backup Configuration File

Home > Maintenance > Configuration > Backup

Select configuration file for backup.

Please note: running-config may take a while to prepare for download.

File Name
<input type="radio"/> running-config
<input type="radio"/> default-config
<input type="radio"/> startup-config

Backup

**Figure 16-1.2: Backup**

### Parameter description

- **running-config**

A virtual file that represents the currently active configuration on the switch. This file is volatile.

- **startup-config**

The startup configuration for the switch, read at boot time.

- **default-config**

A read-only file with vendor-specific configuration. This file is read when the system is restored to default settings.

### Button

- **Backup**

Click the “Backup” button then the switch will start to transfer the configuration file to your workstation.

## 16-1.3 Restore

It is possible to import a file from the web browser to all the files on the switch, except default-config, which is read-only.

Select the source file to restore, and select the destination file on the target.

If the destination is running-config, the file will be applied to the switch configuration. This can be done in two ways:

- **Replace mode:** The current configuration is fully replaced with the configuration specified in the source file.
- **Merge mode:** The source file configuration is merged into running-config.

### Web Interface

To restore configuration in the web interface:

1. Click <Maintenance>, <Configuration> and <Restore>
2. Click <Restore>

Restore Configuration									
<div> <div>Source File</div> <div>Browse</div> </div>									
<div>Destination File</div> <table border="1"> <thead> <tr> <th>File Name</th> <th>Parameters</th> </tr> </thead> <tbody> <tr> <td><input type="radio"/> running-config</td> <td><input checked="" type="radio"/> Replace <input type="radio"/> Merge</td> </tr> <tr> <td><input type="radio"/> startup-config</td> <td></td> </tr> <tr> <td><input type="radio"/> Create new file</td> <td><input type="text"/></td> </tr> </tbody> </table>		File Name	Parameters	<input type="radio"/> running-config	<input checked="" type="radio"/> Replace <input type="radio"/> Merge	<input type="radio"/> startup-config		<input type="radio"/> Create new file	<input type="text"/>
File Name	Parameters								
<input type="radio"/> running-config	<input checked="" type="radio"/> Replace <input type="radio"/> Merge								
<input type="radio"/> startup-config									
<input type="radio"/> Create new file	<input type="text"/>								

**Figure 16-1.3: Restore Config**

### There are three system files:

1. **running-config:** A virtual file that represents the currently active configuration on the switch. This file is volatile.
2. **startup-config:** The startup configuration for the switch, read at boot time.

### Parameter description

#### Buttons

- **Browse**  
Click the "browse." button to search the configuration text file and filename
- **Restore**  
Click the "Restore" button to start transfer the source file to the destination file.

## 16-1.4 Activate config

It is possible to activate any of the configuration files present on the switch, except for running-config which represents the currently active configuration.

Select the file to activate and click. This will initiate the process of completely replacing the existing configuration with that of the selected file.

### Web Interface

To activate configuration in the web interface:

1. Click <Maintenance>, <Configuration> and <Activate config.>
2. Click <Activate Configuration File>

Activate	File Name
<input type="radio"/>	Peter_config
<input type="radio"/>	alan_config

[Activate Configuration File](#)

Figure 16-1.4: Configuration Activation

### System files

startup-config: The startup configuration for the switch, read at boot time.

### Parameter description

- **Activate**

You can select the file that you want to activate.

#### Buttons

- **Activate Configuration File**

Click the "Activate Configuration File" button then the selected file will be activated to be the switch's running configuration.

## 16-1.5 Delete config

It is possible to delete any of the writable files stored in flash, including startup-config. If this is done and the switch is rebooted without a prior save operation, this effectively resets the switch to default configuration.

### Web Interface

To delete configuration in the web interface:

1. Click <Maintenance>, <Configuration> and <Delete config.>
2. Click <Delete Configuration File>

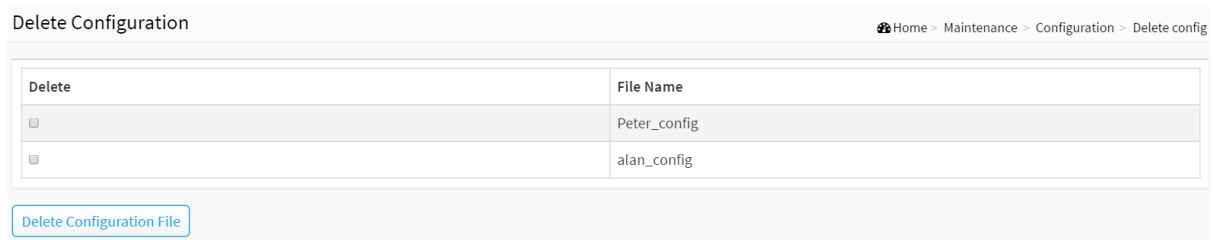


Figure 16-1.5: Delete Configuration

### Parameter description

- **Delete**

You can select the file that you want to delete.

### Buttons

- **Delete Configuration File**

Click the "Delete Configuration File" button then the selected file will be deleted.


## 16-2 Restart Device

This section describes how to restart the device for any maintenance needs. Any configuration files or scripts that you saved in the switch should still be available afterwards.

### Web Interface

To restart device in the web interface:

1. Click <Maintenance> and <Restart Device>
2. Click <Yes>

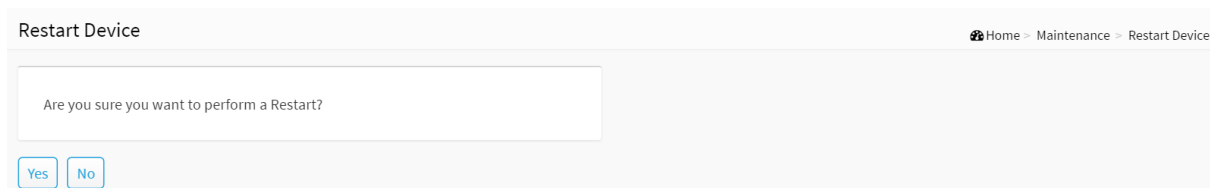

**Figure 16-2: Restart Device**

### Parameter description

#### Restart Device

You can restart the switch on this page. After restart, the switch will boot normally.

#### Buttons

- **Yes**  
Click to "Yes" then the device will restart.
- **No**  
Click to cancel the operation.


## 16-3 Factory Defaults

This section describes how to restore the switch configuration to factory defaults.

### Web Interface

To restore a factory defaults in the web interface:

1. Click <Maintenance> and <Factory Defaults>
2. You can choose if you want to keep ip configuration or not.
3. Click <Yes>

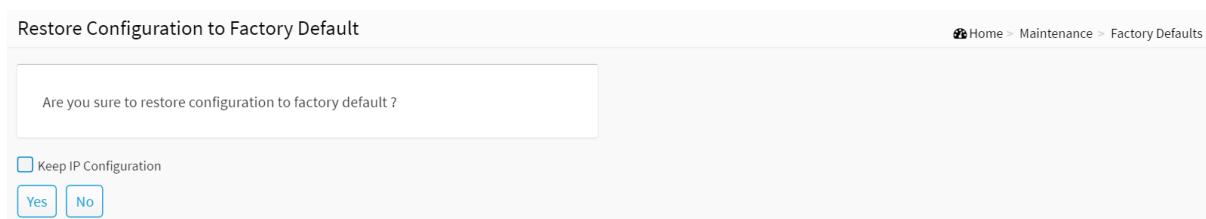

**Figure 16-3: The Factory Defaults**

### Parameter description

#### Buttons

- **Keep IP Configuration**

Choose if you want to keep ip configuration or not.

- **Yes**

Click to "Yes" button to reset the configuration to factory defaults.

- **No**

Click to cancel the operation.

## 16-4 Firmware

This section describes how to upgrade (or update) firmware.


### 16-4.1 Firmware Upgrade

This page facilitates an update of the firmware controlling the switch.

#### Web Interface

To update firmware of the device in the web interface:

1. Click <Maintenance>, <Firmware> and <Firmware Upgrade>
2. Click <Upload>

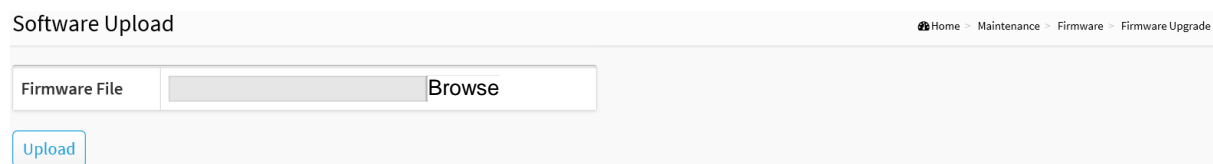

**Figure 16-4.1 The firmware upgrade**

#### Parameter description

- **Browse**

Click the “Browse” button to search the Firmware URL and filename.



## 16-4.2 Firmware Selection

This page provides information about the active and alternate (backup) firmware images in the device, and allows you to activate the alternate image. The web page displays two tables with information about the active and alternate firmware images.

### Web Interface

To show the firmware information or swap booting firmware in the web interface:

1. Click <Maintenance>, <Firmware> and <Firmware Selection>
2. Click <Activate Alternate Image>

Firmware Selection Home > Maintenance > Firmware > Firmware Selection

Active Image	
Partition	secondary
Version	v0.90.390
Date	2016-11-01 18:44:22 UTC

Alternate Image	
Partition	primary
Version	v0.90.383
Date	2016-10-29 02:53:46 UTC

**Figure 16-4.2 The Firmware selection**

### Image Information

- **Partition**

Indicate whether primary or secondary partition in the flash is used for storing the firmware image.

- **Version**

The version of the firmware image.

- **Date**

The date where the firmware was produced.

### Buttons

- **Activate Alternate Image**

Click to use the "Activate Alternate Image". This button may be disabled depending on system state.

- **Cancel**

Cancel activating the alternate image. Navigates away from this page.